

***DIVA LAN ISDN Modem
User's Guide***

DIVA LAN ISDN Modem is a trademark of Eicon Technology Corporation.

All other brand and product names are trademarks or registered trademarks of their respective owners.

Changes are periodically made to the information herein; these changes will be incorporated into new editions of the publication. Eicon Technology may make improvements and/or changes in the products and/or programs described in this publication at any time.

If you have comments on this manual or the products it describes, address them to:

Eicon Technology Corporation,
Attention: Corporate Publications,
9800 Cavendish Blvd.,
Montreal, Quebec, Canada,
H4M 2V9

Telephone: (514) 745-5500

Fax: (514) 745-5588

Eicon Technology may use or distribute whatever information you supply in any way it believes appropriate without incurring any obligations to you.

Copyright © 1998-1999 Eicon Technology Corporation. All rights reserved, including those to reproduce this publication or parts thereof in any form without permission in writing from Eicon Technology Corporation

Table of Contents

Chapter One:

Introduction	9
Introducing the DIVA LAN ISDN Modem	10
Creating your own LAN for resource sharing	10
Connecting to the Internet	10
Connecting to a corporate network	11
Creating a VPN	11
Attaching telephones and fax machines	11
Connecting more computers	12
Total network security	12
Compression for faster throughput	12
Bandwidth on-demand	13
Advanced ISDN tariff management	13
Advanced diagnostics	13
Unsupported configurations	13
Summary of features	13
Contacting customer services	14
World wide web	14

Chapter Two:

Getting Started	15
1. Installation overview	16
2. Prepare for installation	17
Verify your package contents	17
Verify the configuration of your computers	18
To use the advanced configuration options	18
3. Choose a connection protocol	19
Important ISDN concepts	19
ISDN channel usage	19
Choosing a connection protocol	20
Summary	21
4. Gather configuration information	22
Gather ISDN information	22
Gather Internet account information	22
Gather X.25 information	23
Gather V.120 information	23
5. Install the DIVA LAN ISDN Modem	24
6. Install Modem Monitor (Windows 95/98/NT4)	26
7. Connecting a non-Windows computer to the DIVA LAN ISDN Modem	29
8. Configuring the Internet connection	31
To configure the Internet connection	31
9. Using your DIVA LAN ISDN Modem	34
How long will the line stay connected?	34
Registering your DIVA LAN ISDN Modem	34
What's next?	34

Chapter Three:

Using Modem Monitor	35
Starting Modem Monitor	36
Start menu program group	36
Properties dialog box	37
Utilities dialog box	38
Options dialog box	38
Enable Time of Day Server	39
Status Viewer	39

Chapter Four:

The Web-based Configuration Interface	41
Starting the web-based configuration interface	42
To start the web-based configuration interface	42
Saving configuration settings	43
Getting help	43
General settings and connection profiles	43
General settings	43
Connection profile settings	43
Editing the ISP profile	44
Editing LAN settings	45
Saving and restoring configuration files	46
To save/restore configuration settings	46
Viewing status information	46
System status	47
Front panel display	47
Obtaining statistics	47
Upgrading the DIVA LAN ISDN Modem firmware	48
Resetting to factory defaults	49

Chapter Five:

Minimizing ISDN Charges	50
The Cost Control page	51
Idle timer	51
Data call thresholds	52
ISDN billing intervals	52
Configuring BACP	53
Configuring AO/DI	54
X.25 on the D-channel	56
Setting ISDN active intervals	58
Spoofing NetBIOS services	59
Data compression	60
Manual dialing	61
Restricting analog calls	62
Data over voice	63

Traffic filtering	64
<hr/>	
Chapter Six:	
Security	65
Security features	66
System password	67
Automatic log out	67
Network address translation	68
Security benefits	68
NAT static mappings	68
Remote management	70
Incoming data calls	72
Call screening	74
Call authentication	74
To set up call authentication	75
Callback	76
Callback modes	76
Callback options	76
Delay before host calls back	77
Timeout waiting for callback	77
To set up callback	77
Manual dialing	77
Custom security features	78
<hr/>	
Chapter Seven:	
Setting up the Phone Ports	79
Assigning phone numbers	80
Single number	80
Multiple numbers	80
Assigning phone numbers using the Phone Line Wizard	81
Assigning phone numbers manually	81
Configuring phone numbers for data calls	82
Connecting modems and fax machines	83
Connecting multiple analog devices	83
Call bumping	84
How it works	84
Requirements	84
To enable call bumping	84
Restricting analog calls	85
Supplementary services	86
Call Hold	87
Call Waiting	87
Calling Line Identity on Call Waiting	89
Calling Line Identity Presentation	89
Calling Line Identity Restriction (CLIR)	89
Call Forwarding	90
Malicious Caller Identification	91
Call redirection between analog ports	91
Three-party Conference Call	91

Terminal Portability	92
----------------------------	----

Chapter Eight:

Connecting to a Corporate Network.....	93
Overview	94
1. Gather information	95
Gather X.25 information	95
2. Configure the Corporate profile	96
Using the corporate connection	100
How long will the line stay connected?	100
Support for Microsoft Network Neighborhood	100
NetBIOS name resolution	100
Timeouts	100
Dynamic IP addressing	100
What's next?	100

Chapter Nine:

Advanced Installations	102
Connection retries	103
Installing on an existing LAN	104
Using Modem Monitor	104
Manual installation	105
Adjusting configuration settings on the LAN	106
Connecting more than four computers	107
Creating a virtual private network	108
To create a VPN	108
Connecting to the VPN	109
Concurrent Internet and Intranet connections	110
Selecting a connections protocol	110
Defining routes	110
Installation and configuration procedure	110
IP routes	111
About IP addresses	111
Why routes are needed	114
The Routing Information Protocol (RIP)	117
Defining routes for the DIVA LAN ISDN Modem	117
IP filters	119
How filtering works	119
Default filters	120
To define a filter	120
IP filtering examples	123
Making a V.120 connection	127
SecurID support	129

Chapter Ten:

Other Configuration Tools.....	131
Configuration options	132
Local configuration	132
Remote configuration	132
Web interface	133

TFTP interface	133
Enabling TFTP server support	133
Uploading/downloading configuration files	134
Loading new firmware via TFTP	135
DTMF interface	135
How it works	135
Commands	135
Command line interface (CLI)	136
Establishing a Telnet connection via IP	136
Establishing a serial connection	137
Using the command line interface	137
About configuration context	138
Connection profiles	138
Default profiles	138
Command line reference	138
Loading firmware with the CLI	138
<hr/>	
Appendix A:	
TCP/IP Configuration	140
Installing and configuring TCP/IP for Windows 95 / 98	141
Installing TCP/IP	141
Configuring TCP/IP	141
Installing TCP/IP for Windows NT	144
Configuring TCP/IP on an iMac	145
<hr/>	
Appendix B:	
Technical Information	146
DIVA LAN ISDN Modem indicator lights	147
DIVA LAN ISDN Modem connectors	149
Resetting the DIVA LAN ISDN Modem	150
Resetting operational settings	150
Resetting to factory defaults	150
Termination	151
Determining termination requirements	151
Installing the resistor	151
<hr/>	
Appendix C:	
Command Line Reference	152
Notational Conventions	153
Commands	154
AO/DI	155
Callback	155
Call screening	156
Call thresholds	157
DHCP	157
DNS	160
Ethernet	160
General	161

IP filters	163
IP NAT	166
IP routing	167
IP various	167
ISDN	169
ISDN Access Time	172
LAPD	173
Logging and Mail Trace	173
MLPPP	175
Phone	176
PPP	178
Profiles	181
Q.931	182
RIP	182
SNMP	183
TCP	184
TFTP	184
Time Protocol	185
UDP	185
V.120	185
V.120 Scripting	187
X.25	188

Appendix D:	
Regulatory Information.....	190

Chapter One

Introduction

Eicon Technology's DIVA LAN ISDN Modem provides affordable workgroup computing for branch offices, small businesses, and home offices.

This chapter summarizes the features of the DIVA LAN ISDN Modem and shows how it can be used in a variety of applications.


Introducing the DIVA LAN ISDN Modem

The DIVA LAN ISDN Modem is a powerful networking solution for SOHO (small office/home office) and branch office users. It creates a complete networking, phone, fax, and data communications system in one box. The DIVA LAN ISDN Modem is easy to install, use, and maintain, without the need for technical support from the remote, corporate office.

The DIVA LAN ISDN Modem can be used in a variety of applications. This section presents a brief overview of some of the more common applications, and their features.

Creating your own LAN for resource sharing


The DIVA LAN ISDN Modem has a built-in 10 Mbps Ethernet hub with four ports. By connecting computers (or other devices, such as printers) to these ports, they become part of a LAN (local area network), and can share data and resources with each other.

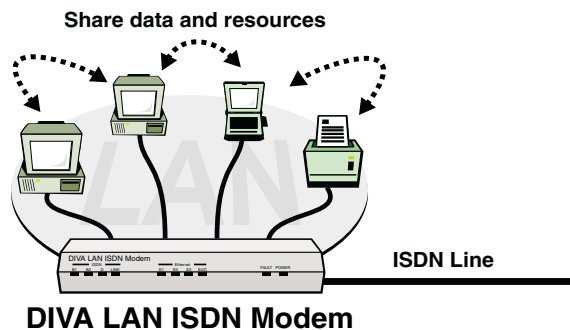

Connecting three computers and a network printer to the DIVA LAN ISDN Modem.

Connecting to the Internet


In this application, the DIVA LAN ISDN Modem enables you to connect one or more computers to the Internet for e-mail, web surfing, and file transfers.

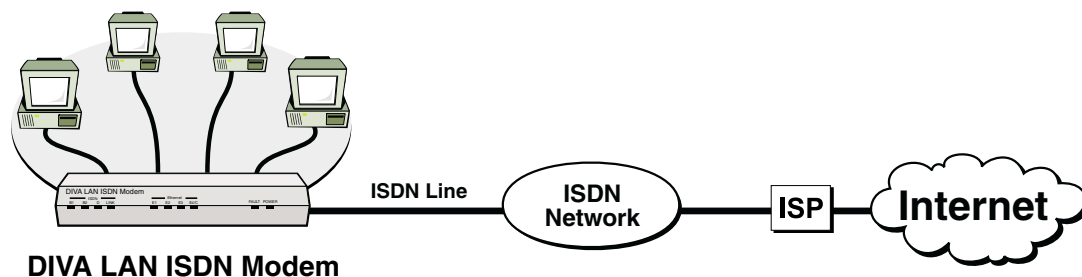

How it works: You connect the DIVA LAN ISDN Modem to an ISDN line (which is part of the telephone network). You also set up an account with an ISP (Internet Service Provider), obtaining the necessary phone numbers, user name, and password. Once the DIVA LAN ISDN Modem is configured with this information, it automatically calls the ISP and uses its services to send and receive data on the Internet.

Connecting to a corporate network

This option enables you to connect one or more computers to your corporate LAN for file sharing, e-mail, data transfer. Generally, this type of connection takes place via a direct, dial-up link with the corporate LAN.

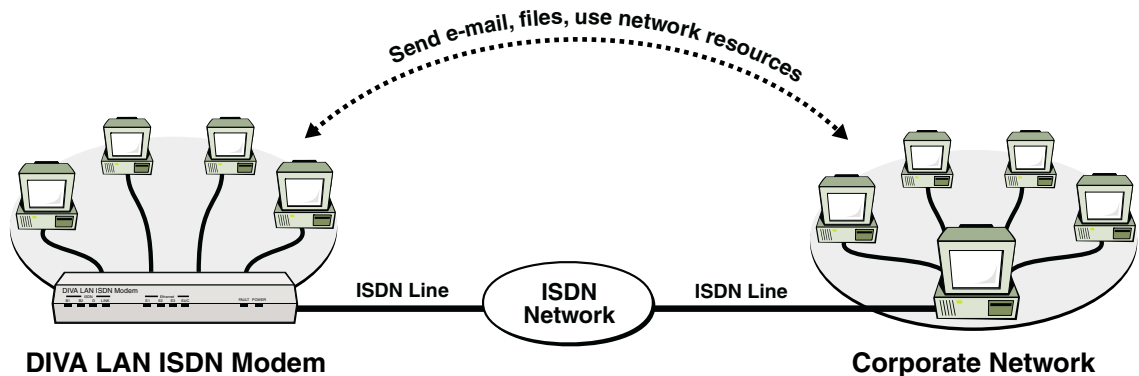


How it works: You connect the DIVA LAN ISDN Modem to an ISDN line (which is part of the telephone network). You also contact the corporate network and obtain its ISDN phone number and associated user names and passwords. Once the DIVA LAN ISDN Modem is configured with this information, it automatically calls the remote site to send data to it, for example, when a local users sends e-mail, or shares folders with Windows Network Neighborhood.

Note You cannot connect to a corporate network if it is also using a DIVA LAN ISDN Modem.

Creating a VPN

Connect branch offices and telecommuters into an enterprise-wide Virtual Private Network (VPN) over the Internet. This eliminates the long-distance charges, network management problems, and security responsibilities associated with traditional WANs.

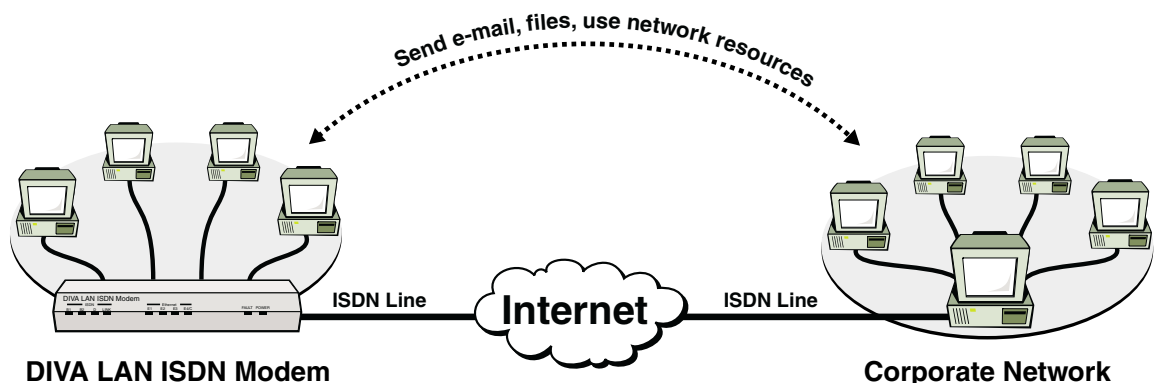


Note You cannot connect to a corporate network if it is also using a DIVA LAN ISDN Modem.

Attaching telephones and fax machines


The DIVA LAN ISDN Modem is available in a version that features two analog ports for the connection of telephones, fax machines, and analog modems. The DIVA LAN ISDN Modem takes advantage of the flexibility of ISDN to enable you to make or receive phone calls or faxes, while at the same time connecting to the Internet or a corporate network with your computers. This can eliminate the need to install additional analog phone lines.

The DIVA LAN ISDN Modem supports caller ID, call transfer, call waiting, call holding, call forwarding, and 3-way conference call features.

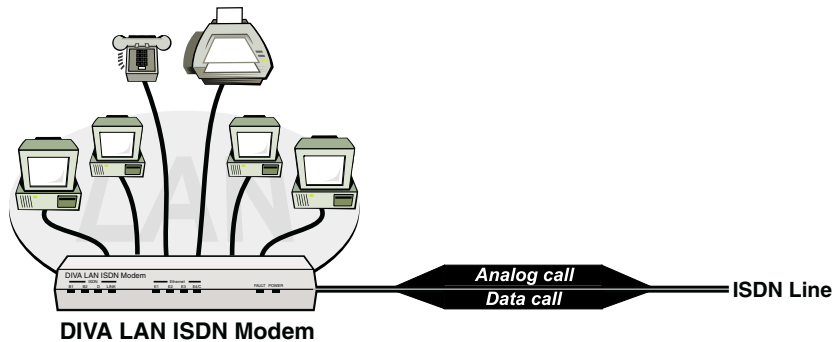

Connecting more computers

By attaching a DIVA LAN ISDN Modem to an Ethernet hub from other manufacturers, you can interconnect more than four computers (or other devices), enabling them to share the ISDN connection provided by the DIVA LAN ISDN Modem.

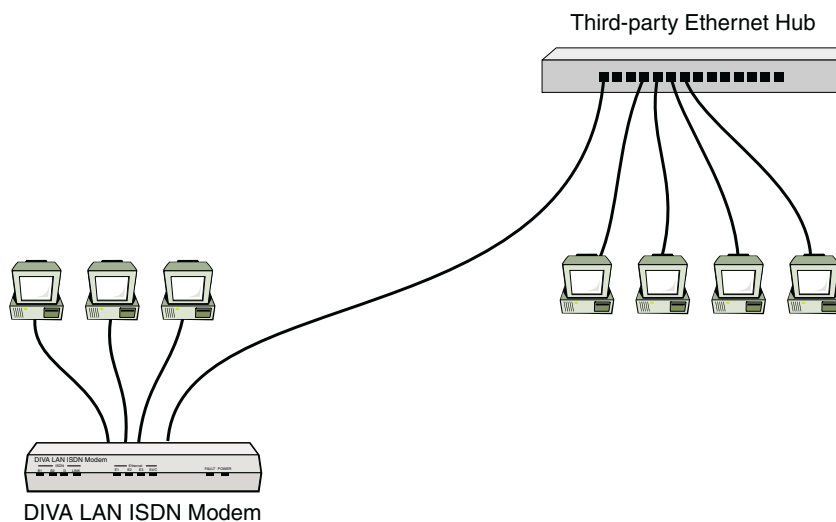

Connecting the DIVA LAN ISDN Modem to a third-party Ethernet hub.

In this example, all computers can share the ISDN link to exchange data, send e-mail, or surf the Web. There is no need for multiple modems, phone lines, or ISP accounts.

Note *Two DIVA LAN ISDN Modems cannot be connected in this manner.*

Total network security

The Network Address Translation (NAT) feature keeps local IP addresses hidden so that your computers are invisible to the outside world.

Password security, filtering, and the ability to disable support for incoming calls prevents intruders from breaking into the DIVA LAN ISDN Modem itself.

Compression for faster throughput

The DIVA LAN ISDN Modem provides data compression to achieve throughput rates of up to 512 kbps. That's four times the ISDN remote access speed of 128 kbps.

Bandwidth on-demand

The DIVA LAN ISDN Modem's bandwidth-on-demand feature automatically monitors data traffic and engages the second B-channel only when needed, reducing ISDN costs.

Advanced ISDN tariff management

The DIVA LAN ISDN Modem can be configured to:

- Disable ISDN access during peak tariff rates or limit the total line usage in minutes for a given time period.
- Set a maximum number of connections for a given period.
- Filter out specific IP protocols which consume a lot of bandwidth.
- Control broadcast traffic such as NetBEUI and TCP from reconnecting the ISDN line.

Advanced diagnostics

- On-screen display of B-channel status.
- Significant events are recorded in the Event Viewer.
- Events trigger visual or audible alarms.
- Common errors are described in non-technical language inside the Event Viewer, so that users don't need to analyze PPP or ISDN traces.
- Detailed ISDN information for the last two calls is retained.
- Reports list ISDN diagnostics in plain language along with help information. This is particularly useful for solving ISDN line provisioning problems.
- Detailed traces (including ISDN (Q.931), PPP, X.25, LAPD) are available enabling technical personnel to isolate complex communications problems.

Unsupported configurations

The DIVA LAN ISDN Modem cannot be used in the following configurations:

- Two DIVA LAN ISDN Modems cannot be interconnected (daisy-chained) via their Ethernet ports.
- The DIVA LAN ISDN Modem cannot be used on both sides when connecting to a corporate network. The corporate network must have its own gateway.

Summary of features

Note *The DIVA LAN ISDN Modem is available with or without analog phone ports. Phone related features are only available on models with analog phone ports.*

Key features of the DIVA LAN ISDN Modem include:

Physical characteristics

- Ethernet hub with four ports
- Two analog ports
- Console port (serial)
- Status LEDs (four ISDN, four Ethernet, power, fault)

ISDN support

- Available with U or S/T interface
- Support for international switches
- Always On/Dynamic ISDN (AO/DI)

Voice call handling

- Call bumping (Dynamic Bandwidth Allocation) on incoming and outgoing calls
- Advanced calling features, including call forwarding, three-way calling, etc.
- Delivers CallerID digits to the analog ports
- PHONE ports have a REN of 3

PPP features

- PPP, Multilink PPP, BACP, BOD, AO/DI, V.120
- Compression: Ascend, MPPP, MS-STAC, STAC1, and STAC3
- Authentication: PAP/CHAP, MS-CHAP

Installation

- Quick install via wizards
- Auto detection of common problems, including line presence, incorrect configuration, etc.

Usage/tariff management

- Connectivity timers to restrict usage to particular days and times
- Usage limits can be set based on number of calls or time connected
- Call filtering

LAN protocol

- Supports static and dynamic IP routing
- Supports IP PAT and NAT
- Performs IP spoofing and packet filtering
- Can act as a DHCP server
- TFTP server support

Administration

- Web-based, TELNET, and command line management interfaces
- Configure using IP via the Ethernet or ISDN ports, or by using a direct serial link via the console port
- DTMF interface permits configuration with a touch tone telephone
- Statistics with real-time updates
- Ability to save and restore configuration locally or remotely
- SNMP MIB II support

Contacting customer services

To obtain technical support for Eicon products, contact your Eicon Technology supplier.

World wide web

Information about Eicon Technology products and services—including documentation and software updates—is available from our web site at **www.eicon.com/support**

Chapter Two

Getting Started


This chapter explains how to install and configure the DIVA LAN ISDN Modem to provide Internet access for up to four computers.

If this type of installation does not meet your needs, instructions for creating other types of installations are found in Chapter Eight and Chapter Nine.

1. Installation overview

The steps in this chapter explain how to install and configure the DIVA LAN ISDN Modem to provide Internet access for up to four computers.

The following diagram illustrates the key components that are part of this installation.

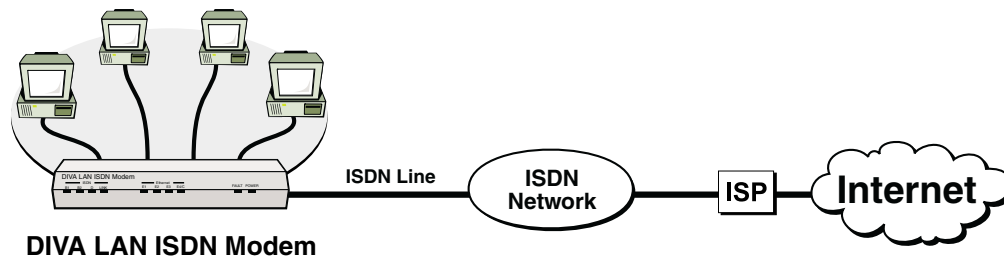

The installation process is composed of the following steps:




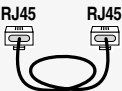
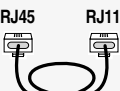
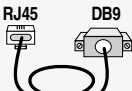
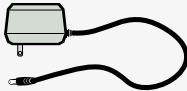

- Step 1. Installation overview
- Step 2. Prepare for installation
- Step 3. Choose a connection protocol
- Step 4. Gather configuration information
- Step 5. Install the DIVA LAN ISDN Modem
- Step 6. Install Modem Monitor (Windows 95/98/NT4)
- Step 7. Connecting a non-Windows computer to the DIVA LAN ISDN Modem
- Step 8. Configuring the Internet connection
- Step 9. Using your DIVA LAN ISDN Modem

2. Prepare for installation

To ensure that the installation of your DIVA LAN ISDN Modem is quick and trouble free, take a few moments to prepare for installation.

Verify your package contents

Your package should contain the following:

<p>DIVA LAN ISDN Modem</p> 	<p>CD-ROM</p>  <p>Use this to install the DIVA LAN ISDN Modem software and read the documentation.</p>	<p>Quick Install Booklet</p> 
<p>Ethernet Cable (Blue)</p>  <p>Use this to connect your computer to the DIVA LAN ISDN Modem via its Ethernet port.</p>	<p>ISDN Cable (Grey)</p>  <p>Use this to connect the DIVA LAN ISDN Modem to your ISDN line.</p>	<p>Console Cable (Beige)</p>  <p>Advanced users only. Connects your computer to the DIVA LAN ISDN Modem via the CONSOLE port.</p>
<p>Phone Adapters</p> <p>In certain countries (including Britain and France), phone adapters are provided to enable you to connect your analog devices to the PHONE plugs on the DIVA LAN ISDN Modem.</p>	<p>Power Supply</p> 	<p>Terminating Resistor</p>  <p>Only included if you purchased the S/T model in Australia.</p>

Note Phone adapters are only included if your DIVA LAN ISDN Modem has phone ports.

Verify the configuration of your computers

To connect to the DIVA LAN ISDN Modem

Each computer that will be connected to the DIVA LAN ISDN Modem must have:

- A 10BASE-T Ethernet network interface card, properly installed and configured to use the TCP/IP protocol. Consult the documentation that came with your card for instructions on how to do this.
100 Mbps Ethernet cards can only be connected to the DIVA LAN ISDN Modem if they support auto-sensing.
- the TCP/IP communications protocol configured as follows:
 - it must be set to obtain its IP address automatically (DHCP client)
 - it must not be configured to use a DNS server

See Appendix A for information on configuring TCP/IP.

To configure the DIVA LAN ISDN Modem

The computer you are going to use to configure the DIVA LAN ISDN Modem must have:

- Web browser software (Netscape 3.01 or later, or Internet Explorer 4 or later).
Internet Explorer 4 is included on the DIVA LAN ISDN Modem CD for computers running Windows 95, Windows 98, or NT 4.0 or later. NT 4.0 requires SP3 or SP4, which are available on the DIVA LAN ISDN Modem CD.
- The Web browser must be configured as follows:
 - Connect to the Internet via a local area network (LAN).
 - Do not connect through a proxy server.

To run the Modem Monitor software

The Modem Monitor software provides an easy way to manage the DIVA LAN ISDN Modem. To install and run this software you need:

- IBM-compatible 486, or Pentium-based computer running Microsoft Windows 95/98/NT4.0 or later
- CD-ROM drive

To use the advanced configuration options

For the advanced user, the DIVA LAN ISDN Modem offers additional configuration options. These options and their requirements are as follows:

- The *command line interface* (CLI) gives you complete access to all the DIVA LAN ISDN Modem configuration parameters. To access this interface you require Telnet software or a terminal emulation program.
- *TFTP* (trivial file transfer protocol) gives you access to all configuration files on the DIVA LAN ISDN Modem. You need TFTP client software to use this option. A TFTP program is included on the DIVA LAN ISDN Modem CD.
- The *DTMF interface* enables you to define certain DIVA LAN ISDN Modem configuration settings using a ordinary touch tone phone.

See Chapter Ten for more information on these configuration options.

3. Choose a connection protocol

Usage of the ISDN link is governed by the type of connection protocol you choose. The connection protocol defines the rules by which ISDN channels are enabled and disabled. The type of protocol you choose to use depends on the type of connections you plan to make.

Important ISDN concepts

Before you can decide on a connection protocol, you must become familiar with the following ISDN concepts.

ISDN channels

ISDN lines are defined in terms of *channels*, with each channel supporting a specific type of communication. The DIVA LAN ISDN Modem supports two ISDN channel types:

- **D-channel:** The Device channel is used to control the setup of ISDN connections on the other channels. They can also be used to transmit packet data traffic. The D-channel has a transmission speed of 16 kbps.
- **B-channel:** Bearer channels are used to carry data or voice traffic. They have a transmission speed of 56 or 64 kbps.


ISDN access interfaces

An access interface is the physical connection between you and an ISDN network. It defines the number of D- and B-channels that are available to you and the total transmission speed of the connection. The DIVA LAN ISDN Modem supports a single Basic Rate Interface (BRI), which is comprised of one D-channel (16 kbps) and two B-channels (64 kbps) for a total user bit rate of 144 kbps.

Each ISDN B-channel can have its own telephone number. Although in some cases you will only get one number for both channels unless you order supplementary services.

ISDN channel usage

The following diagram shows all the potential connections a DIVA LAN ISDN Modem could make, if it was configured to support an Internet connection, a corporate network connection, incoming data calls, and analog calls on both PHONE ports.

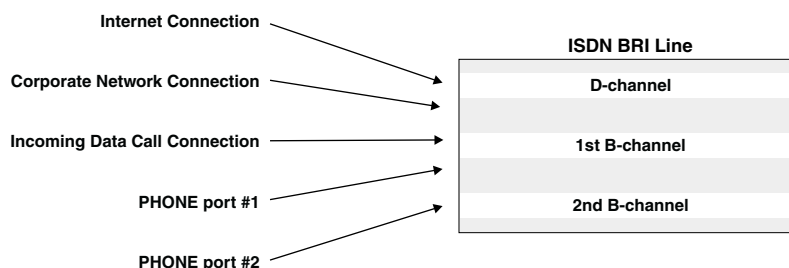

All connections, both data and voice, are carried on the B-channels. (AO/DI enables you to also use the D-channel for data connections, but this exception will be discussed later.) The DIVA LAN ISDN Modem dynamically assigns B-channels on-demand. Therefore, there is no guarantee which B-channel a specific connection will receive. The same is true for your ISDN phone numbers. Your first phone number does not necessarily map to ISDN channel B1.

Choosing a connection protocol

Since the DIVA LAN ISDN Modem supports so many potential connections, a set of rules is needed to control how the two ISDN B-channels are shared between connections. These rules are based on the type of *connection protocol* you decide to use for your data traffic. The DIVA LAN ISDN Modem supports the two protocols: PPP and V.120.

- PPP is a widely-used standard for transferring data on point-to-point links. The DIVA LAN ISDN Modem supports four variations of the PPP protocol: PPP, Multilink PPP, Multilink PPP+BACP, and Multilink PPP+AO/DI. Each version has its own specific features as detailed later in this section.
- V.120 was designed to allow non-ISDN devices to communicate with the ISDN network. The DIVA LAN ISDN Modem provides support for V.120, so you can connect with such legacy systems. For example, in many countries around the world, Compuserve offers access to their network over ISDN, using the V.120 protocol.

By choosing the correct protocol variation for your connection, you control how the ISDN channels are assigned and how the DIVA LAN ISDN Modem provides support for analog calls.

PPP

PPP operates on a single ISDN B-channel. Since two B-channels are available, the DIVA LAN ISDN Modem can support two PPP connections at the same time. This is useful if you need to have two connections that need to be established at the same time. For example, to maintain a connection to the Internet and to a remote corporate network, or if you intend to support incoming data calls.

By default, the DIVA LAN ISDN Modem is configured to support call bumping. However, a PPP connection will never be disconnected to allow an incoming or outgoing analog call to connect. If two PPP connections are active, no analog calls can be made or received.

Multilink PPP

When you activate multilink PPP (MLPPP), the DIVA LAN ISDN Modem combines both your ISDN B-channels into a single 128 kbps communications link. Both B-channels remain in use as long as the connection is active, which may result in excessive ISDN connection charges if the link is frequently idle.

MLPPP reserves both B-channels for its exclusive use. This means that if your Internet connection uses MLPPP, you will not be able to make or receive other data calls.

Analog calls, however, are governed by a different set of rules. By default, the DIVA LAN ISDN Modem is configured to support call bumping. Call bumping causes MLPPP to drop one B-channel when you make or receive an analog call. This reduces the throughput of the data call to 64 kbps. When the analog call is done, MLPPP re-establishes the second B-channel, returning the data connection to 128 kbps.

Only one PHONE port can be used when an MLPPP connection is active.

Multilink PPP + BACP

To save on communications charges, you can use BACP in combination with MLPPP. The DIVA LAN ISDN Modem uses BACP to monitor incoming and outgoing traffic, and to open or close the second ISDN B-channel as the traffic volume warrants. This reduces your communications charges by ensuring that two ISDN channels are never active when one is sufficient. For information on how to configure BACP, see “Configuring BACP” on page 53.

As with MLPPP, MLPPP + BACP reserves both B-channels for its exclusive use. This means that if your Internet connection uses MLPPP + BACP, you will not be able to make or receive other data calls.

As with MLPPP, call bumping causes MLPPP + BACP to drop one B-channel (if both are active), when you make or receive an analog call.

Only one PHONE port can be used when an MLPPP + BACP connection is active.

Multilink PPP + AO/DI

Always On/Dynamic ISDN uses the ISDN D-channel to maintain a permanent connection to your ISP or corporate network. This connection operates at 9.6 kbps using the X.25 protocol. It can be used to send and receive low-bandwidth data, such as e-mail or web-based push content.

AO/DI incorporates BACP, and uses it to monitor incoming and outgoing traffic. When traffic volume warrants, it enables one or two B-channels to meet the demand. For information on AO/DI, see “Configuring AO/DI” on page 54.

As with MLPPP, MLPPP + AO/DI reserves both B-channels for its exclusive use. This means that if your Internet connection uses MLPPP + AO/DI, you will not be able to make or receive other data calls.

MLPPP + AO/DI can drop both B-channels, allowing you to make or receive two analog calls. Since the data connection is still active on the D-channel, you can use both phone ports at any time. Note, however, that the speed of the D-channel (9.6 kbps) is much slower than a B-channel (64 kbps).

V.120

V.120 was designed to allow non-ISDN devices to communicate with the ISDN network. The DIVA LAN ISDN Modem provides support for V.120, so you can connect with such legacy systems. For example, in many countries around the world, Compuserve offers access to their network over ISDN, using the V.120 protocol.

V.120 operates on a single ISDN B-channel. Since two B-channels are available, the DIVA LAN ISDN Modem can support two V.120 connections at the same time. In general, you should use V.120 only when the site you are connecting to requires it. Once the V.120 connection is active, the DIVA LAN ISDN Modem automatically establishes a PPP connection on top of it. This is why you will see this option listed as *PPP over V.120* on the configuration screens.

A V.120 connection will never be disconnected to allow an incoming or outgoing analog call. If two V.120 connections are active, no analog calls can be made.

Summary

The following summary will help you determine how ISDN channels are assigned by the various connection protocols. This summary assumes that call bumping is enabled.

- If a data connection using any MLPPP-related protocol is connected, it reserves both ISDN B-channels. This means that no other data call can be established.
- If a data connection using MLPPP is connected, only one PHONE port can be used at a time.
- If a data connection using MLPPP-BACP is connected, only one PHONE port can be used at a time.
- If a data connection using MLPPP-AO/DI is connected on one or both ISDN B-channels, one or both B-channels will be dropped to allow an incoming or outgoing analog call to connect.
- If two PPP or V.120 data connections are active, no PHONE ports are available.
- If both PHONE ports are in use, no data calls can be established. Unless you are using AO/DI, which can make use of the D-channel.

4. Gather configuration information

Gather the following ISDN and Internet account information. You will need it to successfully configure the DIVA LAN ISDN Modem.

Gather ISDN information

The DIVA LAN ISDN Modem connects to an ISDN Basic Rate line. There are two types of line interfaces: U interface and S/T interface.

- In Europe, the S/T interface is standard for Basic Rate ISDN lines.
- In Asia Pacific countries, the S/T interface is also commonly used. However, there are some ISDN providers that supply U interface ISDN lines. If this is the case, make sure that you have the U interface version of the DIVA LAN ISDN Modem, (or an NT-1), or you will not be able to connect.

Supplementary services

Various supplementary services are available. Two you should consider ordering are:

- **MSN (multiple subscriber numbering):** If you will be using your DIVA LAN ISDN Modem to receive incoming analog calls (i.e., you intend to plug telephones or fax machines into the DIVA LAN ISDN Modem), you may have to order the MSN supplementary service to get more than one phone number.
- **Call Waiting:** You need to order the Call Waiting supplementary service if you want to support call bumping (dynamic bandwidth allocation). Call bumping enables the DIVA LAN ISDN Modem to drop one ISDN B-channel on an active data call, to allow an incoming or outgoing analog phone call to connect. See “Choosing a connection protocol” on page 20 for more information.

Information to record

Item	Description
ISDN phone number	The main phone number assigned to your ISDN line.
MSN phone number(s)	If supported by your line.
Billing intervals	Find out how your provider bills for ISDN usage. With this information on hand you can configure the DIVA LAN ISDN Modem to minimize your connection costs. See “The Cost Control page” on page 51.

Gather Internet account information

Obtain an account with an ISP (Internet Service Provider) and record the following:

Item	Description
ISP's ISDN phone number(s)	This is the phone number the DIVA LAN ISDN Modem dials to access the ISP. Your ISP may also have a backup number in case the primary number is busy or unavailable.
User name	Name the DIVA LAN ISDN Modem will use to log in to the ISP.
Password	Password the DIVA LAN ISDN Modem will use to log in to the ISP.
Primary DNS server address Secondary DNS server address	To reach other sites on the Internet you need to use your ISP's DNS server. In most cases, the DIVA LAN ISDN Modem will automatically discover the addresses of these servers. However, if it is unable to do so, you will have to enter them manually. Addresses are written as four numbers separated by periods. Each number can range from 0 to 255. For example: 212.123.111.119 or 212.132.10.20

Gather X.25 information

If you intend to use AO/DI, you will require the following information:

Item	Description
Remote X.25 address	The X.25 address of your ISP or the corporate network you want to connect to.
Local X.25 address	The X.25 DTE address assigned to the DIVA LAN ISDN Modem. This may not be required on some X.25 switches.
Default window size Maximum window size	The DIVA LAN ISDN Modem supports windows sizes from 1 to 7.
Default packet size Maximum packet size	The DIVA LAN ISDN Modem supports packet sizes from 64 to 1024 bytes.
Number of VCs	Number of virtual circuits. The DIVA LAN ISDN Modem supports up to 4 two-way virtual circuits.
ISDN TEI type	Determine if TEI assignment is static, dynamic, or shared. If static, get the number assigned to the D-channel.

Gather V.120 information

If you intend to use V.120, you will require the following information:

Item	Description
Mode	Two modes are supported: Unacknowledged or Multiframe.
Maximum transmit frame size Maximum receive frame size	This is the maximum size of a V.120 information field that can be transmitted or received. The DIVA LAN ISDN Modem supports frame sizes from 16 to 260 bytes.
Window size	Applies to Multiframe mode only. The DIVA LAN ISDN Modem supports windows sizes from 1 to 7.
Maximum retry count	Applies to Multiframe mode only. Defines the maximum number of retransmissions of an unacknowledged frame.
Retransmission timer (T200)	Applies to Multiframe mode only. Defines how long to wait before retransmitting an unacknowledged frame.
Link Integrity timer (T203)	Applies to Multiframe mode only. Defines the maximum time the connection can remain idle without data or control frames being exchanged.
Idle timer	Defines the maximum time the connection can remain idle without data frames being exchanged.

V.120 scripting

To successfully log on to your ISP, you will need to define a script to automatically execute the log on process for you. The DIVA LAN ISDN Modem contains a pre-defined script that should work in the majority of cases. However, you may need to modify this script for your installation.

To modify this script, you need to determine the sequence of events that occur when logging on to your ISP, and the input that must be sent. For example:

- Step 1: Your ISP issues the prompt "Login:" and expects you to send your user name, then press Enter.
- Step 2: Your ISP issues the prompt "password:" and expects you to send your password, then press Enter.


For more information on scripting see "Making a V.120 connection" on page 127.

5. Install the DIVA LAN ISDN Modem

Installing the DIVA LAN ISDN Modem is as simple as plugging it in and connecting a few cables. Before you begin make sure that each computer has the required prerequisites as explained in the section “Verify the configuration of your computers” on page 18.

Note *The DIVA LAN ISDN Modem is available with or without analog phone ports. Phone related features are only available on models with analog phone ports.*

Consult the following diagram as you perform the installation.

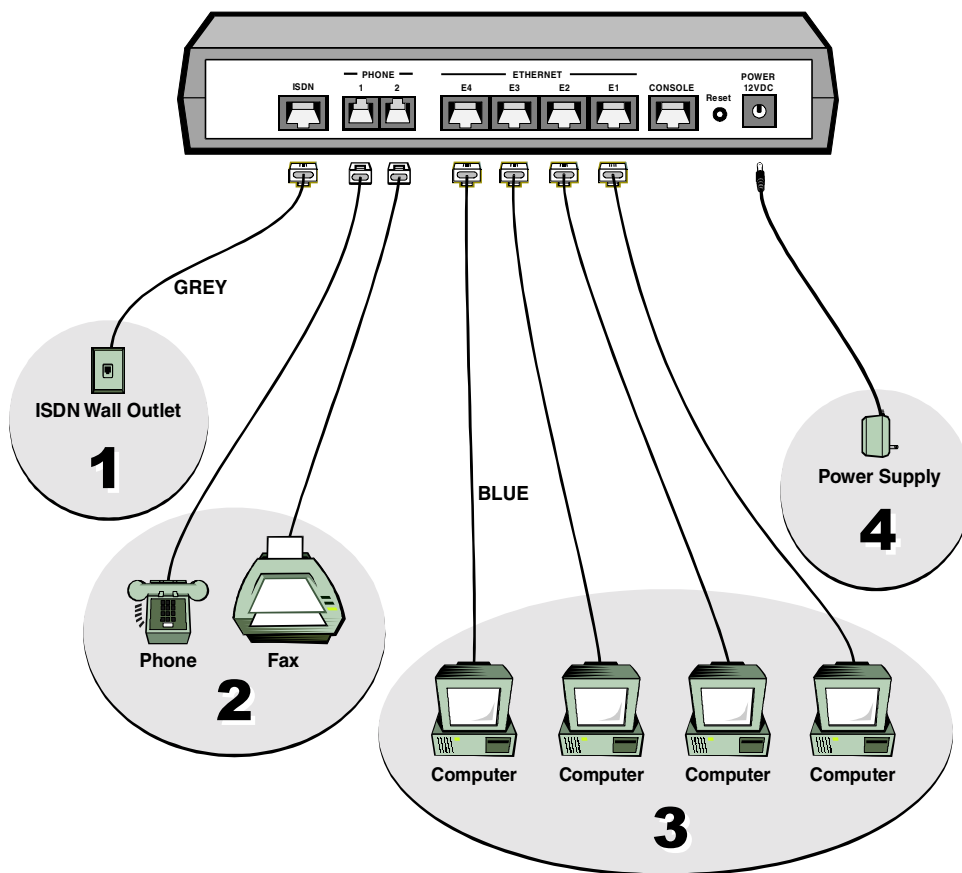

To install the DIVA LAN ISDN Modem

1. Connect the DIVA LAN ISDN Modem to your ISDN line using the supplied grey ISDN cable. Plug one end into the ISDN port on the back of the DIVA LAN ISDN Modem and plug the other end into your ISDN wall outlet.
 - If you are installing a DIVA LAN ISDN Modem with a U interface, make sure that it is the only device connected to your ISDN line.
 - If you are installing a DIVA LAN ISDN Modem with an S/T interface, you may need to connect the terminating resistor. See “Termination” on page 151 for more information.
2. You can connect analog devices, such as telephones or fax machines, to the PHONE ports. To enable support for modems and faxes, see “Connecting modems and fax machines” on page 83.
 - In some countries you must plug the cable from your analog device into a phone adapter before connecting it to the DIVA LAN ISDN Modem.

3. Turn off your computers and then connect them to the Ethernet ports on the DIVA LAN ISDN Modem. It does not matter which Ethernet port you plug your computers into. All Ethernet ports are the same. One Ethernet cable (blue) is supplied as part of the DIVA LAN ISDN Modem package. If you are connecting more than one computer, printer, or other network resource, you will require additional Ethernet cables.
4. Connect the power supply to the POWER jack on the DIVA LAN ISDN Modem, and plug it into a power outlet.
5. Wait at least 10 seconds for the DIVA LAN ISDN Modem to initialize.
6. Turn on your computers.
7. You are now ready to install the Modem Monitor software and configure the DIVA LAN ISDN Modem.

Note *Do not connect the beige cable. It is for advanced configuration options only. See Chapter Ten.*

6. Install Modem Monitor (Windows 95/98/NT4)


Note If you are using an operating system other than Windows 95/98/NT4, turn to page 29.

Modem Monitor provides quick access to the DIVA LAN ISDN Modem Web-based configuration interface, as well as online help, and utilities.


Modem Monitor runs under Windows 95/98/NT4. It should be installed only on the computer you are going to use to configure the DIVA LAN ISDN Modem. Other computers that are connected to the DIVA LAN ISDN Modem must be configured as explained in the section “Verify the configuration of your computers” on page 18. Other than this, they require no additional software to be installed.

To install Modem Monitor


1. Insert the DIVA LAN ISDN Modem CD into the CD-ROM drive on your computer. The setup program automatically starts. If it does not, click “CDSETUP.EXE” in the root folder of the CD.
2. On the Welcome screen, click *Install Software/View Documentation*.

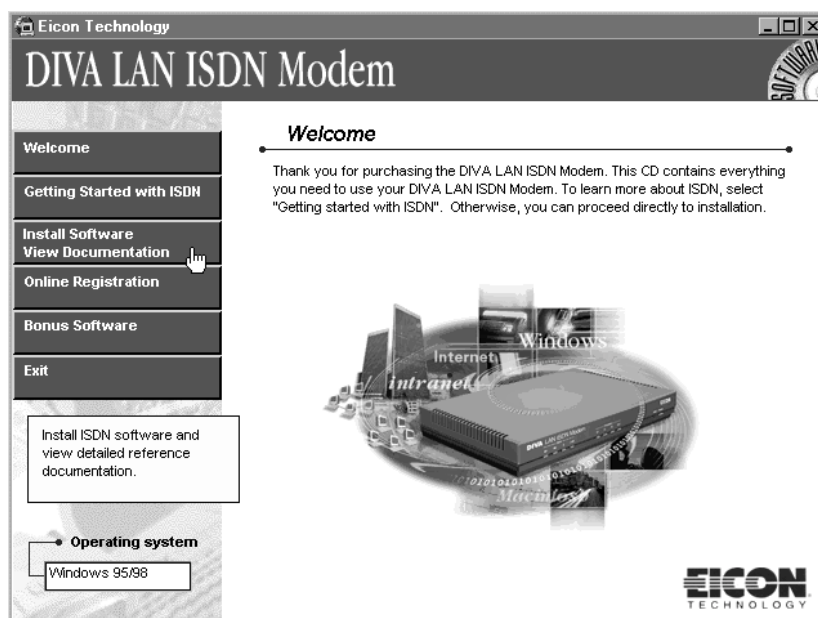


3. On the Install Software screen, click *Install DIVA LAN ISDN Modem Software*.

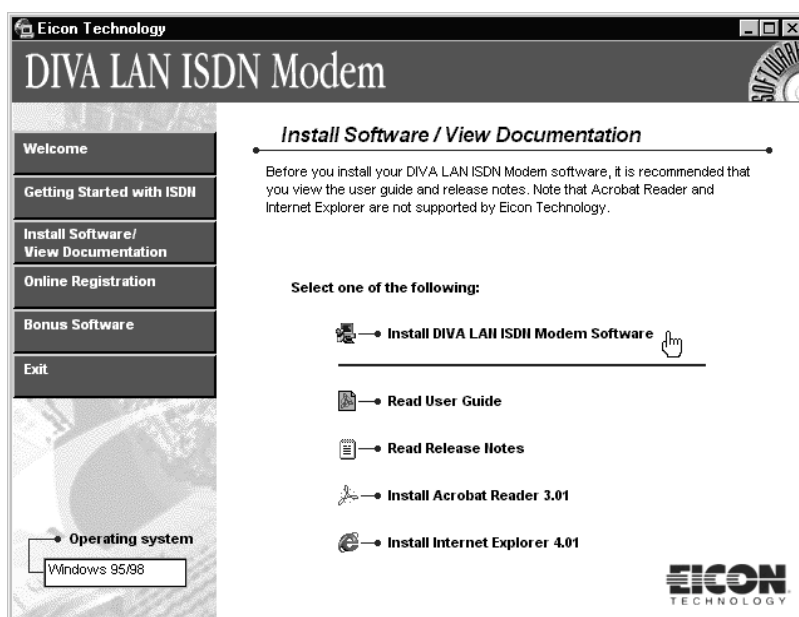

4. The DIVA LAN ISDN Modem Setup Wizard starts. Follow the directions on your screen to install the software.

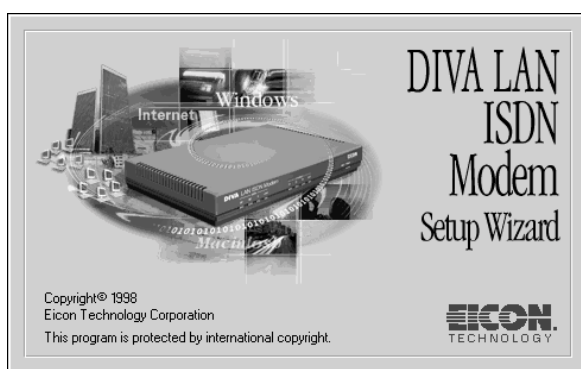

5. Once installation is complete, the Setup Wizard then attempts to contact the DIVA LAN ISDN Modem.

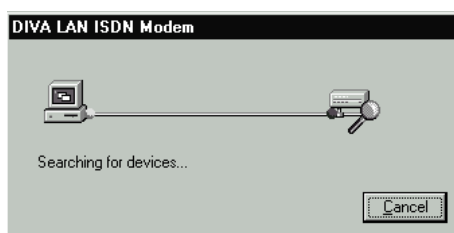

6. Once detected, the Setup Wizard starts the Network Wizard. The Network Wizard will verify that you can communicate with the DIVA LAN ISDN Modem. If a problem is found, the Network Wizard will help you correct it.

If at any point you are prompted to upgrade the firmware on your DIVA LAN ISDN Modem, do so. The procedure is automatic. In certain cases, the firmware on the CD-ROM may be more recent than that installed on the DIVA LAN ISDN Modem. For more information on firmware upgrades see "Upgrading the DIVA LAN ISDN Modem firmware" on page 48.

7. When the Network Wizard is done, you will see the following dialog box.



8. Click *Configure*. The DIVA LAN ISDN Modem launches your default Web browser and displays the first page of the Internet wizard.



If your Web browser is unable to load this page, make sure that:

- it is configured to use the LAN, and **not** a dial-up connection
- it is **not** set to use a proxy server


9. Click *Start* to continue.
10. Turn to the section “Configuring the Internet connection” on page 31 for a complete walkthrough of the wizard.

7. Connecting a non-Windows computer to the DIVA LAN ISDN Modem

Note *If you are using an operating system other than Windows 95/98/NT4, follow the steps in this section to configure your system so that it can communicate with the DIVA LAN ISDN Modem.*

To connect to the DIVA LAN ISDN Modem

1. Make sure that your computer has TCP/IP installed, configured, and bound to its Ethernet card.
2. Enable DHCP client support. This allows your computer to automatically obtain its IP address from the DIVA LAN ISDN Modem (which acts as a DHCP server). If you do not want to use the DIVA LAN ISDN Modem as your DHCP server, make sure that the IP address assigned to your computer is on the same IP network as the DIVA LAN ISDN Modem (192.168.1.0), and that its subnet mask is 255.255.255.0. A simple solution is to use the address 192.168.1.2 for your computer. You must also ensure that the DIVA LAN ISDN Modem is added to your list of gateways and DNS servers.
3. Determine if you computer can communicate with the DIVA LAN ISDN Modem. Start your web browser (Netscape 3.01 or later, or Internet Explorer 4.x).
4. Specify the address 192.168.1.1 and press Enter. (If you changed the address of the DIVA LAN ISDN Modem, enter the new address instead.)
5. Your web browser will load the Log In page.

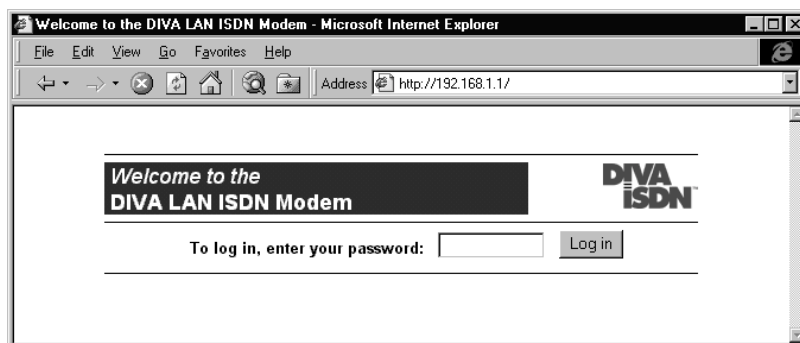

If you cannot load the log in page, try to PING the DIVA LAN ISDN Modem with the command: PING 192.168.1.1.

If you receive a reply, your Web browser may not be configured properly. Make sure that:


- it is configured to use the LAN, and **not** a dial-up connection
- it is **not** set to use a proxy server

If you do not receive a reply, it is likely that your TCP/IP settings are incorrect, verify the settings you made in step 1 and 2.

6. Click *Log In*. (Until you set a password, none is required to log in.)
7. The first time you log in, you must choose the country or region you are located in and click OK. If your region does not appear in the list, choose International (the last entry in the list).

Identify your location	Country
Choose the country or region you are located in and click OK. If your country or region is not in the list, choose <i>International</i> .	
<div> <div>Australia (OnRamp)</div> <div>Australia (MicroLink)</div> <div>Austria</div> <div>Belgium</div> <div>China</div> <div>Cyprus</div> </div>	OK

8. The DIVA LAN ISDN Modem displays the Configuration main menu.

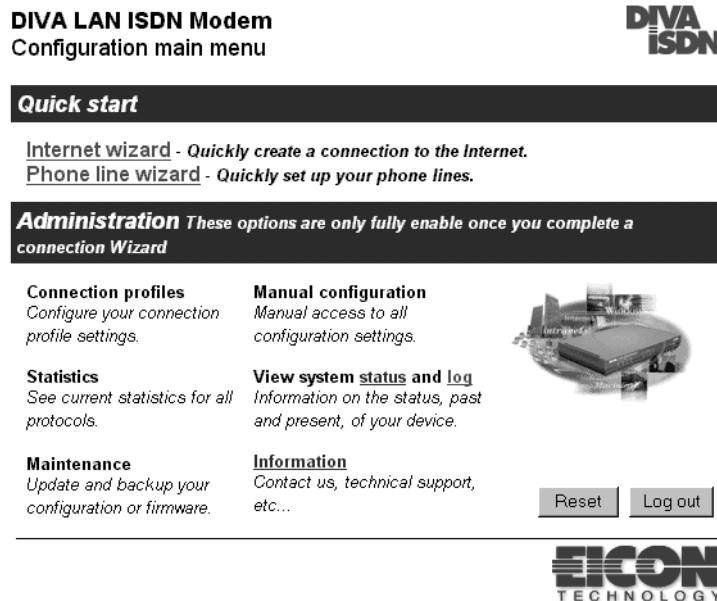

9. The Configuration main menu gives you access to all configuration options. However, the first time you start the web configuration program, most of the options in the Administration section are disabled. These options only become available once you have configured the DIVA LAN ISDN Modem with the Internet wizard.
10. Click *Internet wizard*. The DIVA LAN ISDN Modem displays the first page of the Internet wizard.



11. Click *Start* to continue.
12. Turn to the section “Configuring the Internet connection” on page 31 for a complete walkthrough of the wizard.

8. Configuring the Internet connection

This section explains how to use the Internet wizard to set up an Internet connection.

Configuration occurs via a series of web pages that reside on the DIVA LAN ISDN Modem. You use your web browser to access these pages and change configuration settings.

To configure the Internet connection

1. Regardless of the type of operating system you are using, you should see the following web page in your browser. If you do not see this page, return to the section you came from and retry the instructions.

2. Fill in the fields as indicated below.

- A** This is the name assigned to your Internet connection profile. It is recommended that you do not change it.
- B** Specify your ISP's ISDN phone numbers.
- C** In some areas Compuserve offers ISDN Internet access using the V.120 protocol.
- D** Specify the user name and password given to you by your ISP.
- E** If your ISP supplied you with the addresses of its DNS servers, enter them. If not, leave these addresses as 0.0.0.0. When the DIVA LAN ISDN Modem connects with your ISP, it will automatically discover these addresses (if supported by your ISP).

3. Click *Next*. The DIVA LAN ISDN Modem displays a summary of your settings and asks you to verify them. For example, this screen shows the settings for a connection with no backup telephone number, and no DNS server addresses.

Internet Connection wizard		Review & Save
1. Network Setup 2. Review & Save 3. Test & Connect	Setup is ready to create a connection with the following characteristics.	
	Primary telephone number: 7110511 Backup telephone number:	
	Username: Edwin Password: *****	
	Primary DNS address: 0.0.0.0 Secondary DNS address: 0.0.0.0	
	<ul style="list-style-type: none"> Now is a good time to test your configuration by connecting. Click on "Save + Test" to connect. If you do not want to test at this point and your configuration is good, click "Save". Otherwise, click "Back" and correct those that are in error. 	
<div>Back Save Save + Test</div>		

4. Click *Save + Test*. This will save your settings and validate your configuration.
5. First, your configuration is saved to the DIVA LAN ISDN Modem.

Saving and resetting LAN Modem...
Saving and resetting the DIVA LAN Modem in order to test your connection profile... Please be patient, this will take a few seconds. <div></div>

6. Next, the test is executed. For example, this page shows the results of a successful test:

ISP Connection Wizard	Testing...
Now testing your configuration Please be patient as this may take a few seconds.	
<ul style="list-style-type: none"> Checking initial state ... Ok Checking ISDN ... Ready Connecting with ISDN ... Connected PPP negotiation ... Success Authentication ... Success IP address negotiation... Success Pinging the remote... Pings received from the remote Checking DNS server configuration ... Server addresses are configured properly. This profile works properly. 	
Connection results: This configuration profile connects properly! Congratulations!	
<div>Go Check firmware Done</div>	

This page shows the results of a test that failed due to an invalid username or password. Fix the settings that are in error and try the test again.

Internet Connection WizardTesting...

Now testing your configuration
Please be patient as this may take a few seconds.

- Checking initial state ... Ok
- Checking ISDN ... Ready
- Connecting with ISDN ... Connected
- PPP negotiation ... Success
- Authentication ...
- Authentication failed. Check your PPP usernames and passwords.

Connection results:
Your name or your password is wrong. Are your name and password correct?

Retry Done

7. If your test was successful, you are now connected to the Internet.
 - Click the *Go Check Firmware* button to visit the Eicon Technology web site. There you will find the latest firmware for your DIVA LAN ISDN Modem and other news and information as it becomes available.
 - To visit any other web site, simply enter the URL in your browser and press Enter. You may want to visit **www.isdnzone.com**. This site was created by Eicon Technology and is devoted to all things ISDN.
8. See “Using your DIVA LAN ISDN Modem” on page 34 for information on how the DIVA LAN ISDN Modem operates.

9. Using your DIVA LAN ISDN Modem

The DIVA LAN ISDN Modem automatically dials out and establishes the ISDN link to the Internet as required. You simply launch the applications you use to do your work, such as a web browser or e-mail program, and you are automatically connected.

You can also establish your connections manually, dialing and hanging up as you see fit. See the Dial and Hangup buttons on page 39 for details.

How long will the line stay connected?

By default, the DIVA LAN ISDN Modem stays connected until the line has been idle for two minutes. To adjust this setting, see “Idle timer” on page 51.

Registering your DIVA LAN ISDN Modem

Once your setup is running you should visit the Eicon web site and register your DIVA LAN ISDN Modem. This ensures that you will always be kept up-to-date of new features and firmware releases. Point your web browser to:

www.eicon.com/divalan/downld.htm

or follow the firmware upgrade procedure in the section “Upgrading the DIVA LAN ISDN Modem firmware” on page 48. Registration is part of the upgrade process.

What's next?

The rest of this manual provides in depth information and instruction on a variety of topics relating to operating and configuring the DIVA LAN ISDN Modem.

Some of the topics that you may want to consult are:

Minimizing your ISDN charges

The DIVA LAN ISDN Modem has several pre-defined settings to help reduce your ISDN charges. To adjust these settings for your installation, see Chapter Five.

Using telephones, fax machines, and modems

If your DIVA LAN ISDN Modem has PHONE ports, you can share the ISDN line with your analog devices. Consult Chapter Seven for complete details on setting up your analog devices.

Configuring security features

The DIVA LAN ISDN Modem provides a wide range of security features. Some of the features you may want to configure include:

- *System password:* A system password is also available to restrict access to the configuration interface.
- *Support for remote management:* By default, remote access to the configuration is disabled.
- *Support for incoming data calls:* By default, support for incoming data calls is disabled.
- *Call screening:* Lets you accept incoming data calls only from specific numbers.
- *Call authentication:* Lets you verify incoming callers by username and password.

Consult Chapter Six for complete details.

Chapter Three


Using Modem Monitor

The Modem Monitor program provides an effective way to manage your DIVA LAN ISDN Modem. This chapter provides an overview of some of Modem Monitor's main functions. For more information, consult the Modem Monitor online help.

Note *Modem Monitor is available for Windows 95/98/NT4 systems only and should be installed on only one computer connected to the DIVA LAN ISDN Modem.*

Starting Modem Monitor

By default, Modem Monitor is automatically loaded each time you start Windows. An icon appears in your system tray to indicate it is running. The icon will change its appearance depending on the state of your DIVA LAN ISDN Modem. If you place your cursor on the Modem Monitor icon, it will display a tooltip describing the current state.

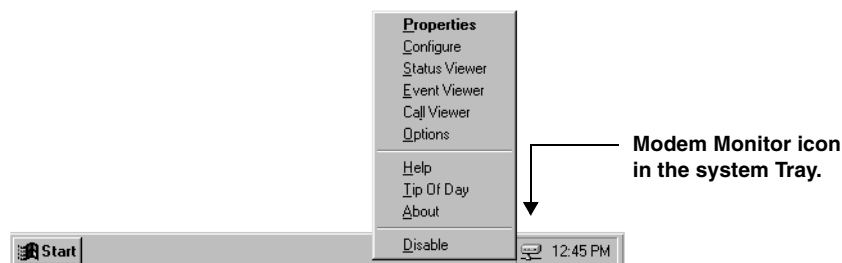


Right-click the Modem Monitor icon to display the menu. The following options are available:

- **Properties:** Displays the Properties dialog box which gives you quick access to your DIVA LAN ISDN Modem. See “Properties dialog box” on page 37. Double-clicking the Modem Monitor icon also opens the Properties dialog box.
- **Configure:** Opens the DIVA LAN ISDN Modem Web-based configuration interface in your default web browser. See Chapter Four for more information.
- **Status Viewer:** Starts the Status Viewer, which lets you view the status of your DIVA LAN ISDN Modem and manually dial or disconnect your connections.
- **Event Viewer:** Starts the Event Viewer, which lets you view the list of messages recorded in the log file.
- **Call Viewer:** Starts the Call Viewer, which lets you view information for all incoming and outgoing calls.
- **Options:** Lets you set Modem Monitor configuration options. To keep Modem Monitor from running each time you start Windows, disable the “Run DIVA LAN ISDN Modem Monitor at startup” option.
- **Help:** Starts the online help.
- **Tip Of Day:** Displays a helpful tip on using Modem Monitor.
- **About:** Displays the Modem Monitor version number.
- **Disable:** Closes Modem Monitor.

Start menu program group

Another way to load Modem Monitor is to use the Start menu.

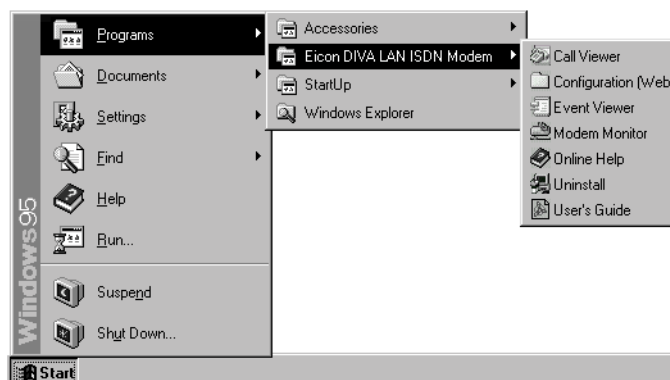


Start menu options

- **Call Viewer:** Starts the Call Viewer, which lets you view information for all incoming and outgoing calls.
- **Configuration (Web):** Opens a folder from which you can start the web-based configuration program.
- **Event Viewer:** Starts the Event Viewer, which lets you view the list of messages recorded in the log file.
- **Modem Monitor:** Opens the Modem Monitor properties dialog box.
- **Online Help:** Starts the Modem Monitor online help.
- **Uninstall:** Removes the Modem Monitor software from your computer.
- **User's Guide:** Opens the DIVA LAN ISDN Modem User's Guide using Adobe Acrobat Reader.

Properties dialog box

The Modem Monitor Properties dialog box gives you quick access to your DIVA LAN ISDN Modem. To access it, double-click the Modem Monitor icon in your system tray.

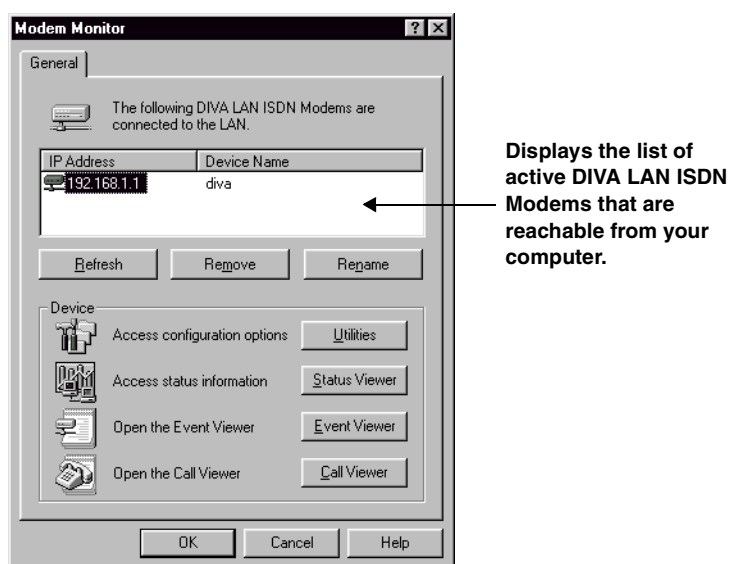


Buttons

- **Utilities:** Let's you perform configuration tasks.
- **Status Viewer:** Starts the Status Viewer, which lets you view the status of your DIVA LAN ISDN Modem and manually dial or disconnect your connections.
- **Event Viewer:** Starts the Event Viewer, which lets you view the list of messages recorded in the log file.
- **Call Viewer:** Starts the Call Viewer, which lets you view information for all incoming and outgoing calls.

Utilities dialog box

Display the Utilities dialog box by clicking the Utilities button in the Properties dialog box.

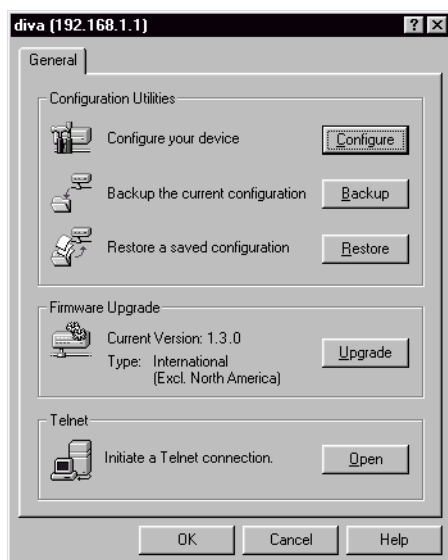

Buttons

- **Configure:** Starts the web-based configuration interface using your default web browser.
- **Backup:** Backs up the current configuration settings to a file on your computer.
- **Restore:** Restores a saved configuration from a file on your computer.
- **Upgrade:** Upgrades the DIVA LAN ISDN Modem with new firmware you have downloaded to your computer. Use the Maintenance option in the web-based configuration interface to download the new firmware. See “Upgrading the DIVA LAN ISDN Modem firmware” on page 48.
- **Open:** Starts a Telnet connection with the DIVA LAN ISDN Modem. This provides you with access to the CLI configuration interface for advanced configuration and troubleshooting. See “Command line interface (CLI)” on page 136.

Options dialog box

Lets you define the operational characteristics of the Modem Monitor software.



Check latest firmware is on your device

When enabled, Modem Monitor automatically checks if the firmware on your DIVA LAN ISDN Modem is the latest firmware version available on your computer.

Check for devices not responding

When enabled, Modem Monitor checks if any DIVA LAN ISDN Modem's on your LAN are not responding. A DIVA LAN ISDN Modem may not be responding for two reasons:

- It is not powered up or connected correctly.
- It has been removed from the LAN.

Create a shortcut to the device

When enabled, Modem Monitor automatically creates a shortcut on the desktop to the Web-based configuration interface.

Show Tip of the Day

When enabled displays the Tip of the Day.

Run DIVA LAN ISDN Modem Monitor at startup


When enabled, Modem Monitor automatically loads when you start your computer.

Enable Time of Day Server

Enables Modem Monitor to function as a Time of Day Server using the time and date set on your computer. The DIVA LAN ISDN Modem will update its internal clock by periodically contacting Modem Monitor.

Status Viewer

Lets you view the operational status of the DIVA LAN ISDN Modem and manually manage your connections.

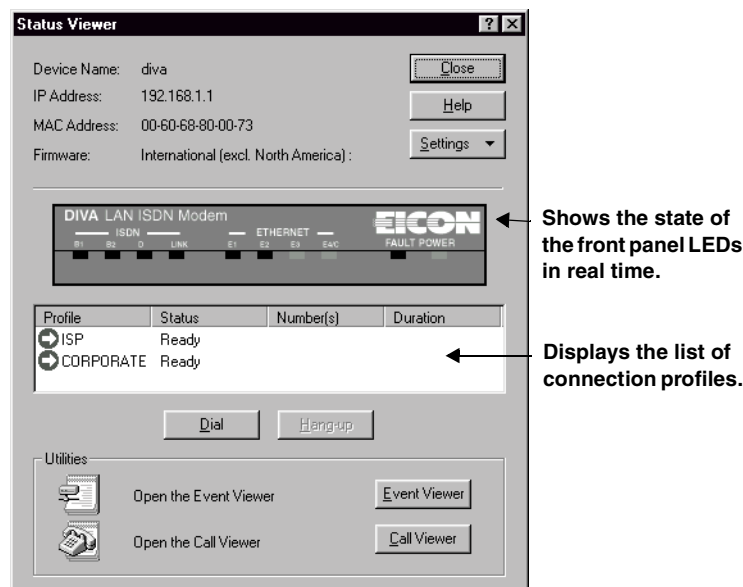

- **Device name:** Name assigned to the DIVA LAN ISDN Modem.
- **IP address:** IP address assigned to the DIVA LAN ISDN Modem.
- **MAC address:** Ethernet address assigned to the DIVA LAN ISDN Modem.
- **Firmware:** Displays the version of the current firmware loaded on the DIVA LAN ISDN Modem.

Profile table

- **Profile:** Name of the profile.
- **Status:** Status of the profile.
- **Number(s):** If a profile is active, this is the number that was dialed.
- **Duration:** Length of time the profile has been connected.

- **Dial:** Use this button to manually connect a profile.
- **Hangup:** Use this button to manually disconnect a profile.

Utilities

- **Event Viewer:** Starts the Event Viewer, which lets you view the list of messages recorded in the log file.
- **Call Viewer:** Starts the Call Viewer, which lets you view information for all incoming and outgoing calls.

The Web-based Configuration Interface

The DIVA LAN ISDN Modem uses a single ISDN link to provide communications services for all your connected devices. It manages incoming and outgoing data calls from your computers, as well as incoming and outgoing analog calls from connected telephones and/or fax machines.

To accomplish all this, the DIVA LAN ISDN Modem implements a number of important ISDN features that enable complex communications requirements to be supported on a single link. When you define your setup with the Internet wizard, a number of parameters are set to default values that give good results for most cases. However, due to the number of options that are available, the Internet wizard cannot fine tune all settings for your particular installation. For optimal performance, or to define a custom setup, you must manually adjust the configuration of the DIVA LAN ISDN Modem.

The web-based configuration interface provides you with an easy way to manage the configuration of the DIVA LAN ISDN Modem, and perform other tasks like viewing status and statistics on your connections, and updating your system firmware.

This chapter explains how to access the web-based configuration interface, and gives step-by-step instructions for some common tasks.

Starting the web-based configuration interface


The web-based interface enables you to manage the configuration and operation of the DIVA LAN ISDN Modem. It also lets you view status information and perform maintenance tasks like updating the firmware.

Note Only one user can access the web-based configuration interface at a time.

To start the web-based configuration interface

1. *If you installed the Modem Monitor software*


- Right-click the DIVA LAN ISDN Modem icon in your system tray, and click **Configure** on the menu. Your default web browser will start.

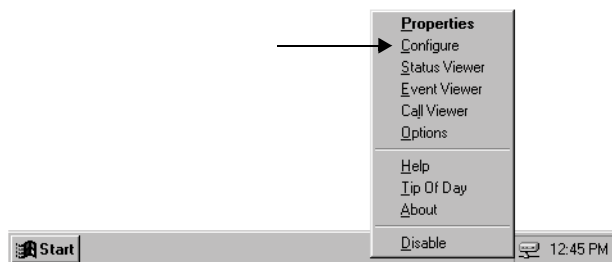

If you did not install the Modem Monitor software

- Start your web browser software, specify the URL “diva.lanmodem” or the default IP address of the DIVA LAN ISDN Modem (192.168.1.1), and press Enter. (If you changed the address or name of the DIVA LAN ISDN Modem, enter the new name or address instead.)

2. Your web browser will load the Log In page.

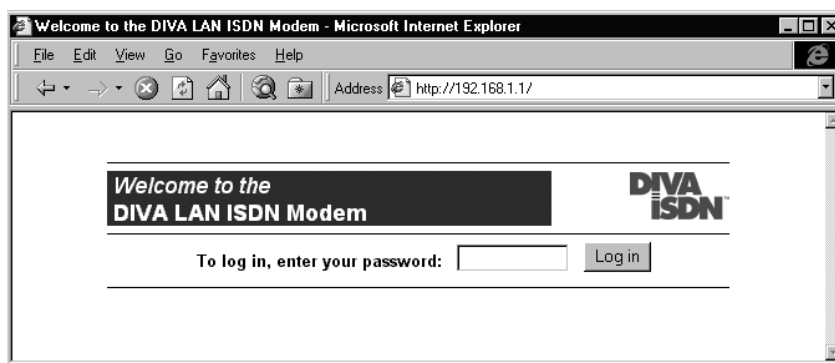

3. Enter the *system password*, if required, and click Log In.
4. The first time you log in, you must choose the country or region you are located in and click OK. If your region does not appear in the list, choose *International* (the last entry in the list).

Identify your location	Country
Choose the country or region you are located in and click OK. If your country or region is not in the list, choose <i>International</i> .	
<div> <div>Australia (OnRamp)</div> <div>Australia (MicroLink)</div> <div>Austria</div> <div>Belgium</div> <div>China</div> <div>Cyprus</div> </div>	<div>OK</div>

5. The DIVA LAN ISDN Modem displays the Main configuration menu.

DIVA LAN ISDN Modem Configuration main menu



Quick start

[Internet wizard](#) - Quickly create a connection to the Internet.

[Phone line wizard](#) - Quickly set up your phone lines.

Administration These options are only fully enable once you complete a connection Wizard

Connection profiles

Configure your connection profile settings.

Manual configuration

Manual access to all configuration settings.

Statistics

See current statistics for all protocols.

View system status and log

Information on the status, past and present, of your device.

Maintenance

Update and backup your configuration or firmware.

Information

Contact us, technical support, etc...



Reset

Log out



Note The first time you access the web-based configuration interface, most of the options in the Administration section are not available. They are only activated once you have defined your configuration settings using the Internet wizard.

Saving configuration settings

Most pages in the configuration interface have a Save button. When you click this button, your changes are sent to the DIVA LAN ISDN Modem. However, for the changes to take effect, you must reset the DIVA LAN ISDN Modem. Do this by clicking the Reset button on the Manual Configuration menu.

Getting help

Context-sensitive help is available for each parameter. Simply click the parameter name to display its description.

On some pages, you can get general information about the page by clicking the question mark that appears on the title bar.

General settings and connection profiles

Before you begin customizing your configuration, you should familiarize yourself with how the DIVA LAN ISDN Modem organizes its configuration settings.

Configuration settings are split into two groups: general settings and connection profile settings.

General settings

General settings apply to the DIVA LAN ISDN Modem as a whole, and cover global settings like system time, password, ISDN phone numbers, phones lines, etc.

Connection profile settings

A connection profile is a group of configuration settings that define the characteristics of an incoming or outgoing connection. Each profile has a number of settings that you can customize.

Connection profile types

The DIVA LAN ISDN Modem supports two profiles: ISP and Corporate. Both can be active at the same time, allowing you to handle different types of connections.

ISP profile

This profile is created by the Internet wizard. It defines the settings for a connection to the Internet. You can use the Manual Configuration option to customize the settings of this profile.

Corporate profile

This profile is provided so you can define the settings for a connection to a remote corporate network. See Chapter Eight for more information.

Editing the ISP profile

After you have defined your connections with the Internet wizard, it may be necessary to fine tune certain parameters manually. To do this, you need to edit the ISP profile settings. Although it is possible to change the names of this profile, it is not recommended.

To edit the ISP profile

1. Start the web-based configuration interface and log in. The DIVA LAN ISDN Modem displays the Main configuration menu.

DIVA LAN ISDN Modem Configuration main menu



Quick start

[Internet wizard](#) - Quickly create a connection to the Internet.
[Phone line wizard](#) - Quickly set up your phone lines.

Administration *These options are only fully enable once you complete a connection Wizard*

[Connection profiles](#)

Configure your connection profile settings.

[Manual configuration](#)

Manual access to all configuration settings.

[Statistics](#)

See current statistics for all protocols.

[View system status and log](#)

Information on the status, past and present, of your device.

[Maintenance](#)

Update and backup your configuration or firmware.

[Information](#)

Contact us, technical support, etc...





2. Click *Connection profiles*. The DIVA LAN ISDN Modem displays the Connection Profiles list page.

Connection profiles

Select a connection profile to edit.

	Profile	State		
1	ISP	Enabled	<input type="button" value="Edit"/>	<input type="button" value="Dial"/>
2	CORPORATE	Enabled	<input type="button" value="Edit"/>	<input type="button" value="Dial"/>

Configuration changes you Save when editing a profile are only activated after you click Reset.

3. Click *Edit* for the ISP profile. The DIVA LAN ISDN Modem displays the Profile page.

4. Use the menu bar to navigate between the six configuration pages: Profile, Connection, IP, RIP, Authentication, and Callback. For a description of each parameter, just click the parameter name. The DIVA LAN ISDN Modem will display a help window.
5. When you are done with your settings, click *Finish*, then click *Save*.
6. To activate the settings you must reset the DIVA LAN ISDN Modem. Click the *Reset* button on the Connection Profiles list page.

Editing LAN settings

The LAN parameters page defines the settings for the LAN created by the Ethernet hub built into the DIVA LAN ISDN Modem. You need to modify these settings if:

- you need to assign a specific (static) IP address to it. This is usually the case when installing on an existing LAN. See page 104 for more information.
- you want to alter the routing information protocol (RIP) settings the DIVA LAN ISDN Modem uses on the LAN. For more information see “The Routing Information Protocol (RIP)” on page 117.

To edit the LAN profile

1. On the Manual Configuration menu, click *LAN*. The DIVA LAN ISDN Modem displays the LAN Parameters page.

2. Make your configuration changes. For a description of each parameter, just click the parameter name. The DIVA LAN ISDN Modem will display a help window.
3. Click *Save*.
4. Click *Reset*.

Saving and restoring configuration files

The web-based configuration interface makes it easy to save and restore configuration settings on the DIVA LAN ISDN Modem. This is useful for backup purposes, or if you intend to maintain several different configurations.

When you save the configuration settings, they are stored in a file on your computer.

To save/restore configuration settings

1. On the Main Configuration menu, click *Maintenance*. The DIVA LAN ISDN Modem displays the Maintenance page.

Menu	
Firmware <i>Backup and/or upgrade firmware</i>	Configuration <i>Backup and/or restore config file</i>

2. Click *Configuration*. The DIVA LAN ISDN Modem displays the Configuration maintenance page.

Configuration maintenance	
Backup current configuration	
Save an image of the current configuration to a file on your computer	<input type="button" value="Backup"/>
Restore saved configuration	
Restore a previously saved configuration from your computer. It is recommended that you <i>backup</i> your current configuration <i>before</i> you replace it.	
<input type="text"/>	<input type="button" value="Browse..."/> <input type="button" value="Restore"/>
Reset to factory default	
Resetting to factory default will erase all your configurations	<input type="button" value="Reset factory settings"/>
<input type="button" value="Back to menu"/>	

3. Click *Backup* to save your configuration settings to a file on your computer.

Viewing status information

Click Status on the Main configuration menu to view real-time status information. The DIVA LAN ISDN Modem will open a new browser window containing the System status page.

System status									
ISDN									
Line 1 is: L1 Down	Line 2 is: L1 Down								
Profile									
ISP	Ready								
CORPORATE	Ready								
Front panel display									
B1	B2	D	LNK	E1	E2	E3	E4/C	FLT	PWR
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
(automatically refreshed every 10 seconds)									
<input type="button" value="Refresh now"/>					<input type="button" value="Close"/>				

System status

Indicates the status of each of your ISDN channels (via front panel lights).

The status of each profile is also shown. It can be one of the following:

- *Connected*: The profile is in use for a data connection.
- *Ready*: The profile is ready to make a connection.
- *Pause before dialing*: Profile is about to dial out.
- *Failed*: The profile was disabled automatically because:
 - The profile failed to connect and exceeded the retry limit. See “Connection retries” on page 103.
 - The profile exceeded the defined call thresholds. See “Data call thresholds” on page 52
- *Disabled*: The profile was disabled manually.

Front panel display

Shows the status of the front panel LEDs. See “DIVA LAN ISDN Modem indicator lights” on page 147 for more information.

Obtaining statistics

The DIVA LAN ISDN Modem records a view variety of statistics, which you can use for information and troubleshooting purposes.

Click Statistics on the Main configuration menu, then choose the type of statistics you want to view from the menu bar. For example, the following screen shows ISDN statistics.

Statistics				
<u>ISDN</u>	<u>PPP</u>	<u>Current call</u>	<u>System</u>	<u>Profiles</u>
<u>Ethernet</u>	<u>IP</u>	<u>Last call</u>	<u>ICMP</u>	<u>DHCP</u>

ISDN Statistics				
=====				
Chan 1: Rx char:	0	Tx char:	0	Errors: 0
Chan 2: Rx char:	0	Tx char:	0	Errors: 0

Refresh Now	Automatic Refresh
-------------	-------------------

Click the *Automatic Refresh* button to have the page updated every 4 seconds. Otherwise, click the *Refresh Now* button to update the statistics when you require them.

Upgrading the DIVA LAN ISDN Modem firmware

Eicon Technology posts the latest DIVA LAN ISDN Modem firmware on its web site. You can automatically update your DIVA LAN ISDN Modem to this version by using the web configuration program.

To upgrade the firmware

1. On the Main configuration menu, click *Maintenance*.
2. Click *Firmware*. The DIVA LAN ISDN Modem displays the Firmware Maintenance page.

Firmware maintenance

Download firmware
Visit the Eicon Technology web site to get the latest available firmware.
Requires an Internet connection Visit

Backup firmware
Save an image of the currently installed firmware to a file on your computer Backup

Upgrade firmware
Load a new firmware image onto the DIVA LAN ISDN Modem from your computer.
(All configuration settings are preserved.)
It is recommended that you *backup* your currently installed firmware *before* you upgrade it.

Browse... Upgrade

Be patient! After you click the Upgrade button, there will be a delay while the file is being transferred.

Back to menu

3. Click the *Backup* button. This retrieves a copy of the current firmware that is loaded on the DIVA LAN ISDN Modem. Save it to disk, just in case you encounter problems installing or using the new firmware.
4. To retrieve new firmware from the Eicon web site, click the *Visit* button. This points your web browser to the DIVA LAN ISDN Modem firmware upgrade page on the Eicon Technology web site.
5. Select the latest firmware release on this site and download it. Save it in the following folder on your computer:

Eicon\DIVA LAN ISDN Modem\ELM

By default this folder is located in:

c:\Program Files\

However, it may be located elsewhere, depending on where you installed your DIVA LAN ISDN Modem software.

6. When the download is done, return to the Firmware Maintenance page.
7. Click the *Browse* button.
8. Select the new firmware file you downloaded, or if you want to upgrade from the CD, open the following folder on the CD: \Firmware and select the file: **rtrrow.elm**
9. Click the *Upgrade* button to upload the firmware to the DIVA LAN ISDN Modem. When done, the DIVA LAN ISDN Modem is automatically reset to activate the new firmware.

Resetting to factory defaults

Resetting the DIVA LAN ISDN Modem to factory defaults will erase all your configuration settings, including the system password. You may want to consider backing up your current configuration, as explained on page 46, before you reset to factory defaults.

To reset the DIVA LAN ISDN Modem to factory defaults

1. On the Main Configuration menu, click *Maintenance*. The DIVA LAN ISDN Modem displays the Maintenance page.

Menu	
Firmware <i>Backup and/or upgrade firmware</i>	Configuration <i>Backup and/or restore config file</i>

2. Click *Configuration*. The DIVA LAN ISDN Modem displays the Configuration maintenance page.

Configuration maintenance	
Backup current configuration	
Save an image of the current configuration to a file on your computer	<input type="button" value="Backup"/>
Restore saved configuration	
Restore a previously saved configuration from your computer. It is recommended that you <i>backup</i> your current configuration <i>before</i> you replace it.	
<input type="text"/>	<input type="button" value="Browse..."/> <input type="button" value="Restore"/>
Reset to factory default	
Resetting to factory default will erase all your configurations	<input type="button" value="Reset factory settings"/>
<input type="button" value="Back to menu"/>	

3. Click *Reset factory settings*.

Note If you changed the LAN IP address of the DIVA LAN ISDN Modem from its default setting of 192.168.1.1, then you will lose contact with the web configuration interface after the reset is completed. The reset will return the DIVA LAN ISDN Modem to its default of 192.168.1.1.

Minimizing ISDN Charges

ISDN billing practices vary from flat-rate monthly services to per-call billing to per-minute usage fees. To help you reduce your ISDN charges, the DIVA LAN ISDN Modem provides you with several cost-cutting configuration options. Use this chapter to find the best options for use on your ISDN line.

The Cost Control page

For your convenience, the DIVA LAN ISDN Modem groups the most commonly used options for reducing your ISDN charges on the Cost Control page.

To define Cost Control settings

Click *Cost Control* on the Manual configuration menu. The DIVA LAN ISDN Modem displays the following page:

Cost Control

Idle timer links

Go and adjust the idle timer for profile [ISP](#) or profile [CORPORATE](#).

Data call thresholds

Enable Data call threshold monitoring? ☒

Threshold monitoring interval: Days

Maximum duration of calls: Hours

Maximum number of calls:

ISDN billing interval

Initial billing interval: seconds

Recurring billing interval: seconds

Idle timer

Each profile has its own idle timer. The idle timer controls how long a data call stays connected when no traffic is being sent or received. When the idle timer expires, the DIVA LAN ISDN Modem disconnects the call at the end of the next billing interval.

If you set the idle timer to 0, the call will never be disconnected due to an absence of traffic, and you will have to disconnect the call manually. This can be useful for AO/DI connections.

To set the idle timer

1. Click the name of the profile you want to adjust the idle timer for. The DIVA LAN ISDN Modem displays the Connection profile parameters page.

Connection profiles ?

Connection parameters

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

Telephone number 1:

Telephone number 2:

Backup telephone number 1:

Backup telephone number 2:

ISDN call type:

Remote X.25 address:

Compression? ☐

Manual dialing only? ☐

Idle timer: seconds

Max retries:

Retry delay: seconds

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

2. Set the *Idle timer*.
3. Click *Finish*.
4. Click *Save*.
5. Click *Reset*.

Data call thresholds

By defining data call thresholds, you are able to limit the total number of calls or total length of calls made by any one profile during a set period of time. This is especially useful as a safety measure if you have devices that may inadvertently generate a large number of calls or may stay connected indefinitely.

The threshold monitoring interval is set in days. During this interval, the DIVA LAN ISDN Modem tracks the duration and number of calls each profile makes. You can set two different limits to watch for:

- *Maximum duration of calls:* Sets the maximum number of hours a profile can be connected during the threshold monitoring interval. Range: 0 (disabled), 1 to (24 * number of days in the interval).
- *Maximum number of calls:* Set the maximum number of calls a profile can make during the threshold monitoring interval. Range: 0 (disabled) to 1000

If a profile exceeds either limit, all profiles are disabled. You must reset the DIVA LAN ISDN Modem to re-activate the profiles (or dial them manually to connect). Doing either also resets the threshold interval. (To determine if a profile has been disabled, click Connection Profiles on the Configuration main menu.)

ISDN billing intervals

A billing interval is the minimum amount of connection time your ISDN provider recognizes. For example, many ISDN providers use a one minute interval, which means you pay the same amount whether you are connected for ten seconds, or sixty seconds. Sometimes, two intervals are used, one for the first minute, and one for each subsequent minute.

It is to your advantage to stay connected for the entire length of your billing interval. This helps avoid situations where a connection is established to transmit or receive a small amount of data, taken down, then immediately brought up again moments later.

The DIVA LAN ISDN Modem has two timers that let you manage your billing intervals.

- **Initial Billing Interval:** Sets the minimum amount of time that an ISDN B-channel will be enabled.
- **Recurring Billing Interval:** Sets the minimum amount of time that an ISDN B-channel remains enabled after the Initial Billing Interval expires.

These timers should be set to match the billing intervals used by your ISDN provider. For example, if your ISDN provider charges a flat fee for the first minute, and then bills every 40 seconds thereafter, you would set the intervals as follows.

- Initial Billing Interval = 60 seconds
- Recurring Billing Interval = 40 seconds

This ensures that each time an ISDN B-channel is enabled, it stays active for at least 60 seconds. This avoids a situation where a B-channel is enabled only for 30 seconds, dropped, then enabled again a few seconds later. If a B-channel is up for more than 60 seconds, then the interval is reduced to 40 seconds.

The billing interval timers work in conjunction with the idle timer. When the idle timer expires, the B-channel is dropped at the end of the next billing interval.

Configuring BACP

The bandwidth allocation protocol (BACP) works in conjunction with the MLPPP connection protocol to regulate usage of your ISDN line. The DIVA LAN ISDN Modem uses BACP to monitor incoming and outgoing traffic, and to open or close the second ISDN B-channel as the traffic volume warrants. This reduces your communications charges by ensuring that two ISDN channels are never active when one is sufficient.

You customize how BACP opens and closes B-channels by setting the following parameters.

- **Delay for opening the 2nd B-channel:** Sets the amount of time data traffic on the first ISDN B-channel must exceed the specified Threshold value, for BACP to bring up the second B-channel.
- **Threshold for opening the 2nd B-channel:** Sets the percentage of total bandwidth on the first B-channel that must be exceeded.
- **Delay for closing the 2nd B-channel:** Sets the amount of time data traffic on the first ISDN B-channel must be below the specified Threshold value, for BACP to drop the second B-channel.
- **Threshold for closing the 2nd B-channel:** Sets the percentage of total bandwidth on the first B-channel that traffic must be below, for BACP to drop the second B-channel.

The relationship between these parameters is best illustrated with an example. Assume the parameters are set as follows:

- Delay for opening the 2nd B-channel: 5
- Threshold for opening the 2nd B-channel: 50
- Delay for closing the 2nd B-channel: 5
- Threshold for closing the 2nd B-channel: 40

When traffic on the first B-channel exceeds 32 kbps (50% of 64 kbps) for five seconds, BACP enables the second B-channel. The second B-channel remains active until traffic on the first B-channel falls below 25.6 kbps (40% of 64 kbps).

To configure BACP

Each profile that uses BACP will have its own BACP settings. To configure BACP for a profile, do the following:

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to configure BACP for. You will see the following page.

Connection profiles ?

Profile

Profile | Connection | IP | RIP | Authentication | Callback | FINISH

Profile name:

Enable profile? ☒

Protocol: More...

Backup profile:

Profile restore delay: seconds

Profile | Connection | IP | RIP | Authentication | Callback | FINISH

3. If you have not selected *MLPPP + BACP* as the *Protocol*, do so now.

- Click the *More* button next to the Protocol field. You will see the following page.

Connection profiles : BACP parameters

Delay for opening the 2nd B-channel: seconds

Threshold for opening the 2nd B-channel: %

Delay for closing the 2nd B-channel: seconds

Threshold for closing the 2nd B-channel: %

- Set the BACP parameters as required.
- Click *Save*.
- Click *Finish*.
- Click *Save*.
- Click *Reset*.

Configuring AO/DI

AO/DI lets you maintain a permanent connection to the Internet or a corporate network, without tying up an expensive ISDN B-channel. AO/DI accomplishes this by using the ISDN D-channel to establish a low-bandwidth (9.6 kbps) connection with your ISP or corporate network. When incoming or outgoing traffic exceeds the capabilities of the D-channel, AO/DI automatically invokes one or more B-channels to handle the increased traffic.

Some advantages of AO/DI include:

- Makes maintaining a permanent connection to the Internet more cost effective. With such a connection, remote users can connect with the DIVA LAN ISDN Modem from any remote location that has Internet access. This eliminates the need to dial in via ISDN. (To make the connection permanent you must set the idle timer to 0. See page 51.)
- Ideal solution for connecting to a remote corporate network, because low-bandwidth keep alive traffic can use the D-channel, instead of constantly bringing up a B-channel.

You customize how AO/DI opens and closes B-channels by setting the following parameters.

- Delay for opening the 1st B-channel:** Sets the amount of time data traffic on the ISDN D-channel must exceed the specified Threshold value, for AO/DI to bring up the first B-channel.
- Threshold for opening the 1st B-channel:** Sets the percentage of total bandwidth on the D-channel that must be exceeded, for AO/DI to bring up the first B-channel.
- Delay for closing the 1st B-channel:** Sets the amount of time data traffic on the ISDN D-channel must be below the specified Threshold value, for AO/DI to drop the first B-channel.
- Threshold for closing the 1st B-channel:** Sets the percentage of total bandwidth on the D-channel that traffic must be below, for AO/DI to drop the first B-channel.
- Delay for opening the 2nd B-channel:** The amount of time data traffic on the first B-channel must exceed the specified Threshold value, for AO/DI to bring up the second B-channel.
- Threshold for opening the 2nd B-channel:** Sets the percentage of total bandwidth on the first B-channel that must be exceeded, for AO/DI to bring up the second B-channel.
- Delay for closing the 2nd B-channel:** Sets the amount of time data traffic on the first B-channel must be below the specified Threshold value, for AO/DI to drop the second B-channel.
- Threshold for closing the 2nd B-channel:** Sets the percentage of total bandwidth on the first B-channel that traffic must be below, for AO/DI to drop the second B-channel.

- **Mode:** Determines ISDN line usage when AO/DI is enabled.
 - *D-Channel Only:* Data is only transferred on the D-channel.
 - *Normal:* Data is transferred on the D-channel, plus both B-channels if required.
- **Dial prefix:** Specifies the prefix to dial when making a call. For example, 1 to call long distance, or 9 to obtain an external line
- **X.25 transmit queue threshold:** Specifies the transmit queue threshold, in bytes, for X.25 on the D-channel. When queued data exceeds this limit, for the period of time specified for the parameter *Delay for opening the 1st B-channel*, the first B-channel is brought up. This parameter performs a similar function to *Threshold for opening the 1st B-channel*, and can be used concurrently with that parameter.

To configure AO/DI

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to configure AO/DI for. You will see the following page.

3. If you have not selected *MLPPP + AO/DI* as the *Protocol*, do so now.
4. Click the *More* button next to the Protocol field. You will see the following page.

5. Set the AO/DI parameters as required.
6. Click *Save*.
7. You are now ready to configure the X.25 parameters. See the next section in this chapter.

X.25 on the D-channel

During normal ISDN operation, the D-channel is used for signalling traffic purposes (call setup, call take down, caller ID, etc.) However, the full bandwidth of the D-channel is not needed for this. AO/DI takes advantage of the extra 9.6 kbps that is available to establish an X.25 packet-switched connection to a remote site.

Therefore, to take advantage of AO/DI, the remote site must support X.25 and you must properly configure the following X.25 settings on the DIVA LAN ISDN Modem.

The following parameters should be set based on the values supplied by your ISP or remote corporate network.

- **Local DTE address:** Sets the X.25 DTE address assigned to the DIVA LAN ISDN Modem. Specify up to 15 digits.
- **Maximum window size:** Defines the maximum number of X.25 packets that can be outstanding (not acknowledged by the remote). When this number is reached, transmission is paused. Maximum window size can never be exceeded. If a larger window size is requested when the call is established, it is negotiated downward so that the Maximum window size is respected.
- **Default window size:** The window size used when a X.25 call is made. This value cannot be larger than the value of *Maximum window size*.
- **Maximum packet size:** The maximum size of an X.25 packet. Maximum packet size can never be exceeded. If a larger packet size is requested when the call is established, it will be negotiated downward so that the Maximum packet size is respected.
- **Default packet size:** The packet size used when a X.25 call is made. This value cannot be larger than the value of *Maximum packet size*.
- **Number of VCs:** Specify the number of two-way virtual circuits supported on your D-channel. The DIVA LAN ISDN Modem supports up to four VCs.
- **ISDN TEI type:** Determines how TEI assignment takes place.
 - Dynamic: TEIs are dynamically assigned by the switch.
 - Shared: Enables TEI sharing. Some switches only make two TEIs available for an ISDN line. Therefore, enable this option if you need three dynamically assigned TEIs (two B and one D). This shares the TEI between channels B1 and D. Requires AO/DI.
 - Static: Lets you manually specify the TEI assignment for the D-channel.
- **Static TEI number:** If static was selected for ISDN TEI type, enter the TEI number you want to assign to the D-channel.

To configure X.25 settings

1. Click *Connection* on the menu bar. You will see the following page:

Connection profiles ?

Connection parameters

Profile | **Connection** | IP | RIP | Authentication | Callback | FINISH

Telephone number 1:

Telephone number 2:

Backup telephone number 1:

Backup telephone number 2:

ISDN call type:

Remote X.25 address:

Compression? ☐

Manual dialing only? ☐

Idle timer: seconds

Max retries:

Retry delay: seconds

Profile | **Connection** | IP | RIP | Authentication | Callback | FINISH

2. Set the *Remote X.25 address* parameter to the address of the remote site you want to communicate with.
3. Click *Finish*.
4. Click *Save*.

5. On the Manual configuration menu, click *X.25*. The DIVA LAN ISDN Modem displays this page:

X.25 parameters

Edit X.25 parameters

Local X.25 address:

Maximum window size:

Default window size:

Maximum packet size:

Default packet size:

Number of VCs:

ISDN TEI type:

Static TEI number:

6. Set the X.25 parameters as required.
7. Click *Save*.
8. Click *Reset*.

Setting ISDN active intervals

By defining ISDN active intervals, you can place restrictions on when data calls can be made or received.

To set ISDN active intervals

1. On the Manual configuration menu, click *ISDN active intervals*.

ISDN active intervals ?

ISDN active intervals status

Enable ISDN active intervals? ☐

Edit ISDN active intervals - specify when calls will be allowed

Rule	Day	Time (starting & ending)
1	[- Not Used -]	00:00 - 00:00
2	[- Not Used -]	00:00 - 00:00
3	[- Not Used -]	00:00 - 00:00
4	[- Not Used -]	00:00 - 00:00
5	[- Not Used -]	00:00 - 00:00
6	[- Not Used -]	00:00 - 00:00
7	[- Not Used -]	00:00 - 00:00
8	[- Not Used -]	00:00 - 00:00
9	[- Not Used -]	00:00 - 00:00
10	[- Not Used -]	00:00 - 00:00

Cancel

Reset Form

Save

2. For each interval specify the day of the week it applies to, and the starting and ending times. Make sure you set the system clock, so the time and date on the DIVA LAN ISDN Modem are accurate. You may also want to enable the time client option for automatic updating of the system clock.
3. Click *Save*.
4. Click *Reset*.

Spoofing NetBIOS services


The NetBIOS protocol is used by Windows 95/98/NT to support Microsoft Windows Network Neighborhood, the MAP NETWORK option in Windows Explorer, and various DOS-based networking commands (such as net use, net view, and net logon). To maintain these services, NetBIOS regularly exchanges bookkeeping messages between connected systems. This can cause increased ISDN charges as the line is brought up just to transfer these messages.

The DIVA LAN ISDN Modem provides several options that let you choose the level of NetBIOS support you want to maintain.

- **All:** The DIVA LAN ISDN Modem forwards all NetBIOS traffic to the remote site. No cost savings is achieved.
- **Intelligent:** The DIVA LAN ISDN Modem spoofs (replies to without forwarding) all unnecessary traffic NetBIOS messages to reduce usage of the ISDN line. This option provides full support for all Network Neighborhood functions.
- **Minimal:** The DIVA LAN ISDN Modem reduces NetBIOS traffic to a minimum. This options does not support Network Neighborhood functions. However, it does provide support for the MAP NETWORK option in Windows Explorer and DOS-based networking commands such as net use, net view, and net logon.
- **None:** The DIVA LAN ISDN Modem discards all NetBIOS traffic. NetBIOS services are not supported across the ISDN link.

To enable spoofing of NetBIOS services

1. On the Manual configuration menu, click *IP*.
2. Click General.

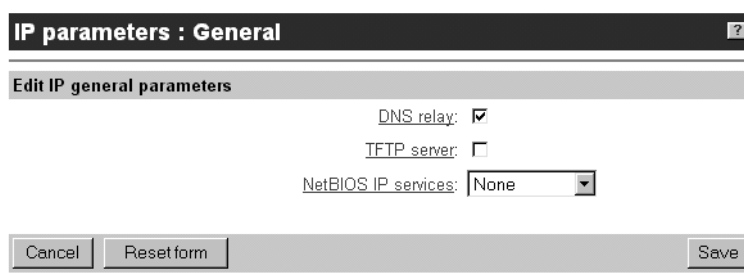

IP parameters : General

Edit IP general parameters

DNS relay: ☒

TFTP server: ☐

NetBIOS IP services: None

Cancel Reset form Save

3. Select the *NetBIOS IP services* option you require.
4. Click *Save*.
5. Click *Reset*.

Data compression

Data compression increases the effective throughput of a B-channel by encoding data so that fewer bits are required to represent it. Popular compression algorithms typically reduce the size of the data by 50 percent, effectively doubling the rate at which it is transmitted.

However, not all types of data lend themselves to such high compression ratios. If you are transmitting ZIP files, JPG or GIF images, MPEG files, or other data that has already been storage-optimized, activating compression can have very little effect on throughput. This occurs because the compression algorithm can only achieve a small reduction in file size, which is offset by the processing overhead required for the sender to compress the file and the receiver to uncompress it. Therefore, you should determine if the traffic on your link is suitable for compression before you enable it.

The compression algorithm used is automatically negotiated by the DIVA LAN ISDN Modem and the remote site when the connection is established. The DIVA LAN ISDN Modem supports most popular compression standards, including: Hi-fn STAC, Microsoft MPPC, and Ascend.

You can enable/disable compression for each connection profile individually.

1. On the Configuration main menu, click *Connection Profiles*.
2. Click Edit for the profile you want to configure compression for.
3. Click *Connection* on the menu bar. You will see the following page.

4. Check the *Compression* box.
5. Click *Finish*.
6. Click *Save*.
7. Click *Reset*.

Manual dialing

ISDN active intervals lets you control costs by specifying time ranges when the ISDN link can be used. However, there may be certain situations where direct control of the ISDN link is desirable. The manual dialing option gives you this control.

Each profile can be configured to use manual dialing only. If you enable this option and password protect the DIVA LAN ISDN Modem, you effectively put ISDN access under direct manual control of authorized users.

To enable manual dialing

1. Click *Connection Profiles* on the Configuration main menu.
2. Click *Edit* for the profile you want to configure.
3. Click *Connection* on the menu bar. You will see the following page:

The screenshot shows a web-based configuration interface titled "Connection profiles" with a help icon (?). The "Connection parameters" tab is selected. The interface includes several input fields and checkboxes for configuring a connection profile. The fields are: "Telephone number 1:", "Telephone number 2:", "Backup telephone number 1:", "Backup telephone number 2:", "ISDN call type:" (with a dropdown menu set to "Normal"), "Remote X.25 address:", "Compression?" (checkbox), "Manual dialing only?" (checkbox), "Idle timer:" (set to 120) seconds, "Max retries:" (set to 25), and "Retry delay:" (set to 30) seconds. At the bottom, there is a navigation bar with tabs: "Profile", "Connection", "IP", "RIP", "Authentication", "Callback", and "FINISH".

Profile	Connection	IP	RIP	Authentication	Callback	FINISH
Telephone number 1: <input type="text"/>						
Telephone number 2: <input type="text"/>						
Backup telephone number 1: <input type="text"/>						
Backup telephone number 2: <input type="text"/>						
ISDN call type: Normal						
Remote X.25 address: <input type="text"/>						
Compression? <input type="checkbox"/>						
Manual dialing only? <input type="checkbox"/>						
Idle timer: <input type="text" value="120"/> seconds						
Max retries: <input type="text" value="25"/>						
Retry delay: <input type="text" value="30"/> seconds						

4. Check the *Manual dialing only* box.
5. Click *Finish*.
6. Click *Save*.
7. Click *Reset*.

Restricting analog calls

Generally, most of the activity on the ISDN line will be created by data traffic. That is why the most of the settings in this section are targeted at data calls. However, in some cases, you may want to place some restrictions on analog use of the ISDN line.

Each phone port has a *type of calls* setting which you can use for cost control purposes. It allows you to restrict traffic as follows:

- allow incoming calls only
- allow outgoing calls only
- allow all calls
- do not allow any calls

To restrict analog calls

1. On the Manual Configuration menu, click *ISDN and phone ports*. The DIVA LAN ISDN Modem displays the ISDN parameters page.
2. Select the phone port you want to restrict calls on. The DIVA LAN ISDN Modem displays the ISDN phone line parameters page. For example:

The screenshot shows a web-based configuration interface titled "ISDN phone line parameters". At the top, there is a dropdown menu labeled "Define settings for:" with "Phone port 1" selected. Below this, there are several configuration options: "Main telephone number for this port:" followed by a text input field; "Type of calls supported:" followed by a dropdown menu showing "Outgoing only"; "Support modem/fax only?" with an unchecked checkbox; "Enable distinctive ring?" with an unchecked checkbox; "Enable call waiting?" with a checked checkbox; and "Additional telephone number for this port:" followed by another text input field. At the bottom of the form, there are two buttons: "Reset form" on the left and "Save" on the right.

3. Set the *Type of calls supported* parameter.
4. Click *Save*.
5. Click *Reset*.

Data over voice

In some regions, ISDN voice calls cost less than ISDN data calls. You can configure the DIVA LAN ISDN Modem to take advantage of this discrepancy to reduce your ISDN charges. When you enable data over voice support, the DIVA LAN ISDN Modem establishes all data calls as voice calls. This does not affect the throughput of your call, the only change is in how the call is billed.

Note To use data over voice, the remote site you are calling must also support this feature.

To enable data over voice

Data over voice can be enabled separately for each profile.

1. Click *Connection Profiles* on the Configuration main menu.
2. Click *Edit* for the profile you want to configure.
3. Click *Connection* on the menu bar. You will see the following page:

The screenshot shows the 'Connection profiles' configuration window with the 'Connection parameters' tab selected. The window has a dark header with the title 'Connection profiles' and a help icon. Below the header is a navigation bar with tabs: 'Profile', 'Connection', 'IP', 'RIP', 'Authentication', 'Callback', and 'FINISH'. The 'Connection' tab is active. The main content area contains the following fields and controls:

- Telephone number 1:** A text input field.
- Telephone number 2:** A text input field.
- Backup telephone number 1:** A text input field.
- Backup telephone number 2:** A text input field.
- ISDN call type:** A dropdown menu currently set to 'Normal'.
- Remote X.25 address:** A text input field.
- Compression?:** A checkbox, currently unchecked.
- Manual dialing only?:** A checkbox, currently unchecked.
- Idle timer:** A text input field with '120' and the unit 'seconds'.
- Max retries:** A text input field with '25'.
- Retry delay:** A text input field with '30' and the unit 'seconds'.

At the bottom of the window is a footer bar with the same navigation tabs as the top: 'Profile', 'Connection', 'IP', 'RIP', 'Authentication', 'Callback', and 'FINISH'.

4. Set *ISDN call type* to *Data over voice*.
5. Click *Finish*.
6. Click *Save*.
7. Click *Reset*.

Traffic filtering

By using the DIVA LAN ISDN Modem's IP filters, you can selectively drop outgoing traffic to reduce your communications charges. This can be useful if you have applications on your LAN that regularly send non-critical traffic across the ISDN link.

For more information on filters, see "IP filters" on page 119.

Chapter Six

Security

Connecting your computers to the internet or a remote corporate LAN creates a wide range of benefits, but also exposes your computers to certain risks. To safeguard your data and systems, the DIVA LAN ISDN Modem provides a comprehensive range of security features. This chapter explains how to use and configure each feature for optimal protection of your systems.

Security features

This table lists all security features offered by the DIVA LAN ISDN Modem, and their default settings.

Feature	Default	Description
System password	None	Restricts access to the DIVA LAN ISDN Modem configuration interfaces.
Automatic log out	Active	Automatically terminates idle configuration sessions.
Network address translation (NAT)	Active	NAT hides the addresses of the computers on the internal Ethernet LAN from the external network.
Remote management	Disabled	Permits remote systems to log on to the DIVA LAN ISDN Modem configuration interfaces (Web or CLI).
Incoming data calls	Disabled	Permits the DIVA LAN ISDN Modem to answer incoming data calls.
Call screening	Disabled	Allows you to accept incoming data calls from specific phone numbers only.
Call authentication	Always authenticate	Lets you validate incoming data calls, or respond to authentication requests when making outgoing data calls.
Callback	Disabled	Forces the remote site to call back to establish the connection.
Manual dialing	Disabled	Enables you to manually control when the ISDN link is established.
Custom security using IP filters	None	Enables you to filter specific IP datagrams for security reasons.

The following table lists the security features that can be applied to restrict access to the DIVA LAN ISDN Modem configuration interfaces.

Source system	Connected via	Security features that apply
Remote computer	ISDN	<ul style="list-style-type: none"> • System password • Automatic log out • Remote Management • Answer incoming data calls • Call screening • Call authentication • Custom security using IP filters
Local computer	Ethernet	<ul style="list-style-type: none"> • System password • Automatic log out • Custom security using IP filter
Local computer	Serial	<ul style="list-style-type: none"> • System password
Telephone	Phone port	<ul style="list-style-type: none"> • (Only available when the ISDN is not connected.)

System password

The DIVA LAN ISDN Modem provides a system password that restricts access to the Web-based configuration interface and the CLI. This ensures that configuration changes can only be made by authorized personnel.

By default, no password is defined.

To set the system password

1. On the Manual Configuration menu, click *System*.
2. Enter the system password in the *Login Password* and *Repeat Login Password* fields.

System parameters

Edit system parameters

Current firmware revision:

System name: .lanmodem

Login password:

Repeat login password:

Enable remote management: ☐

Set time: : : (HH:MM:SS)

Set date: - - (YYYY-MM-DD)

Log output: Remote IP address: (if log sent to remote)

3. Click *Save*.
4. Click *Reset*.

To erase the system password

It can happen that you might forget your system password. The only way to erase the system password is to reset the DIVA LAN ISDN Modem to its factory defaults. This also returns all configuration settings to their default values. See “Resetting the DIVA LAN ISDN Modem” on page 150 for instructions.

Automatic log out


The DIVA LAN ISDN Modem applies an automatic time out to configuration sessions. When a configuration session is idle for more than the time out value, the DIVA LAN ISDN Modem automatically logs the user out. This reduces the risk of unauthorized persons taking advantage of a logged-in computer that has been left unattended. Time outs are not configurable and are set as follows:

- If you are using the web interface, the time out is 30 minutes.
- If you are using Telnet, the time out is 5 minutes.
- If you are using a direct serial connection, there is no time out.

Note Changes that have not been saved are lost when the configuration session is terminated.

Network address translation

The DIVA LAN ISDN Modem uses network address translation (NAT) to “hide” the local LAN it creates from all external resources. The benefits of this are the ability for all connected computers to access the Internet using one Internet address and ISP account. For example, when communicating with the Internet, these four computers share the dynamically assigned address 222.182.22.39.

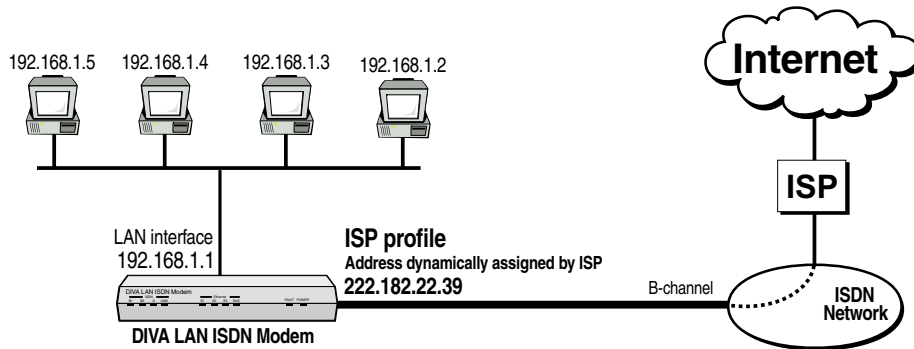

NAT operates transparently, translating internal addresses to a single external one for all data traffic. There is no effect on throughput.

Most applications will work with NAT. For a list of applications that have been tested by Eicon Technology, see the release notes on the DIVA LAN ISDN Modem CD.

NAT is enabled by default, and it is recommended that you do not turn it off unless you have a specific requirement to do so.

(For more information on IP addressing see “About IP addresses” on page 111.)

Security benefits

An additional benefit of NAT is increased network security. Like a firewall, NAT restricts access to the computers that reside on the local LAN. By default, no computer on the internal LAN is visible to the external network the DIVA LAN ISDN Modem is connected to. This applies to the Internet, as well as a corporate network. Computers on the internal network cannot act as FTP or web servers, nor can they share their drives using Windows Network Neighborhood. These security features can be weakened if you use NAT static mappings.

NAT static mappings

For those cases where you want to create an FTP or web server, or need a computer on the internal LAN to be *visible* to the external network, the DIVA LAN ISDN Modem provides a solution. You can define NAT static mappings.

How it works

NAT static mappings allow you to designate specific computers on the internal LAN to receive certain incoming network traffic. For example, you could designate a computer to receive all incoming HTTP traffic, essentially allowing it to function as a web server. However, the actual IP address of this computer is still hidden by NAT. Therefore, remote users must specify the address of the DIVA LAN ISDN Modem to gain access to the web server.

When you create a NAT static mapping, the DIVA LAN ISDN Modem routes *all* traffic for the protocol you specify to the designated computer. This includes traffic normally handled by the DIVA LAN ISDN Modem itself. This leads to the following restrictions:

- Remote access to the configuration interfaces on the DIVA LAN ISDN Modem via the ISDN link can be disrupted. For example, if you designate a computer to receive HTTP traffic, remote access to the web configuration interface will be disrupted. Local access via Ethernet will still be possible however.

- Only *one* computer on the internal LAN can be designated to receive the traffic for a *specific* protocol. This means, for example, you cannot create multiple web servers or FTP servers.

Default NAT server

When the DIVA LAN ISDN Modem receives incoming datagrams containing protocols it does not handle, it discards them. For example, if an incoming datagram contains an FTP request and no FTP server has been defined using a static mapping, the data is discarded.

In some cases, you may want to forward these datagrams to a specific computer. The DIVA LAN ISDN Modem calls this computer, the *default NAT server*.


To define a default NAT server, enter the IP address of the device that should receive these datagrams into the *Default NAT server* parameter on the IP Parameters panel (see page 70).

Note The DIVA LAN ISDN Modem handles traffic with the following protocols: HTTP, Telnet, TFTP, ECHO (UDP port 7), and SNMP. Only traffic that does not contain these protocols will be forwarded to the default NAT server. To forward these protocols you must define a NAT static mapping for each one.

Running a web or FTP server

Two of the most common reasons to use NAT static mappings are to run a web server or FTP server on a computer connected to the DIVA LAN ISDN Modem.

Use the following diagram as a reference as you examine the NAT mapping examples that follow:

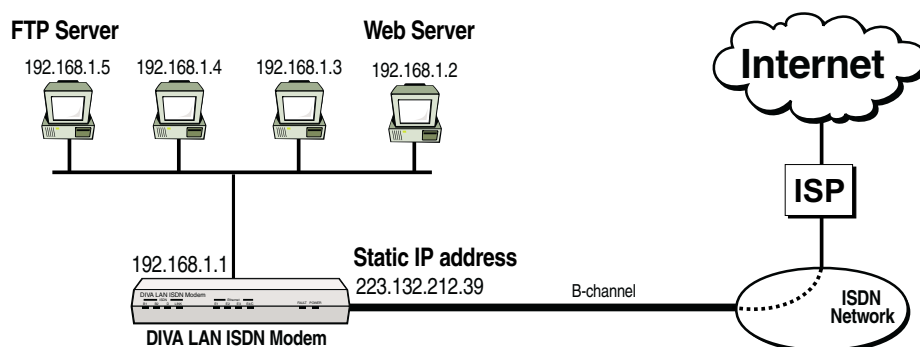

Configuring a NAT static mapping for a web server

Web traffic is carried on TCP port 80. Therefore, the following NAT mapping is required:

Map	Protocol	Server port	Server IP address
1	TCP	80	192.168.1.2

To access the web server, a remote computer uses the URL: HTTP://223.132.212.39/

The DIVA LAN ISDN Modem forwards all web traffic to the appropriate computer on the internal LAN.

Note Setting up a web server disables remote access (via the ISDN line) to the DIVA LAN ISDN Modem web interface. Local computers can still log in.

Configuring a NAT mapping for an FTP server

FTP traffic is carried on TCP ports 20 and 21. Therefore, the following two NAT mappings are required:

Map	Protocol	Server port	Server IP address
1	TCP	20	192.168.1.5
2	TCP	21	192.168.1.5

To create a static NAT mapping

1. On the Manual Configuration menu, click *IP*.
2. On the IP menu, click *NAT Static Mappings*.

IP parameters : NAT static mappings
?

Default NAT server

Default NAT server:

Edit NAT static mappings

Map	Protocol	Server port	Server IP address
1	None	0	0.0.0.0
2	None	0	0.0.0.0
3	None	0	0.0.0.0
4	None	0	0.0.0.0
5	None	0	0.0.0.0
6	None	0	0.0.0.0
7	None	0	0.0.0.0
8	None	0	0.0.0.0
9	None	0	0.0.0.0
10	None	0	0.0.0.0
11	None	0	0.0.0.0
12	None	0	0.0.0.0
13	None	0	0.0.0.0
14	None	0	0.0.0.0
15	None	0	0.0.0.0
16	None	0	0.0.0.0
17	None	0	0.0.0.0
18	None	0	0.0.0.0
19	None	0	0.0.0.0
20	None	0	0.0.0.0

You may enter a maximum of 20 NAT static mappings.

Cancel
Reset Form
Save

3. For each server that you want to define, specify the following parameters:
 - **Protocol:** Select the protocol that remote computers will use to access the server.
 - **Server port:** Enter the port number that the protocol will use on the server.
 - **Server address:** Enter the IP address of the computer that will act as the server. The server address must be on the same LAN as the DIVA LAN ISDN Modem (or must be reachable via the LAN).
4. Click *Save*.
5. Click *Reset*.


Remote management

By default, the DIVA LAN ISDN Modem does not allow remote devices to access its configuration interfaces via the ISDN link. This prevents unauthorized tampering when the DIVA LAN ISDN Modem has dialed out and is connected to the Internet or a remote corporate network.

To accomplish this security, all incoming HTTP and Telnet traffic on the ISDN line is automatically dropped. This effectively blocks remote computers from using the web-based interface, as well as the CLI (via Telnet).

This does not affect traffic on the local LAN created by the DIVA LAN ISDN Modem. Therefore, if the local LAN is connected to other networks, these computers will have access to the DIVA LAN ISDN Modem.

Consider the following topology:

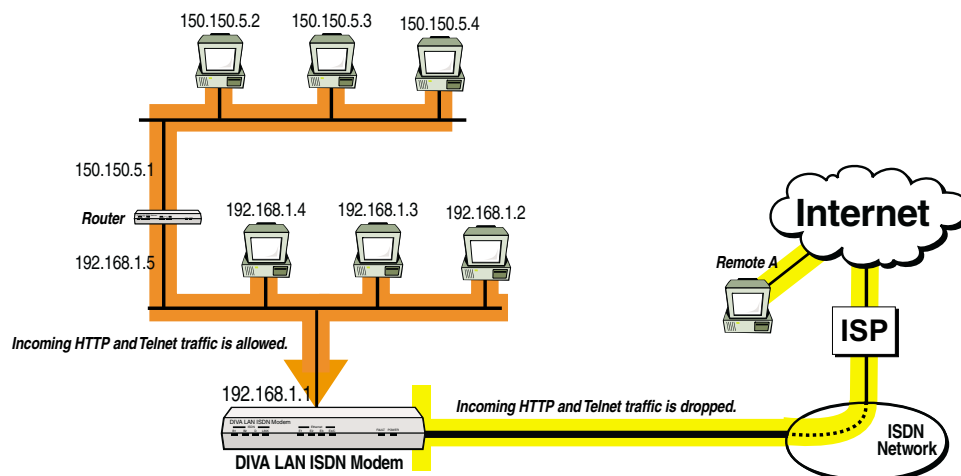

- In this example, all computers on the two LANs have access to the DIVA LAN ISDN Modem configuration interfaces.
- Remote computer A, however, is blocked.

Note Remote security is implemented using IP filtering (see page 119). Removing these filters will affect remote security.

To enable remote management

If you want to support remote configuration, you must enable the remote management option. This option can only be set with the web-based configuration interface.

1. On the Manual Configuration menu, click *System*.
2. Check the *Enable remote management* check box.

System parameters

Edit system parameters

Current firmware revision:

System name: diva.lanmodem

Login password:

Repeat login password:

Enable remote management: ☐

Set time: 5:44:45 (HH:MM:SS)

Set date: 1999-7-9 (MM-DD)

Get time and date

Log output: Send to remote

Remote IP address: 255.255.255.255 (if log sent to remote)

Cancel

Reset form

Save

3. Click *Save*.
4. Click *Reset*.

Note It is strongly suggested that you define a log in password if you enable remote management.

Incoming data calls

By default, the DIVA LAN ISDN Modem refuses all incoming ISDN data calls. This effectively shuts the door on unauthorized systems dialing-in. (Voice calls are not blocked by this setting.)

When support for incoming data calls is activated and an incoming call is received, the DIVA LAN ISDN Modem compares the user name and password supplied by the remote site against the remote user name and remote password configured for the ISP profile, then the CORPORATE profile. If a match is found, the call is accepted. Otherwise, the call is rejected. Therefore, to accept incoming data calls you must define call authentication settings for the appropriate profile (as explained in the steps below).

Note *Since the DIVA LAN ISDN Modem checks the ISP profile first, if both profiles have the same remote user name, the incoming call will always connect with the ISP profile.*

Incoming data calls can only be received if there is an available B-channel. To keep a free channel, you must use PPP (or V.120) for your existing connection. If you are using MLPPP, you will only be able to receive incoming voice calls if no data call is active. See “Choose a connection protocol” on page 19 for more information.

Note *When you enable callback support (page 76) using the web configuration interface, the DIVA LAN ISDN Modem automatically enables support for incoming data calls.*

Incoming calls and IP addressing

For an incoming call to successfully connect, you must define a proper IP addressing scheme for the profile that will handle the connection. This means setting the following three parameters: *IP address*, *Subnet mask*, and *Remote IP address*.

Generally, when you configure the DIVA LAN ISDN Modem to connect to the Internet, you set the *IP address* parameter to 0.0.0.0, which means that the address will be dynamically assigned by the ISP when the profile connects. When you receive an incoming call however, it may be the responsibility of the DIVA LAN ISDN Modem to assign an IP address to the caller. In this case, the static address you set for *Remote IP address* would be adopted by the caller.

The following diagram illustrates the effects of potential addressing schemes. (The subnet mask is omitted from this discussion, but should be set to match the IP address. See “About IP addresses” on page 111 for more information on masks.)

	DIVA LAN ISDN Modem		Remote Computer
1	IP address: <i>static</i> Remote IP address: <i>static</i>	Assigned to	IP address: <i>dynamic</i> Remote IP address: <i>dynamic</i>
2	IP address: <i>static</i> Remote IP address: <i>dynamic</i>	No assignments	IP address: <i>static</i> Remote IP address: <i>dynamic</i>
3	IP address: <i>static</i> Remote IP address: <i>static</i>	Addresses must match	IP address: <i>static</i> Remote IP address: <i>static</i>
4	IP address: <i>dynamic</i> Remote IP address: <i>dynamic</i>	Assigned to	IP address: <i>static</i> Remote IP address: <i>static</i>
5	IP address: <i>static</i> Remote IP address: <i>dynamic</i>	Fails	IP address: <i>dynamic</i> Remote IP address: <i>dynamic</i>
6	IP address: <i>dynamic</i> Remote IP address: <i>dynamic</i>	Fails	IP address: <i>static</i> Remote IP address: <i>dynamic</i>
7	IP address: <i>dynamic</i> Remote IP address: <i>dynamic</i>	Fails	IP address: <i>dynamic</i> Remote IP address: <i>dynamic</i>


Notes on the diagram

1. The DIVA LAN ISDN Modem provides an IP address to the remote computer.
2. Both the DIVA LAN ISDN Modem and the remote computer have their own fixed IP addresses so no assignments are made.
3. Both the DIVA LAN ISDN Modem and the remote computer have their own fixed IP addresses AND have specified remote addresses. This means they will only be able to connect if the remote addresses match the IP addresses of the other device.
4. The remote computer provides an IP address to the DIVA LAN ISDN Modem.
5. The remote computer has no IP address and the DIVA LAN ISDN Modem is not configured to supply one.
6. The DIVA LAN ISDN Modem has no IP address and the remote computer is not configured to supply one.
7. Neither device has an IP address and neither is configured to supply one.

To enable support for incoming data calls

To turn on and configure support for incoming calls, do the following:

1. On the Manual Configuration menu, click *Incoming data calls*. This displays the Incoming calls parameters page.

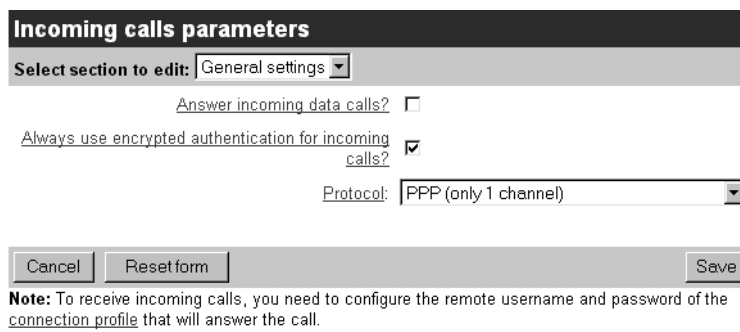

Incoming calls parameters

Select section to edit: General settings

Answer incoming data calls? ☐


Always use encrypted authentication for incoming calls? ☒

Protocol: PPP (only 1 channel)

Cancel Reset form Save

Note: To receive incoming calls, you need to configure the remote username and password of the connection profile that will answer the call.

2. Enable *Answer incoming data calls*.
3. Specify the type of password the DIVA LAN ISDN Modem expects the remote to send: encrypted or any (unchecked). If the supplied password is not in the proper format the call is rejected.
4. Choose the type of connection protocol to use for the call. The setting you make here takes precedence over the setting for the profile that will answer the call.
5. Click *connection profile* in the Note at the bottom of the page. The DIVA LAN ISDN Modem displays the Connection profiles list page.

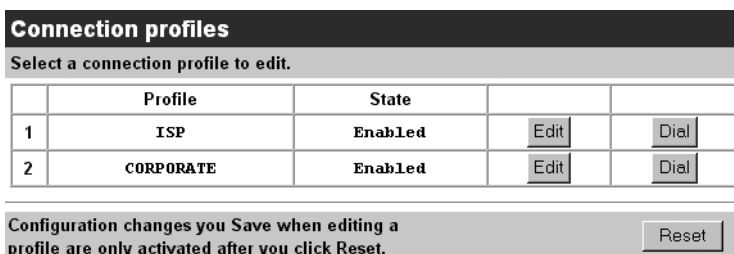

Connection profiles

Select a connection profile to edit.

	Profile	State		
1	ISP	Enabled	Edit	Dial
2	CORPORATE	Enabled	Edit	Dial

Configuration changes you Save when editing a profile are only activated after you click Reset.

Reset

6. Click *Edit* for the profile that will answer the call.
7. Click *Authentication*.
8. Define the *Remote username* and *Remote password* the DIVA LAN ISDN Modem expects the remote to send. See “Call authentication” on page 74 for more information.
9. Click *IP*.
10. Set *IP address*, *Subnet mask*, and *Remote IP address* as required.

11. Click *Finish*.
12. Click *Save*.
13. Click *Reset*.

Call screening

Call screening enables you to accept or reject incoming data calls based on their phone number. This is an effective way to limit dial-in access to the DIVA LAN ISDN Modem to a small group of remote sites.

To set up call screening

1. On the Manual Configuration menu, click *Incoming data calls*.
2. In the *Define settings for* box choose *Call screening*. You will see the following page.

First ISDN number	Second ISDN number
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>

3. Check the *Enable call screening* box.
4. Enter the phone numbers of the remote sites you want to receive calls from. Enter the same phone number under *First ISDN number* and *Second ISDN number*.
5. Click *Save*.
6. Click *Reset*.

Call authentication

Call authentication enables ISDN devices, like the DIVA LAN ISDN Modem, to validate the identity of the device at the other end of the line. Authentication works through the exchange of usernames and passwords. It can be one-way (either the caller gets validated or the callee gets validated) or two-way (both sides validate each other).

Generally, authentication is one-way, with the caller getting validated. For example:

- When the DIVA LAN ISDN Modem calls an ISP or a corporate network, it will be authenticated (i.e., it must supply a username and password to log on).
- When a remote computer calls the DIVA LAN ISDN Modem, it will be authenticated (i.e., it must supply a username and password for the call to be accepted).

To successfully use call authentication it is important that both devices are configured to support the same authentication options.

To set up call authentication

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to configure.
3. Click *Authentication* on the menu bar. You will see the following page:

The screenshot shows a web interface titled "Connection profiles" with a sub-tab "Authentication parameters". Below the title bar is a navigation menu with links: Profile, Connection, IP, RIP, Authentication (selected), Callback, and FINISH. The main content area contains several input fields and checkboxes: "Local username:" with the value "123", "Local password:" with the value "p0ak", "Always use encrypted password?" with an unchecked checkbox, "Always authenticate remote?" with an unchecked checkbox, "Remote username:" with an empty field, "Remote password:" with an empty field, and "Use SecurID?" with an unchecked checkbox. At the bottom, there is another navigation menu with the same links as the top one.

4. Specify the *Local username* and *Local password* this profile will send to the remote site during the authentication process. For example, the ISP profile uses these values to log on to your ISP account.
Note *Local username and Local password are case-sensitive.*
5. Specify the type of password the DIVA LAN ISDN Modem will send to the remote: encrypted or any (unchecked). If the remote is not using the same type of encryption, the call will be rejected.
Note *This setting applies to outgoing calls only.*
6. Enable *Always authenticate the remote* if you want the DIVA LAN ISDN Modem to ask the remote to identify itself with a username and password. The DIVA LAN ISDN Modem will compare the values the remote sends against the settings you make for *Remote username* and *Remote password*. Remote username and Remote password are case-sensitive.
Note *This setting applies to outgoing calls only. The DIVA LAN ISDN Modem always authenticates the remote when receiving an incoming call.*
7. Click *Finish*.
8. Click *Save*.
9. Click *Reset*.

Callback

Callback is another effective method to control access to the DIVA LAN ISDN Modem. When callback is enabled, the DIVA LAN ISDN Modem functions as a callback client, and the remote site being called functions as a callback server.

The client calls the server, hangs up, then waits for the server to call back to establish the connection.

The client calls the server, the connection is dropped or disconnected, then waits for the server to call back to re-establish the connection. While waiting for the server to call back, the DIVA LAN ISDN Modem may accept incoming calls that are not from the server. To ensure that only calls from the server are accepted you can use call authentication (set the *always authenticate remote* option as shown on page 74) to validate the incoming call.

Note *When you enable callback using the web configuration interface, the DIVA LAN ISDN Modem automatically enables support for incoming data calls (page 72).*

Callback modes

Two callback modes are available. Each provides different features. For callback to work, both client and server must use the same mode.

Callback control protocol

This is a Microsoft-developed solution. It is used by NT4, and devices from Cisco, Ascend, and other vendors.

NCP enables you to specify a time delay before the server calls back, and supports both the user specified and administrator specified options.

ISDN callback

Unlike the callback control protocol, the server does not answer the initial call from the DIVA LAN ISDN Modem when using ISDN callback mode. Therefore, there is no charge for the call. This can be advantageous if you are making a lot of calls without a flat-rate package, or are making long distance calls.

ISDN modem only works with Cisco IOS. It uses caller ID information to return the call. Therefore, caller ID must be enable on your line to use this mode.

Callback options

Two callback options are available: user specified and administrator specified.

User specified

This option requires that the DIVA LAN ISDN Modem supply the server with the callback number to use. If the server is on a PBX, or must dial long distance, you may need to include appropriate dialing prefixes. Contact the system administrator of the server to determine the exact requirements.

The main advantage of this option is that if you change the DIVA LAN ISDN Modem's ISDN phone numbers, you do not have to inform the server, since you supply the phone number with each call.

Administrator specified

With this option, the DIVA LAN ISDN Modem does not supply the server with a number to dial. Instead, the remote identifies the DIVA LAN ISDN Modem by its caller ID or information supplied during call authentication. The server then consults a pre-configured table to determine the number to dial.

The main advantage of this option is centralized security. The server maintains a list of all valid clients, with their physical phone numbers and security information.

Delay before host calls back

This option is only supported by the callback control protocol. It allows you to specify the amount of time the server waits before calling back. The DIVA LAN ISDN Modem proposes the delay during callback negotiation. The server can either accept or reject it.


Timeout waiting for callback

Sets the amount of time the DIVA LAN ISDN Modem waits for the server to call back. During this time, the DIVA LAN ISDN Modem may accept calls that are not from the callback server unless you use call authentication (set the *always authenticate remote* option as shown on page 74) to validate the incoming call.

To set up callback

Note When you enable callback using the web configuration interface, the DIVA LAN ISDN Modem automatically enables support for incoming data calls (page 72).

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to configure callback for.
3. Click *Callback* on the menu bar. You will see the following page.

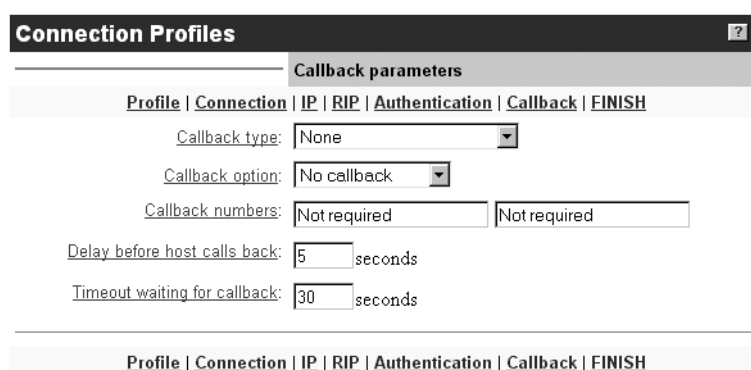

Connection Profiles ?

Callback parameters

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

Callback type:

Callback option:

Callback numbers:

Delay before host calls back: seconds

Timeout waiting for callback: seconds

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

4. Configure the callback parameters as required by your setup.
5. Click *Finish*.
6. Click *Save*.
7. Click *Reset*.

Manual dialing

The DIVA LAN ISDN Modem automatically establishes the ISDN link whenever there is outgoing data traffic. There may be certain situations where this is not desirable and you will want to have manual control of ISDN usage. The manual dialing option gives you this control.

Each profile can be configured to use manual dialing only. If you enable this option and password protect the DIVA LAN ISDN Modem, you effectively put ISDN access under direct manual control of authorized users.

To enable manual dialing

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to configure.

3. Click *Connection* on the menu bar. You will see the following page:

Connection profiles

Connection parameters

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

Telephone number 1:
Telephone number 2:
Backup telephone number 1:
Backup telephone number 2:
ISDN call type: Normal
Remote X.25 address:
Compression?
Manual dialing only?
Idle timer: 120 seconds
Max retries: 25
Retry delay: 30 seconds

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

4. Enable *Manual dialing only*.

5. Click *Finish*.

6. Click *Save*.

7. Click *Reset*.

Custom security features

By using IP filters you can create your own custom security solutions. For example:

- limiting local access to the DIVA LAN ISDN Modem for certain computers
- accepting incoming traffic only from certain remote users or networks
- dropping incoming or outgoing nuisance traffic

For more information see “IP filters” on page 119.

Setting up the Phone Ports

If you purchased a DIVA LAN ISDN Modem with analog ports, you are able to use ordinary telephones, answering machines, fax machines, and modems over your ISDN line. This chapter explains how to configure the DIVA LAN ISDN Modem to support these analog devices.

Also in this chapter are instructions for assigning phone numbers to phone and data ports and configuring supplementary calling services.

Assigning phone numbers

The DIVA LAN ISDN Modem provides flexible support for the assignment of phone numbers.

Single number

If you have one ISDN number, it is used for both data calls, and voice calls. When an incoming call is received, the DIVA LAN ISDN Modem will automatically determine if the call is voice or data, and route the call appropriately.

Multiple numbers

If your ISDN line supports multiple subscriber numbering (MSN), the DIVA LAN ISDN Modem allows you to assign two numbers to each PHONE port. Each number will sound with a different (distinctive) ring pattern so you can identify incoming calls properly. (You can swap the distinctive rings. See page 82 for details.)

Voice calls can be assigned to many numbers. Data calls can only be assigned to one number. However, you can choose to share a number between data and voice. When an incoming call is received, the DIVA LAN ISDN Modem will automatically determine if the call is voice or data, and route the call appropriately.

Main number

If you have multiple numbers on your line, then one number (usually the first) is designated as the *main number*, *directory number*, or *number that appears on your phone bill*. This has significance for certain services like Favorit Internet in Denmark, who will reject your data call if you are not calling from your *main number*. If you need to connect to a service with this type of restriction, make sure that your *main number* is assigned to the data port.

Examples

If you have five numbers, you could assign them as follows:

	1st number	2nd number
Data calls (in/out)	main number	(does not apply)
PHONE port 1	number 2	number 4
PHONE port 2	number 3	number 5

If you have four numbers, you could assign them as follows:

	1st number	2nd number
Data calls (in/out)	main number	(does not apply)
PHONE port 1	number 2	number 3
PHONE port 2	main number	number 5

Use of secondary numbers and TeleDanmark's Duet service

TeleDanmark's Duet service offers, as a package, a mobile phone number along with ISDN basic access and three directory numbers. With this service, if the mobile phone is switched off, calls placed to the mobile phone number are automatically forwarded to a specific directory number as assigned by TeleDanmark.

To make use of this service with the DIVA LAN ISDN Modem, you would enter this 'mobile forwarding' number in the secondary number field in order to receive the forwarded calls.

For example, suppose you are assigned three numbers: 555-1111 (which you want to use for the telephone), 555-2222 (which you want to use for your fax), and 555-3333 (your mobile forwarding number). You connect your telephone to phone port 1 and your fax machine to phone port 2. To configure this on the DIVA LAN ISDN Modem, you need to:

- Set the main telephone number of PHONE port 1 to 555-1111
- Set the additional telephone number for PHONE port 1 to 555-3333
- Set the main telephone number of PHONE port 2 to 555-2222

In this scenario, calls placed to your mobile phone are forwarded to 555-3333 if the mobile phone is not on.

Answering calls to unassigned numbers

The DIVA LAN ISDN Modem allows you to assign a port the status of having ‘no directory number’ (referred to as having been assigned a ‘blank’ DN). A port assigned a blank DN will answer any calls dialed to numbers not configured elsewhere.

For example, suppose you have four directory numbers assigned to your ISDN line: 555-1111, 555-2222, 555-3333, and 555-4444. You enter 555-1111 as the primary number for phone port 1 and 555-2222 as its secondary number. The primary and secondary numbers for phone port 2 are left blank.

In this scenario, a call placed to 555-1111 is sent to phone port 1. A call placed to 555-2222 is also sent to phone port 1 (as it is the secondary number for that port). However, a call placed to either 555-3333 or 555-4444, both of which have not been configured on any other ports, will be sent to phone port 2.

Assigning phone numbers using the Phone Line Wizard

The Phone Line Wizard makes it easy to assign ISDN phone numbers to your PHONE ports. To assign MSN (multiple subscriber numbering) numbers, you must use the manual configuration method described in the next section.

1. Click *Phone Line Wizard* on the Main configuration page.

Phone Line Wizard Define Phone Numbers ?

Use the checkbox to indicate which ports your analog phones are connected to. Then enter the phone number you want to assign to each port.

Port 1: ☐

Port 2: ☐

Cancel Finish

2. Enter the phone numbers you want to assign to each port.
3. If you do not have an analog device into a port, deselect the check box associated with the port.
4. Click *Finish*.

Assigning phone numbers manually

If you want to assign MSN numbers, you must use this method.

1. On the Manual Configuration menu, click *ISDN and phone ports*. The DIVA LAN ISDN Modem displays the ISDN phone line parameters page.

2. In the *Define settings for* box, choose the phone port you want to define settings for. DIVA LAN ISDN Modem displays the following page:

ISDN phone line parameters

Define settings for: Phone port 1

Main telephone number for this port:

Type of calls supported: Outgoing only

Support modem/fax only? ☐

Enable distinctive ring? ☐

Enable call waiting? ☒

Additional telephone number for this port:

Reset form Save

3. Set phone numbers as follows:
 - **Main telephone number for this port:** Specify the ISDN phone number you want to assign to this port.
 - **Additional telephone number for this port:** Specify the MSN number you want to assign to this port.
 - **Enable distinctive ring:** If you enable this option the distinctive ring patterns assigned to the two phone numbers are swapped.
4. Click *Save*.
5. Click *Reset*.

Configuring phone numbers for data calls

Follow these steps to set the phone number to use for incoming and outgoing data calls.

1. On the Manual Configuration menu, click *ISDN and phone ports*. The DIVA LAN ISDN Modem displays the ISDN phone line parameters page.
2. In the *Define settings for* box, choose *Data port*. The DIVA LAN ISDN Modem displays the following page:

ISDN phone line parameters

Define settings for: Data port

Select your country: International

Enable call bumping? ☒

Telephone number to use for data: ☐ 5551111 ☐ 5552222 ☒ 5553333

Reset form Save

3. Make a selection for the *Telephone number to use for data* field. The first two choices show the numbers assigned to PHONE ports 1 and 2. (If you have not assigned phone numbers, these two choices will be blank). If you choose one of these numbers, then it will be shared for voice and data calls. The main drawback to sharing numbers is that only one port can use the number at a time. Therefore, if a voice call is in progress, data cannot be sent or received.

Use the third choice to specify a distinct number for data calls. For example:

ISDN phone line parameters

Define settings for: **Data port**

Select your country: **International**

Enable call bumping? ☒

Telephone number to use for data: ☐ 5551111
☐ 5552222
☒ 5553333

4. Click *Save*.
5. Click *Reset*.

Connecting modems and fax machines

If you are using a PHONE port to connect an analog modem or fax machine, the DIVA LAN ISDN Modem lets you configure the port for better throughput. Note that although you will still be able to make voice calls on the port, some ISDN phones may not work in this mode and supplementary services (Call Hold, Call Waiting, etc.) is disabled.

To enable support for fax/modem

1. On the Manual Configuration menu, click *ISDN and phone ports*. The DIVA LAN ISDN Modem displays the ISDN phone lines parameters page.
2. In the *Define settings for* box, choose the phone port you want to enable phone/fax support on. The DIVA LAN ISDN Modem displays the following page:

ISDN phone line parameters

Define settings for: **Phone port 1**

Main telephone number for this port:

Type of calls supported: **Outgoing only**

Support modem/fax only? ☐

Enable distinctive ring? ☐

Enable call waiting? ☒

Additional telephone number for this port:

3. Enable the *Support modem/fax only* parameter. This sets the bearer capability of the outgoing call to 3.1 KHz audio, which provides better throughput when using faxes and modems. Support for supplementary services is disabled.
4. Click *Save*.
5. Click *Reset*.

Connecting multiple analog devices

You can connect more than one phone (or analog device) to each of the PHONE ports. One way to do this is to plug your existing telephone extension wiring (which has several telephone sockets chained together) into one of the DIVA LAN ISDN Modem PHONE ports.

Call bumping

Call bumping, more formally known as dynamic bandwidth allocation (DBA), allows you to share the ISDN line between data and analog calls. This enables you to send and receive faxes, or make phone calls, while at the same time downloading data from the Internet with your computers.

How it works

When you enable call bumping, incoming or outgoing analog calls can *bump* one B-channel of an active data connection to gain access to the ISDN line. This ensures that a line is almost always available for your voice or fax calls.

A sample call bumping scenario

- A data connection using MLPPP is in progress. It is currently using both ISDN channels to transfer a large database (both B-channel LEDs are green).
- Suddenly, that important phone call you were expecting arrives. As soon as the phone rings, the data connection automatically drops one of the ISDN B-channels, reducing throughput from 128 kbps to 64 kbps, and the voice call is connected. One of the B-channel LEDs will change from green to orange, indicating a voice call is active.
- When the call is done you hang up the phone. Automatically, the data connection re-establishes the second B-channel and brings throughput back up to 128 kbps.

Call bumping works in the same manner if you pick up the phone and place an outgoing call.

Requirements

To support call bumping:

- you must be using Multilink PPP (MLPPP), as your connection protocol. See the section “Choose a connection protocol” on page 19 for more information on MLPPP.
- your ISDN line must support the Call Waiting supplementary service.

To enable call bumping

1. On the Manual Configuration menu, click *ISDN and phone ports*. The DIVA LAN ISDN Modem displays the ISDN phone line parameters page.
2. In the *Define settings for* box, choose *Data port*. The DIVA LAN ISDN Modem displays the following page:

ISDN phone line parameters

Define settings for: Data port

Select your country: International

Enable call bumping? ☒

Telephone number to use for data:

☒ <None>

☐ <None>

☐

Reset form Save

3. Click the *Enable call bumping* check box.
4. Click *Save*.
5. Click *Reset*.

Restricting analog calls

Generally, most of the activity on the ISDN line will be created by data traffic. That is why the most of the settings in this section are targeted at data calls. However, in some cases, you may want to place some restrictions on analog use of the ISDN line.

Each phone port has a *type of calls* setting which you can use for cost control purposes. It allows you to restrict traffic as follows:

- allow incoming calls only
- allow outgoing calls only
- allow all calls
- do not allow any calls

To restrict analog calls

1. On the Manual Configuration menu, click *ISDN and phone ports*. The DIVA LAN ISDN Modem displays the ISDN phone line parameters page.
2. In the *Define settings for* box, choose the phone port you want to restrict calls on. The DIVA LAN ISDN Modem displays the following page:

The screenshot shows a web form titled "ISDN phone line parameters". Below the title is a dropdown menu labeled "Define settings for:" with "Phone port 1" selected. The form contains several fields and checkboxes: "Main telephone number for this port:" followed by a text input field; "Type of calls supported:" followed by a dropdown menu showing "Outgoing only"; "Support modem/fax only?" with an unchecked checkbox; "Enable distinctive ring?" with an unchecked checkbox; "Enable call waiting?" with a checked checkbox; and "Additional telephone number for this port:" followed by a text input field. At the bottom of the form are two buttons: "Reset form" on the left and "Save" on the right.

3. Set the *Type of calls supported* parameter.
4. Adjust the configuration settings. Use the following information as a guide:
5. Click *Save*.
6. Click *Reset*.

Supplementary services

The supplementary services described in this section only work if they are supported by your ISDN service provider and if they are enabled on your ISDN line. Contact your ISDN Service Provider for more information on the calling features that are available in your area and the provisioning of your ISDN connection.

If you attempt to use a calling feature that is not available to you, you will hear four beeps (called the service failure tone) through your telephone handset.

The following table lists the calling features supported by the DIVA LAN ISDN Modem. Each feature is described in more detail later in this chapter.

Feature	Supported in
Call Hold	All countries
Call Waiting	All countries
Calling Line Identity on Call Waiting	Australia, China, Denmark, Hong Kong, Ireland, Singapore, United Kingdom
Calling Line Identity Presentation	Australia, China, Denmark, France, Hong Kong, Ireland, Singapore, Sweden, United Kingdom, United Arab Emirates
Calling Line Identity Restriction (CLIR)	Denmark, Ireland, United Kingdom
Call Forwarding	Sweden. For other regions check with your ISDN service provider to determine if this feature is supported.
Malicious Caller ID	Sweden. For other regions check with your ISDN service provider to determine if this feature is supported. Not supported in Australia.
Call Redirection between Analog Ports	All countries
Three-party Conference Call	All countries
Terminal Portability	All countries

To enable supplementary services

1. On the Manual Configuration menu, click *ISDN and phone ports*. The DIVA LAN ISDN Modem displays the ISDN phone line parameters page.
2. In the *Define settings for* box, choose the phone port you want to enable calling features for. DIVA LAN ISDN Modem displays the following page:

3. *Enable distinctive ring* or *Enable call waiting* as required.
4. Click *Save*.
5. Click *Reset*.

Call Hold

Call Hold lets you suspend your current call (placing it on hold), and make a second call to another destination. You can then toggle back and forth between the two calls.

To put a call on hold

1. With a voice call active, press R.
2. The person you are speaking with is placed on hold, and you hear a dial tone.
3. Dial the number of the second party.

To switch between held calls

1. Press R, then wait for a dial tone.
2. Press 2.

To disconnect the current call and continue with the other

1. Press R, then wait for a dial-tone.
2. Press 1.

If you hang up while a call is on hold, the connection remains active and full communication charges may apply. To indicate that a call is still on hold, the phone will ring for 30 seconds (15 seconds in Denmark and Sweden). After this time, you are connected to the call that is on hold.

Call Waiting

Call Waiting alerts you to a second incoming call during an active call. This feature is available as a service through your ISDN line (referred to as *ISDN Call Waiting*) and also from the DIVA LAN ISDN Modem itself (referred to as *DIVA LAN ISDN Modem Call Waiting*).

DIVA LAN ISDN Modem Call Waiting

DIVA LAN ISDN Modem Call Waiting uses the second B-channel (if available) to receive a second incoming call and offer it to you. However, if both B-channels are in use, the DIVA LAN ISDN Modem Call Waiting cannot offer you a call, and the second caller will hear a busy signal.

To enable DIVA LAN ISDN Modem Call Waiting

1. Lift the receiver, then wait for a dial tone.
2. Press *43#.
3. Three rising tones are played to confirm that Call Waiting has been enabled.

To disable DIVA LAN ISDN Modem Call Waiting

1. Lift the receiver, then wait for a dial tone.
2. Press #43#.
3. Three falling tones are played to confirm that Call Waiting has been disabled.

To determine if DIVA LAN ISDN Modem Call Waiting is enabled

1. Lift the receiver, then wait for a dial tone.
2. Press *#43#.
3. If enabled, you will hear three rising tones; if disabled, you will hear three falling tones.

ISDN Call Waiting

ISDN Call Waiting is handled by your provider and does not need an available B-channel.

To enable ISDN Call Waiting

ISDN Call Waiting can only be enabled by your ISDN service provider. If you are unsure if your ISDN line has this feature, check with your provider.

Using Call Waiting when alerted to a second incoming call

These commands apply to both DIVA LAN ISDN Modem Call Waiting and ISDN Call Waiting. To use the following keypad commands, your ISDN line must also support Call Hold.

To ignore an incoming call

Do nothing. The two beeps will repeat once more, ten seconds later.

To reject an incoming call

1. Press R.
2. Wait for a dial-tone.
3. Press 0.
4. The incoming caller will receive a busy signal. Call Waiting will also be disabled for the duration of the call.

To disconnect from the current call and accept the incoming call

1. Press R.
2. Wait for a dial-tone.
3. Press 1.

To place the first call on hold and answer the incoming call

1. Press R.
2. Wait for a dial-tone.
3. Press 3.
4. Once the call is on hold, you can toggle back and forth between the two parties by pressing R, then 2. To disconnect from the current call and reconnect to the held call, press R, then 1.

Notes on Call Waiting behavior

The following situations apply if you are on the phone and a second call comes in:

If ...	Then ...
<ul style="list-style-type: none"> • ISDN Call Waiting is enabled. 	<ul style="list-style-type: none"> • You will hear a Call Waiting alert. • Call switching is handled by your ISDN service provider.
<ul style="list-style-type: none"> • ISDN Call Waiting is not enabled. • DIVA LAN ISDN Modem Call Waiting is not enabled. 	<ul style="list-style-type: none"> • You do not receive a Call Waiting alert. • The second call receives a busy signal.
<ul style="list-style-type: none"> • ISDN Call Waiting is not enabled. • DIVA LAN ISDN Modem Call Waiting is enabled. • Both B-channels are in use. 	<ul style="list-style-type: none"> • The second call receives a busy signal., as the DIVA LAN ISDN Modem Call Waiting requires a free B-channel to hold the call.
<ul style="list-style-type: none"> • ISDN Call Waiting is not enabled. • DIVA LAN ISDN Modem Call Waiting is enabled. • One B-channel is free. 	<ul style="list-style-type: none"> • You hear a Call Waiting alert. • The second call is received using the available B-channel. • Call switching is handled by the DIVA LAN ISDN Modem.

Notes on call bumping

If ISDN Call Waiting is disabled, call bumping will not occur, as MultiLink PPP uses the Call Waiting signalling information from your service provider to determine if it should release a B-channel to accommodate an incoming voice call.

Calling Line Identity on Call Waiting

Calling Line Identity on Call Waiting works with telephones equipped with a call display indicator. With this feature, if you are on the phone and another call comes in, the number of the second incoming call is displayed.

In Denmark, this feature is known as CallerID Plus. CallerID Plus does not display the identity of the second call automatically; when you receive a call waiting signal, you must press R, then 9.

Calling Line Identity Presentation

Calling Line Identity Presentation works with telephones equipped with a call display indicator. When you receive an incoming call, the number of the call is displayed.

Calling Line Identity Restriction (CLIR)

This feature permits you to restrict calling line identity on outgoing calls on a per-call basis. Currently this feature is supported on the phone ports only.

To restrict identification on a per-call basis, you must enter a code before dialing the number. This code depends on your region.

Denmark

1. Lift the receiver.
2. Dial *31# followed by the number you wish to call.

If you have CLIR permanently enabled on your line, you can temporarily disable it using the prefix #31#.

United Kingdom and Ireland

In these regions, you must dial 141 before dialing the destination number. For example, if you were calling 5551234, you would dial 1415551234.

If you have CLIR enabled permanently on your line, you can temporarily disable it with the prefix 1470 in the U.K. and 142 in Ireland.

Call Forwarding

When enabled, call forwarding automatically transfers incoming calls to another number. This feature is supported in Sweden. It may be supported in other regions. Check with your ISDN service provider for availability.

Note *The call forwarding codes used in the following sections are those in use in Sweden. These codes may not be the same as those used in your region.*

To forward incoming calls when your line is busy

1. Lift the receiver, then wait for a dial tone.
2. Press *67*.
3. Enter the telephone number to which calls are to be forwarded.
4. Press #.

To deactivate, lift the receiver, wait for a dial tone, press #67#.

To forward incoming calls if they are not answered within 28 seconds

1. Lift the receiver, then wait for a dial tone.
2. Press *61*.
3. Enter the telephone number to which calls are to be forwarded.
4. Press #.

To deactivate, lift the receiver, wait for a dial tone, press #61#.

To forward incoming calls to an announcement machine

1. Lift the receiver, then wait for a dial tone.
2. Press *24*.
3. Enter the announcement code.
4. Press #.

To deactivate, lift the receiver, wait for a dial tone, press #24#.

To forward incoming calls to an operator

1. Lift the receiver, then wait for a dial tone.
2. Press *230#.

To deactivate, lift the receiver, wait for a dial tone, press #230#.

To forward all incoming calls to a fixed number

1. Lift the receiver, then wait for a dial tone.
2. Press *22#.

To deactivate, lift the receiver, wait for a dial tone, press #22#.

To forward all incoming calls to a number you specify

1. Lift the receiver, then wait for a dial tone.
2. Press *21*.
3. Enter the telephone number to which calls are to be forwarded.
4. Press #.

To deactivate, lift your receiver, wait for a dial tone, press #21#.

To detect if Call Forwarding is active

If you are not sure whether or not this service is currently activate, lift the receiver and listen for the dial tone. If the tone is fast and intermittent, the service is active. If the tone is continuous, the service is not active.

Malicious Caller Identification

Malicious Caller Identification allows you to register a calling number with your ISDN service provider. This feature requires that Call Hold be supported by your ISDN line.

To invoke Malicious Caller Identification

1. While you are on a call, or up to 30 seconds after the malicious caller has hung up, press R, then wait for a dial-tone.
2. Press *39#.
3. If you were on a call, you are automatically reconnected.

Call redirection between analog ports

If two analog devices are connected to your DIVA LAN ISDN Modem, you can transfer a call from the device on one port to the device on the other. For example, you can transfer a call from the phone on port PHONE 1 to the phone on port PHONE 2. (This is also referred to as “internal transfer.”) To receive the transferred call, the second device must be on hook and not ringing.

This feature requires call hold to be supported by your ISDN service.

To transfer a call to the other analog port

1. Press R. The current call is put on hold (you will hear a dial tone).
2. Press ‘*’, then hang up. The call is transferred to the other phone port and the phone connected to this port rings.
3. When the second analog device answers, the transfer is complete.

To transfer the current call with a call on hold

To make the following directions easier to follow, the current call is designated as call 1 and the call on hold is designated as call 2.

1. Press R. Call 1 is put on hold (you will hear the dial tone)
2. Press *. Call 1 is transferred to the other phone port and the device connected to this port rings. You are automatically connected to call 2.
3. When the second device answers, the transfer is complete. Note that you cannot retrieve call 1 without disconnecting call 2.

Other options

To cancel the transfer, lift the receiver of the initiating device and press *R. The call is then re-established with the first device.

If the second device can not accept the redirected call (it is busy or ringing), the device initiating the transfer will ring. The call can then be answered and communication re-established.

If the second device does not answer within 30 seconds (90 seconds in Denmark and Sweden), the call is cleared. Note that communication charges may apply while the transferred call is ringing (see “Call Hold” on page 87).

Three-party Conference Call

This feature lets you speak with up to two people at the same time. Once a Three-party Conference Call is set up, you may drop a call and continue with the other caller, or you put the one caller on hold while staying connected to the other caller.

Setting up a Three-party Conference Call

1. Dial the first number.
2. When the call connects, press R.
3. Dial the second number.
4. When the call connects, press R.
5. Press 3 to start the conference call.

Drop a party while conference is active

During the Three-party Conference Call, you can press R,1 to disconnect the last-connected party and continue talking to the remaining party.

Splitting and reconnecting the calling parties

During the Three-party Conference Call, you can press R,2 to place the last connected party on hold and talk exclusively with the first-connected party.

At this point you can press R,1 to disconnect the current call and switch to the call on hold; R,2 to switch between the two calls; or R,3 to re-establish the conference call (see “Call Hold” on page 87).

Terminal Portability

Terminal Portability allows you to transfer an active analog call from the DIVA LAN ISDN Modem to another ISDN terminal (an ISDN phone, for example) that shares the ISDN link with the DIVA LAN ISDN Modem. Both the DIVA LAN ISDN Modem and the other device must be using the same BRI.

To transfer the active call to a separate ISDN device

1. Press R.
2. Press *79#. If you hear a dial tone, the call has been transferred successfully. You can hang up the phone.

Note *If the transfer fails, you are reconnected to the active call.*

To resume a call

1. Lift the receiver of the phone with which you want to resume the call.
2. Press *79#. The call is resumed.

Using call identity

You can use call identity numbers to identify transferred calls. This works as follows:

To transfer the active call to a separate ISDN device using call identity

1. Press R.
2. Press *79**num*#. Replace *num* with a one, two, or three digit number. If you hear a dial tone, the call has been transferred successfully. You can hang up the phone.

Note *If the transfer fails, you are reconnected to the active call.*

To resume a call using call identity

1. Lift the receiver of the phone with which you want to resume the call.
2. Press *79**num*#. Replace *num* with the one, two or three digit number that was used when the call was transferred. The call is resumed.


Connecting to a Corporate Network

Intranets are an effective way for organizations to share data and resources. The DIVA LAN ISDN Modem makes it easy for branch offices and telecommuters to connect to a corporate Intranet.

This chapter explains how to configure the DIVA LAN ISDN Modem to connect with a remote network only. If you need to connect to the Internet and a remote network at the same time, see “Concurrent Internet and Intranet connections” on page 110.

Overview

This option enables you to connect one or more computers to your corporate LAN for intranet web browsing, e-mail, and file transfer. Generally, this type of connection takes place via a direct, dial-up ISDN link with the corporate LAN. For example:

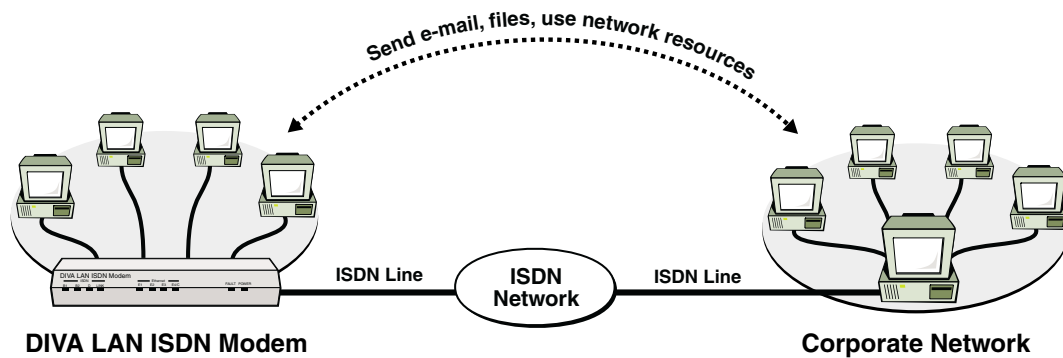

Note The *DIVA LAN ISDN Modem* cannot be used on both sides when connecting to a corporate network. The corporate network must have its own gateway.

To set up a connection to your corporate network you need to perform the following steps as detailed in this chapter:

- Step 1. Gather information
- Step 2. Configure the Corporate profile

1. Gather information

Contact your corporate network administrator and record the following information:

Item	Description
ISDN number(s) of corporate network	This is the phone number the DIVA LAN ISDN Modem will dial to access the corporate network. A backup number may also exist in case the primary number is busy or unavailable.
User name	Name the DIVA LAN ISDN Modem will use to log on to the corporate network. If your corporate network is an NT network, you may need to specify a domain name and user name pair. For example: HEADOFFICE\bob.
Password	Password the DIVA LAN ISDN Modem will use to log on to the corporate network.
Domain name of the corporate network	This is the domain name that identifies the network. For example: eicon.com
Primary DNS server address * Secondary DNS server address *	To reach other computers on the corporate network you need to use the network's DNS servers.
IP address of corporate network * Subnet mask of corporate network	This is only required if you intend to connect to the Internet at the same time as your corporate network.
Static IP address * Subnet mask	On some corporate networks, the network administrator will assign a static IP address and subnet mask to the DIVA LAN ISDN Modem. If not, the DIVA LAN ISDN Modem will negotiate its own address and subnet mask when it connects to the network.

*Addresses are written as four numbers separated by periods. Each number can range from 0 to 255. For example: 213.132.21.1

Gather X.25 information

If you intend to use AO/DI, you will require the following information:


Item	Description
Remote X.25 address	The X.25 address of the corporate network you want to connect to.
Local X.25 address	The X.25 DTE address assigned to the DIVA LAN ISDN Modem. This may not be required on certain switches.
Default window size Maximum window size	The DIVA LAN ISDN Modem supports windows sizes from 1 to 7.
Default packet size Maximum packet size	The DIVA LAN ISDN Modem supports packet sizes from 64 to 1024 bytes.
Number of VCs	Number of virtual circuits. The DIVA LAN ISDN Modem supports up to 4 two-way virtual circuits.
ISDN TEI type	Determine if TEI assignment is static, dynamic, or shared. If static, get the number assigned to the D-channel.

2. Configure the Corporate profile

Use the Corporate profile to define the configurations settings for the connection to your corporate network.

To configure the Corporate profile

1. Start the Web-based configuration interface and log in.
2. Click *Connection profiles*. The DIVA LAN ISDN Modem displays the Connection Profiles list page.

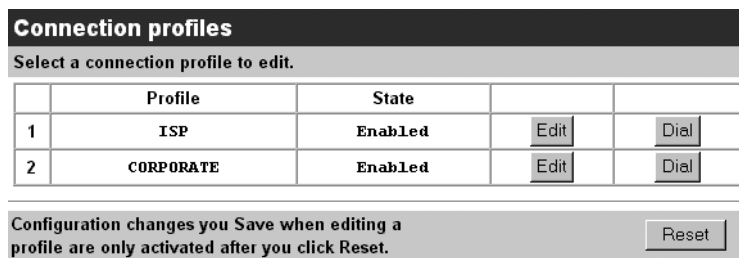


Connection profiles				
Select a connection profile to edit.				
	Profile	State	Edit	Dial
1	ISP	Enabled	Edit	Dial
2	CORPORATE	Enabled	Edit	Dial

Configuration changes you Save when editing a profile are only activated after you click Reset.

Reset

Note If this is the first time you are using the web-based configuration interface, the Connection profiles option will not be available. It is only activated once you have used the Internet wizard. At this point, you should run the Internet wizard as described in the section “Configuring the Internet connection” on page 31. Enter dummy values in all fields (the number 1 is a good choice), and save the results. Once the DIVA LAN ISDN Modem resets you will be able to access the Connection profiles option.

3. Click *Edit* for the CORPORATE profile. The DIVA LAN ISDN Modem displays the Profile page.

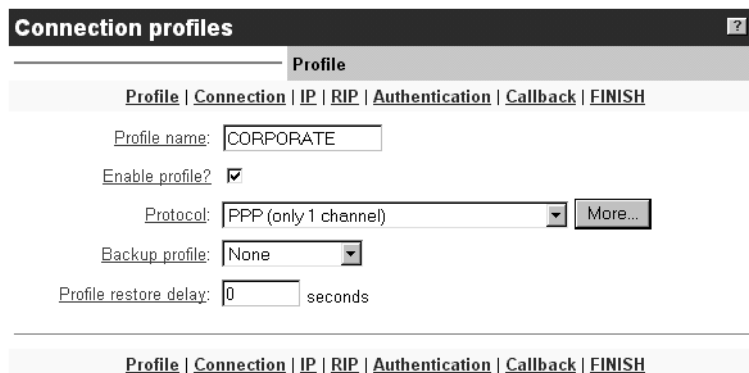

Connection profiles

Profile

Profile | Connection | IP | RIP | Authentication | Callback | FINISH

Profile name: CORPORATE

Enable profile? ☒

Protocol: PPP (only 1 channel) More...

Backup profile: None

Profile restore delay: 0 seconds

Profile | Connection | IP | RIP | Authentication | Callback | FINISH

4. Select a *Protocol* for the connection to the corporate network. See “Choose a connection protocol” on page 19 for information on how to choose a connection protocol.

5. Click *Connection* on the menu bar. The DIVA LAN ISDN Modem displays the Connection parameters page.

6. Set the following parameters:

- **Telephone number 1:** Specify the ISDN phone number of the corporate network.
- **Backup telephone number 1:** Specify the backup number to dial when *Telephone number 1* is busy or not available. If the corporate network does not have a backup number, leave this field blank.
- **Remote X.25 address:** If you are using AO/DI, specify the X.25 address of the corporate network. You will also need to configure X.25 settings as described in the section “Configuring AO/DI” on page 54.

7. Click *IP* on the menu bar. The DIVA LAN ISDN Modem displays the IP options page.

8. Set the following parameters:

- **Select profile mode:** Leave this set to NAT unless you have a specific requirement not too. For more information on NAT, see “Network address translation” on page 68.
- **Primary/Secondary DNS address:** Specify the addresses of the primary/secondary DNS servers on the corporate network. If you leave these addresses set to 0.0.0.0, the DIVA LAN ISDN Modem will attempt to retrieve the DNS addresses for you when it connects to the corporate LAN (if supported by the corporate LAN).
- **Domain name:** Specify the DNS name of the corporate network. For example: eicon.com.

- **IP address:** On some corporate networks, the network administrator will assign a static IP address to the DIVA LAN ISDN Modem. If this is your case, enter the static IP address here. Leave this set to 0.0.0.0 if you want the DIVA LAN ISDN Modem to negotiate its own address when it connects to the network.
 - **Subnet mask:** Specify the subnet mask associated with the *IP address*.
 - **Remote IP address:** In some instances, you need to specify the IP address of the corporate network.
9. Click *Authentication* on the menu bar. The DIVA LAN ISDN Modem displays the Authentication parameters page.

Connection profiles ?

Authentication parameters

Profile | Connection | IP | RIP | **Authentication** | Callback | FINISH

Local username: 123

Local password: 1234

Always use encrypted password? ☐

Always authenticate remote? ☐

Remote username:

Remote password:

Use SecurID? ☐

Profile | Connection | IP | RIP | **Authentication** | Callback | FINISH

10. Set the following parameters:
- **Local username:** Specify the name the DIVA LAN ISDN Modem will use to log on to the corporate network. If your corporate network is an NT network, you may need to specify a domain name and user name pair. For example: HEADOFFICE\bob.
 - **Local password:** Specify the password the DIVA LAN ISDN Modem will use to log on to the corporate network.
 - **Always use encrypted password:** If your corporate network requires encrypted passwords (CHAP or MS-CHAP), enable this option.
11. Click *Finish*.
12. Click *Save*.
13. Click *Manual Config* on the menu bar.
14. Click *IP*.

- 15.** Click *Routes*. The DIVA LAN ISDN Modem displays the Routes page. Edit the fields (if required) so that they are set as follows:

IP parameters : Routes ?

Edit IP routing parameters

Rte	Network address	Mask length	Gateway address	Interface	Metric
1	0.0.0.0	0 bits	0.0.0.0	CORPORATE	1
2		bits		None	
3		bits		None	
4		bits		None	
5		bits		None	
6		bits		None	
7		bits		None	
8		bits		None	
9		bits		None	
10		bits		None	

You may enter a maximum of 50 routes.
If all the above entries are full, click Save and more entries will appear.

- 16.** Click *Save*.

- 17.** Click *Reset*.

Your corporate connection is now ready to use. You should be able to send and receive e-mail, share files, or browse any intranet web pages.

Using the corporate connection

The DIVA LAN ISDN Modem automatically dials out and establishes the ISDN link to your corporate network as required. You simply launch the applications you use to do your work, such as a web browser or e-mail program, and you are automatically connected.

You can also establish your connections manually, dialing and hanging up connections as you see fit. See page 39 for details.

How long will the line stay connected?

By default, the DIVA LAN ISDN Modem will stay connected until the line has been idle for two minutes. To adjust this setting, see “The Cost Control page” on page 51.

Support for Microsoft Network Neighborhood

If you are connecting to an Microsoft NT network, see “Spoofing NetBIOS services” on page 59 for information on supporting Network Neighborhood functions.

NetBIOS name resolution

If you use Microsoft networking, then you will need to be able to resolve NetBIOS names to IP addresses. If you allow the Microsoft WINS client to use DNS as a method of resolving names (Windows NT), then it could result in persistent ISDN calls being generated. In general, it is recommended that you make entries in the LMHOSTS file of each computer connected to the DIVA LAN ISDN Modem to resolve NetBIOS names. Consult the Microsoft documentation for your operating system for more information on how to do this.

Timeouts

To save communications charges, the DIVA LAN ISDN Modem will drop the ISDN line when it is idle. Although this may not cause problems for most applications, it can cause difficulties for the corporate server you are connected to. If the server implements TCP *keep alives*, then the server will hang up your TCP/IP session if the ISDN line is down when the *keep alives* are sent. Thus, when the DIVA LAN ISDN Modem reconnects (i.e., the client sends more data), the session will have been aborted.

Dynamic IP addressing

If the corporate network uses dynamic IP address assignment, it is possible that each time the DIVA LAN ISDN Modem connects it will be given a different IP address. This can cause problems for some session-based applications when the DIVA LAN ISDN Modem drops the ISDN link due to inactivity. When the link is re-established, the server has given the DIVA LAN ISDN Modem a new IP address. When the application attempts to continue using the previous session, it is refused because of the address change.

Although applications may not themselves timeout when the DIVA LAN ISDN Modem drops the line due to inactivity, the IP stack on the corporate server you are connected to may.

What's next?

Other chapters in this manual provide in depth information and instruction on a variety of topics relating to operating and configuring the DIVA LAN ISDN Modem.

Some of the topics that you may want to consult are:

Minimizing your ISDN charges

The DIVA LAN ISDN Modem has several pre-defined settings to help reduce your ISDN charges. To adjust these settings for your installation, see Chapter Five.

Using telephones, fax machines, and modems

If your DIVA LAN ISDN Modem has PHONE ports, you can share the ISDN line with your analog devices. Consult Chapter Seven for complete details on setting up your analog devices.

Configuring security features

The DIVA LAN ISDN Modem provides a wide range of security features. Some of the features you may want to configure include:

- *System password:* A system password is also available to restrict access to the configuration interface.
- *Support for remote management:* By default, remote access to the configuration is disabled.
- *Support for incoming data calls:* By default, support for incoming data calls is disabled.
- *Call screening:* Lets you accept incoming data calls only from specific numbers.
- *Call authentication:* Lets you verify incoming callers by username and password.

Consult Chapter Six for complete details.

Advanced Installations

This chapter describes ADVANCED installation scenarios and provides background information on advanced configuration issues like IP filtering and IP routing.

Connection retries

The connection retry parameter controls how many times the DIVA LAN ISDN Modem attempts to establish a connection using a specific profile. If the profile cannot be connected using either its primary telephone number or backup telephone number, it is disabled, and the DIVA LAN ISDN Modem attempts to connect using a backup profile instead.

Once a profile has been disabled, it must be re-enabled before it can be used again. There are three ways to re-enable a profile"

- manually dial it
- reset the DIVA LAN ISDN Modem
- set the profile to be re-enabled automatically by defining a value for the *Profile restore delay* parameter

To define retry settings

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to adjust the retry settings for.
3. Click *Connection* on the menu bar. You will see the following page.

Connection profiles ?

Connection parameters

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

Telephone number 1:

Telephone number 2:

Backup telephone number 1:

Backup telephone number 2:

ISDN call type:

Remote X.25 address:

Compression? ☐

Manual dialing only? ☐

Idle timer: seconds

Max retries:

Retry delay: seconds

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

4. Set *Max retries* to the number of times you want to dial when trying to connect. Dialing attempts alternate between Telephone number 1/2 and Backup Telephone number 1/2.
5. Set *Retry delay* to the number of seconds the DIVA LAN ISDN Modem should pause between dialing attempts.
6. Click *Finish*.
7. Click *Save*.
8. Click *Reset*.

To define a backup profile and set the profile restore delay

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to define a backup profile for. You will see the following page.

The screenshot shows the 'Connection profiles' configuration window with the 'Profile' tab selected. The window has a title bar with a question mark icon. Below the title bar is a tabbed interface with tabs for Profile, Connection, IP, RIP, Authentication, Callback, and FINISH. The 'Profile' tab is active. It contains the following fields and controls:

- Profile name:** A text input field containing 'ISP'.
- Enable profile?:** A checkbox that is checked.
- Protocol:** A dropdown menu showing 'MLPPP + BACP (2nd channel as needed)' and a 'More...' button.
- Backup profile:** A dropdown menu showing 'None'.
- Profile restore delay:** A text input field containing '0' followed by the unit 'seconds'.

At the bottom of the window is a navigation bar with the same tabs as the top: Profile, Connection, IP, RIP, Authentication, Callback, and FINISH.

3. Choose a *Backup profile* from the list.
4. Set a value for *Profile restore delay*. (This value must be greater than 0, if you want to use a backup profile.)
5. Click *Finish*.
6. Click *Save*.
7. Click *Reset*.

Installing on an existing LAN

Installing the DIVA LAN ISDN Modem on an existing LAN can be extremely simple, or quite challenging, depending on the complexity of your existing LAN setup. To help you successfully integrate the DIVA LAN ISDN Modem into your setup, this section presents an installation strategy that should work in the majority of cases. However, due to the wide range of networking equipment and topologies that are in use worldwide, your configuration needs may fall outside the strategy presented here. In this case, you should contact your network administrator, or other support person to help you with your installation.

Using Modem Monitor

Modem Monitor greatly simplifies the task of installing the DIVA LAN ISDN Modem on a LAN. If at least one of the computers on your LAN is running Windows 95/98/NT, follow the instructions in Chapter Two to install and configure the DIVA LAN ISDN Modem. However, make the following exceptions:

- Instead of connecting the DIVA LAN ISDN Modem directly to your computers, connect it to the LAN. Do this by connecting any one of the DIVA LAN ISDN Modem's ETHERNET ports to a port on your LAN hub.
If your hub has a cross-over switch or cascade port, you can use the supplied blue Ethernet cable to make this connection. If not, you will need a special cross-over Ethernet cable to make this connection.
Try connecting the supplied blue cable to the hub, if the green Ethernet light on the DIVA LAN ISDN Modem does not light up, you need a special cross-over cable.
- Install the Modem Monitor software on a Windows 95/98/NT computer that is connected to the LAN. Modem Monitor will automatically detect the DIVA LAN ISDN Modem and let you adjust its IP settings for proper operation on the LAN.

Once installation is complete, you may need to adjust the configuration settings of the computers on your LAN. See "Adjusting configuration settings on the LAN" on page 106 for complete details.

Manual installation

Follow these steps to install the DIVA LAN ISDN Modem on a LAN if you are unable to run Modem Monitor on a computer on your network.

1. Determine how IP addresses are assigned on the LAN.
 - **Static:** Each computer on your LAN has a fixed address. If this is the case, then determine the IP address and subnet mask that will be assigned to the DIVA LAN ISDN Modem.
 - **Dynamic:** Addresses are assigned by a DHCP server (such as a Windows NT server).

It is recommended that before you install the DIVA LAN ISDN Modem on your LAN, you should install and configure it for use with a single non-networked computer. This lets you verify that your ISDN line is functioning and that you are able to successfully communicate with the DIVA LAN ISDN Modem.

2. Disconnect a computer from your LAN.
3. Follow the instructions in Chapter Two to install and configure the DIVA LAN ISDN Modem. Pay particular attention to section “Verify the configuration of your computers” on page 18. If you need to change the settings of your computer, make sure you record the existing settings before you change them.
4. Once installation and configuration are complete, confirm that your ISDN line works and that you have access to the Internet.
5. Start the Web-based configuration interface.
6. Click *LAN* on the Manual Configuration menu. The DIVA LAN ISDN Modem displays the LAN parameters page.

LAN parameters
Edit LAN parameters

IP address:

Subnet mask:

RIP parameters

RIP version:

Route merging? ☐

RIP policy:

7. Set the *IP address* to a free address on your LAN. If your LAN uses dynamic addressing (DHCP server) make sure that the address you choose is outside the range of dynamically assigned ones, or that you reserve the address. For background information on IP addresses, see “About IP addresses” on page 111.
8. Set the *Subnet mask* according to the requirements of your LAN.
9. Click *Save*. **Do not** reset the DIVA LAN ISDN Modem.

By default, the DIVA LAN ISDN Modem is configured to act as a DHCP server. If a computer on the LAN is already providing this function (such as a Windows NT server), you need to disable this feature on the DIVA LAN ISDN Modem.

10. Click *IP* on the Manual Configuration menu.

11. Click *DHCP*. The DIVA LAN ISDN Modem displays the LAN Parameters page.

12. Uncheck the *DHCP server enabled* option.
13. Click *Save*.
14. Click *Reset*.
15. Disconnect your computer from the DIVA LAN ISDN Modem.
16. Connect the DIVA LAN ISDN Modem to the LAN. Do this by connecting any one of the DIVA LAN ISDN Modem's ETHERNET ports to a port on your LAN hub.

If your hub has a cross-over switch or *cascade* port, you can use the supplied blue Ethernet cable to make this connection. If not, you will need a special cross-over Ethernet cable to make this connection.

Try connecting the supplied blue cable to the hub, if the green Ethernet light on the DIVA LAN ISDN Modem does not light up, you need a special cross-over cable.
17. Press the Reset button on the back of the DIVA LAN ISDN Modem.
18. Restore your computer's network configuration settings and reconnect it to the LAN.
19. Start your Web browser and enter the new IP address you assigned to the DIVA LAN ISDN Modem. Your browser should display the Log In page.
20. You may need to adjust the configuration settings of the computers on your LAN. See "Adjusting configuration settings on the LAN" on page 106 for complete details.

Adjusting configuration settings on the LAN

Depending on your setup, you may have to adjust configuration settings on your computers in order to communicate with the DIVA LAN ISDN Modem. Due to the diversity of networking equipment and topologies, this section can only cover several of the most common setups. If your setup is more complex, contact your network administrator, or other support person to help you with your installation.

If your LAN uses static addressing

Configure TCP/IP on each computer that will communicate with the DIVA LAN ISDN Modem as follows:

- Set *Default Gateway* to the address of the DIVA LAN ISDN Modem.
- Set *DNS Server* to the address of the DIVA LAN ISDN Modem.

 
If your LAN has a DHCP server

Configure your DHCP server to return the address of the DIVA LAN ISDN Modem as the *Default Gateway* and *DNS Server* to all clients.

If your LAN has a router

If you have a router on your LAN, it is likely configured as the default gateway for your computers. In this case, you will need to configure the routing table on your router to re-direct the appropriate traffic to the DIVA LAN ISDN Modem. And add a route on the DIVA LAN ISDN Modem to direct appropriate traffic to the router.



Consider the following example:



- Traffic from LAN A addressed to LAN B is forwarded by the router to LAN B.
- Traffic from LAN A addressed to the Internet needs to be forwarded by the router to the DIVA LAN ISDN Modem. This requires you to configure a route on the router.
- Traffic from the Internet to LAN B needs to be forwarded to the router. This requires you to configure a route on the DIVA LAN ISDN Modem. No route is needed for traffic to LAN A.

Connecting more than four computers


In certain cases, you may want to share the DIVA LAN ISDN Modem with more than four computers. To do this, you can connect the DIVA LAN ISDN Modem to an Ethernet hub. This connection requires either a special Ethernet cable, called a cross-over, or you can use the supplied blue cable if the hub has a cross-over switch. Try connecting the supplied blue cable to the hub, if the green Ethernet light on the DIVA LAN ISDN Modem does not light up, you need a special cross-over cable.

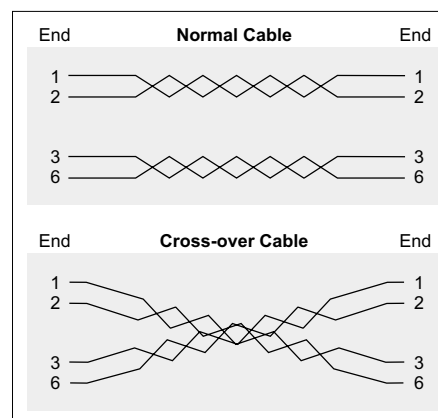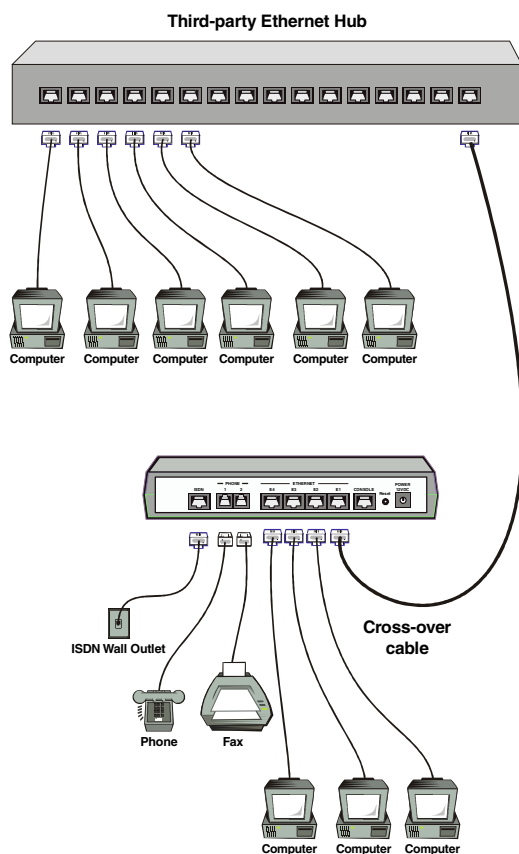

Note If the hub is part of a local area network, you will need to adjust configuration settings on the DIVA LAN ISDN Modem. See "Installing on an existing LAN" on page 104 for details.

Creating a virtual private network

A virtual private network (VPN) is an interconnection between two networks that uses the PPTP (point-to-point tunneling protocol). By using the Internet to transport data, a VPN can eliminate long distance charges associated with traditional dial-up solutions. And, since PPTP provides a secure connection, network security is not compromised.

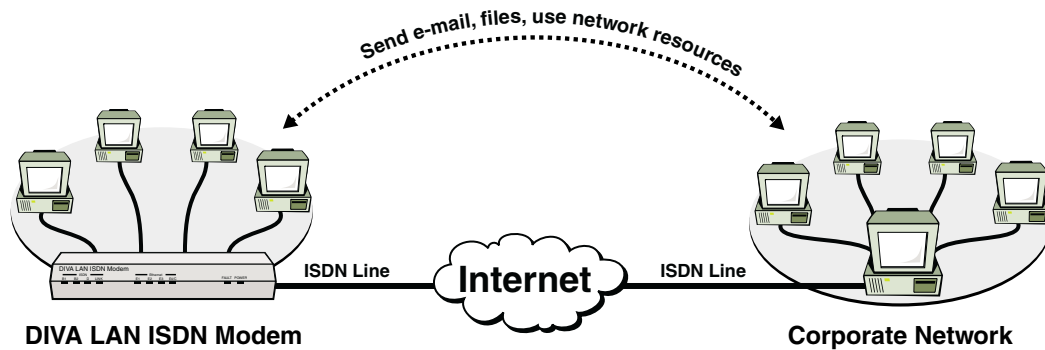

To create a VPN

1. Create a connection to the Internet as described in Chapter Two.
2. Contact the administrator of the network you want to attach to and obtain the following:
 - the IP address or host name of the VPN server
 - For each user that will be connected to the VPN:
 - user name
 - password
3. Go to the Microsoft web site and download Dial-Up Networking 1.3.
4. Install Dial-Up Networking 1.3 on each computer that will be connected to the VPN.
5. When Dial Up Networking is installed, create a new connection. Double-click *My Computer*, and then double-click *Dial-Up Networking*. You will see the following dialog box.



6. Enter a name for your connection.
7. Select *Microsoft VPN Adapter* as the device.

8. Click *Next*. You will see the following dialog box.




9. Enter the IP address or host name of the VPN server.
10. Click *Next*. You will see the following dialog box.



11. Click *Finish* to create the new connection.


Connecting to the VPN

1. To connect to the VPN, you simply launch the connection you just created with Dial-Up Networking. You will see the following dialog box.

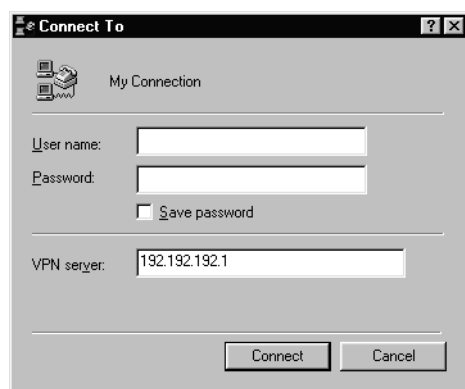

2. Enter your *user name* and *password* and click *Connect*.

3. The DIVA LAN ISDN Modem will automatically establish the link to the Internet and you will see the following Dial-Up Networking dialog box, showing the details of your connection.

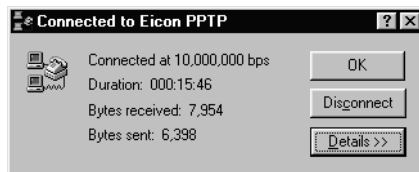

Note The bps value reported by this dialog box is your LAN Ethernet speed. Your actual connection speed will be either 64 bps or 128 kbps depending on how many B-channels you are using.

Note The idle timer on the DIVA LAN ISDN Modem cannot be used to manage VPN connections. Therefore, if your VPN connection remains idle for long periods of time, the link will not be disconnected unless you manually disconnect.

Concurrent Internet and Intranet connections

The DIVA LAN ISDN Modem can support both an Internet connection and an intranet connection to your corporate network. This section explains how to install and configure such a setup.

Selecting a connections protocol

One of the primary considerations is choice of connection protocol. If you want to have both connections active at the same time, you must assign PPP to each connection. The reason for this is that any MLPPP-related protocol reserves both ISDN channels for its exclusive use, even if they are not active. Therefore, the only way to share the two ISDN channels between two data connections is to use PPP for each.

Defining routes

If you have two active connections, it is important to define routes so that the DIVA LAN ISDN Modem can send data to the proper connection. In most cases, you will want to send certain specific traffic to your corporate network, and route all other traffic to the Internet.

For a complete discussion of routing issues, see “IP routes” on page 111.

Installation and configuration procedure

1. Use the Internet wizard, as described in Chapter 2, to define your Internet connection.
2. The Internet wizard will automatically add a default route to the routing table. The default route is defined as 0.0.0.0 with a mask of 0. This is a catch-all route. Any traffic which does not match any other route, will match the default route, and thus be sent to the Internet.
3. Next, create a connection to your corporate network as described in Chapter Eight.
 - Choose PPP as the connection protocol.
 - When you reach the routing table, you should configure it as outlined in the section “Multiple connections” on page 115.
4. You should now be able to use both connections.

IP routes

This section provides background information on why IP routes are needed and explains how to define them. However, before you can understand routing, you must be familiar with IP addressing and how the DIVA LAN ISDN Modem assigns them.

About IP addresses

IP addresses identify the computers (and other devices) on an IP network. Each address is composed of 32 bits. To make things easier to understand, addresses are written out as four decimal numbers separated by dots. The numbers can range in value from 0 to 255. For example: 192.168.1.1 or 222.182.22.39

Using masks

IP addresses are composed of two parts: the network address and the host address. A host is any computer (or other device) on a network that is capable of transmitting or receiving data. To determine which portion of the address identifies the network and which portion identifies a host, a mask is used.

Masks are specified in bits. A logical bitwise AND operation is performed between the address and the mask to extract the network address. To simplify, consider that each of the four decimal numbers that make up an address is represented by 8 bits. This leads to the following network addresses and their corresponding masks:

Mask (# of bits)	Mask (in decimal)	Source IP address	Extracted network address
8	255.0.0.0	222.182.22.39	222.0.0.0
16	255.255.0.0	222.182.22.39	222.182.0.0
24	255.255.255.0	222.182.22.39	222.182.22.0
32	255.255.255.255	222.182.22.39	222.182.22.39

This table also illustrates how the mask is used to extract the network address for a given source address. Note that when the mask is 32 bits, the extracted address is identical to the source address, and refers to a single host computer rather than a network.

Static vs. dynamic addresses

IP addresses can be either dynamic or static. Static addresses are fixed, and must be changed manually. They are used by computers that are permanently connected to the Internet (a web server, for example), and sometimes by computers on a LAN.

Dynamic addresses can change. They are assigned using a special protocol such as DHCP or PPP (IPCP). For example, when connecting to the Internet, the IP address assigned to the DIVA LAN ISDN Modem by your ISP is usually dynamic, assigned by PPP (IPCP). It changes each time the DIVA LAN ISDN Modem connects.


The DIVA LAN ISDN Modem and IP addresses

The DIVA LAN ISDN Modem can have up to three IP addresses assigned to it. One address is used on the internal LAN it creates. The other two are used to communicate externally with remote sites.

Internal LAN addresses

By default, the DIVA LAN ISDN Modem is configured to act as a DHCP server. This means it is responsible for assigning IP addresses to each computer connected to it. To receive an address, each computer must be configured to obtain their IP addresses automatically from a DHCP server (see Chapter Nine).

The following diagram shows four computers with addresses assigned by the DIVA LAN ISDN Modem.

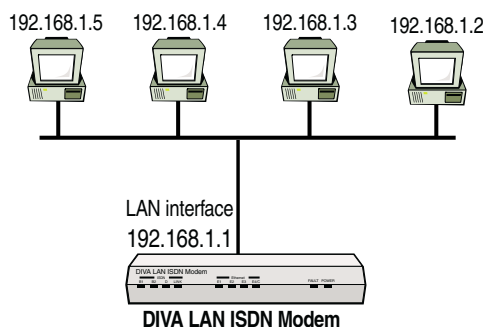


By default, the DIVA LAN ISDN Modem uses the mask 255.255.255.0 when assigning addresses. This means that the network portion of the address is: 192.168.1.0

Note that the DIVA LAN ISDN Modem has its own address on the LAN: 192.168.1.1

External addresses


When the DIVA LAN ISDN Modem establishes a connection to a remote site, it needs to be identified with an IP address. This address is associated with the profile making the connection. Since, two profiles are supported, two IP addresses are required.

Generally, these external addresses are dynamic, and are automatically negotiated when the DIVA LAN ISDN Modem connects with the remote site. For example, when establishing a link with an ISP, the ISP will generally assign an IP address to the DIVA LAN ISDN Modem. This address will change each time the DIVA LAN ISDN Modem reconnects.

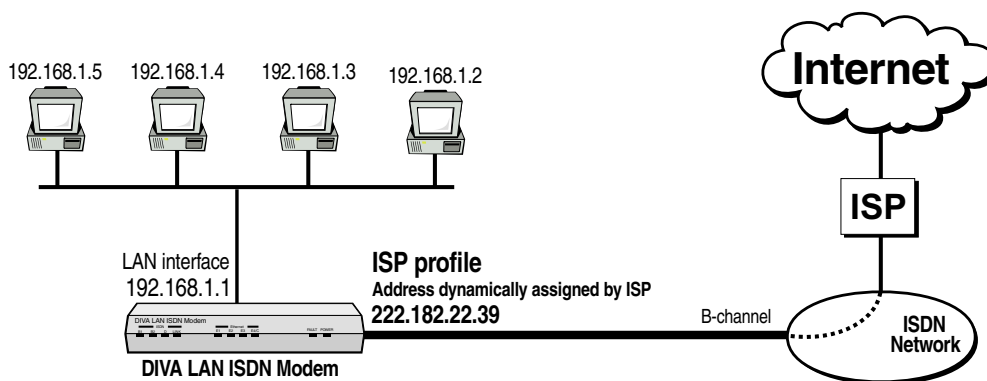

In this example, the address 222.182.22.39 is assigned to the DIVA LAN ISDN Modem. The address is associated with the ISP profile, since this is the profile that was used to establish the connection.

In some cases, you may be required to assign a static IP address to a profile. This may occur when connecting to a corporate network. For example:

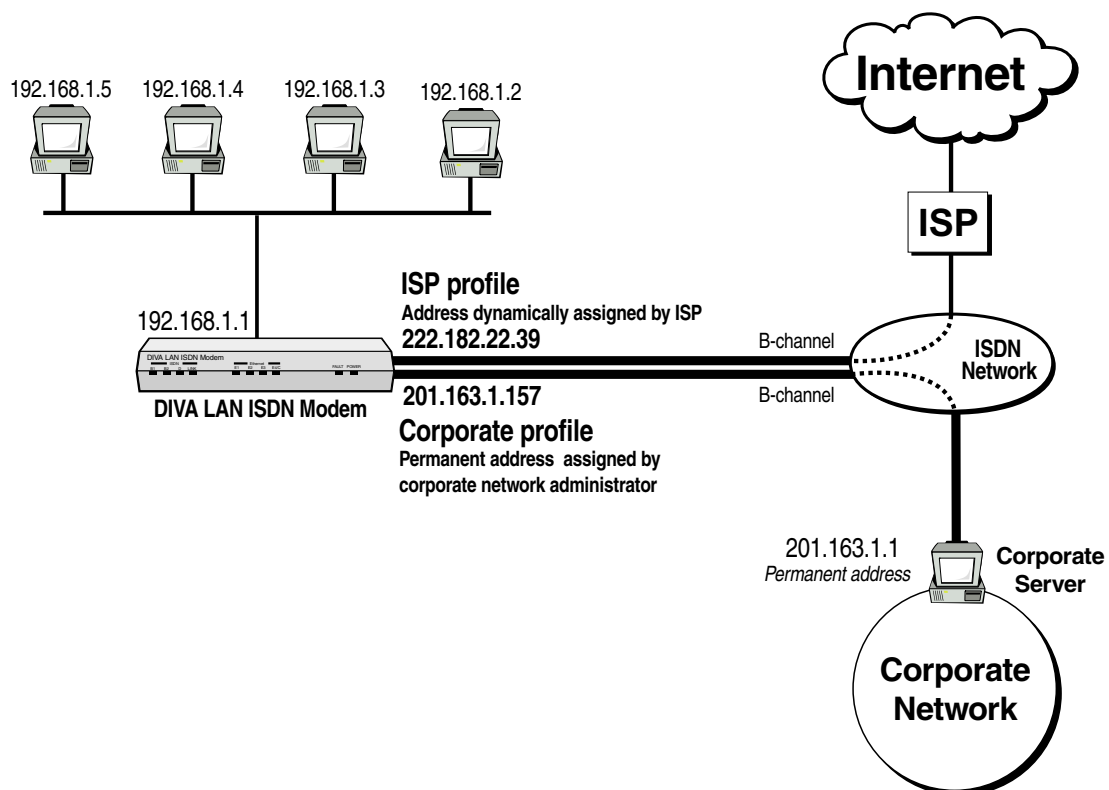


This example shows three addresses assigned to the DIVA LAN ISDN Modem: one on the LAN, one for an Internet connection, and one for a connection to a corporate network.

Why routes are needed

Data on an IP network is carried in small packages called datagrams. Each datagram contains the IP address of its source and destination. In order to send datagrams to their proper destination, the DIVA LAN ISDN Modem requires a list of destinations and the addresses that are associated with it. This information is stored in a route. Since more than one route is generally required, they are grouped together in a routing table. Each time the DIVA LAN ISDN Modem sends or received a datagram, it consults the routing table to determine the target destination for the datagram.

Single connection

Consider the following scenario:

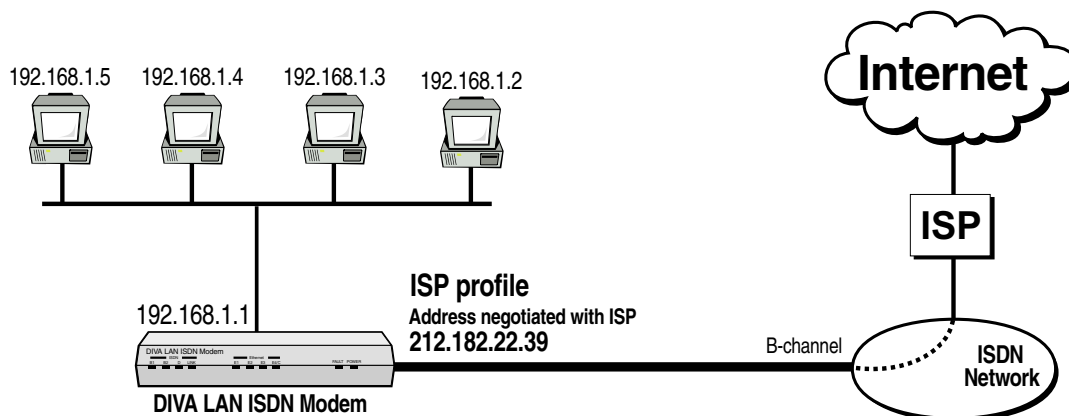

Routes


Route 1 = 0.0.0.0 with a mask of 0. Assigned to Internet connection.

Since there is only one destination for outgoing data (the Internet), only one route is required. This route needs to match all addresses. The special address 0.0.0.0 does this. The same would be true for a Corporate connection. If you want to route all data to the corporate network, specify a single route using the special address 0.0.0.0.

There can be only one default route on the DIVA LAN ISDN Modem. The default route always uses the special address 0.0.0.0.

Multiple connections

Consider the following scenario, which features an Internet and Corporate connection, each using one B-channel (PPP):

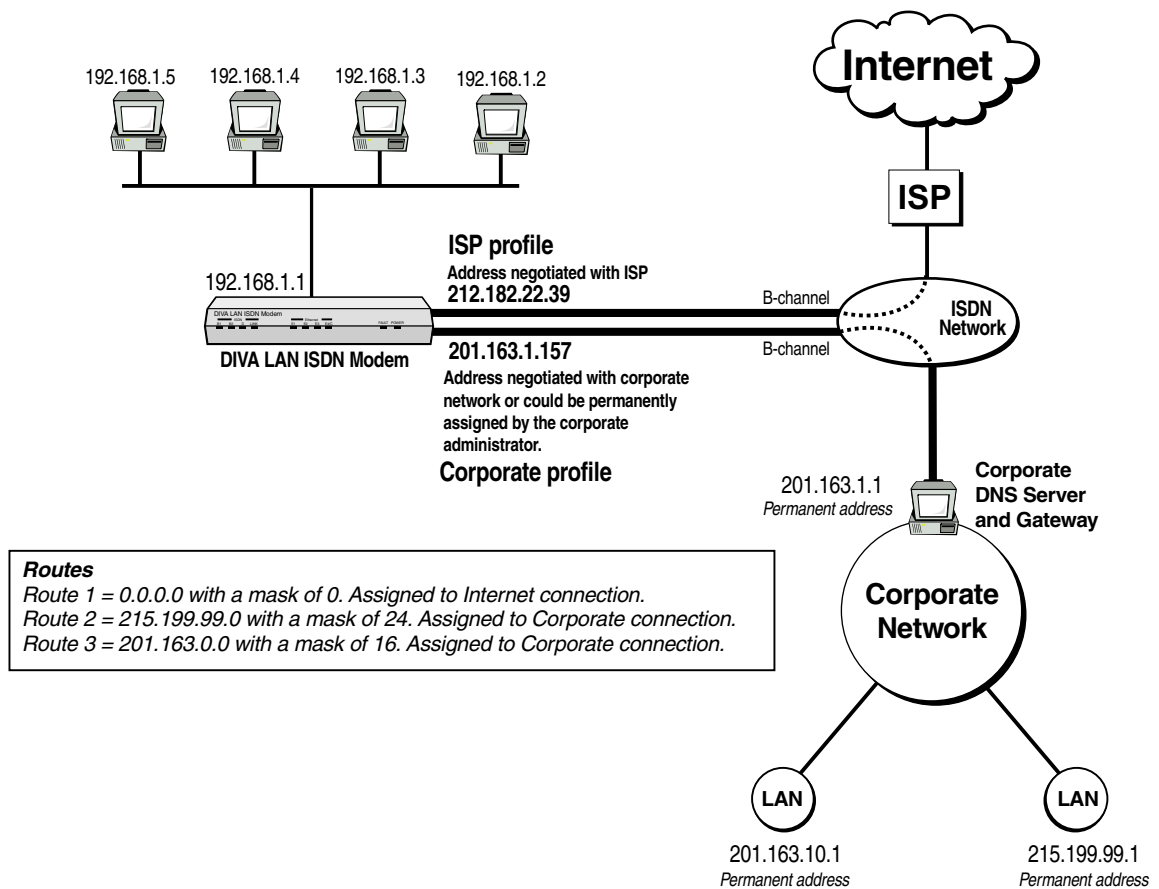

This scenario requires three routes:

Route 3 is used to route traffic to the Corporate network (201.163.0.0). It is assigned to the Corporate connection.


Notice that two subnetworks are directly connected to the Corporate network. Since one of these subnetworks has the same network address (201.163), traffic addressed to users on this subnet will be properly routed.

Route 2 is required to send traffic to the second subnet (215.199.99.1). It is assigned to the Corporate connection.

Route 1 is the default route. It is assigned to the Internet connection. It matches any address. Therefore, any traffic that is not routed by Route 2 or 3 is routed by Route 1 to the Internet.

Routing on the local LAN

The DIVA LAN ISDN Modem lets you create your own local area network. In some instances, this network, or the DIVA LAN ISDN Modem itself, will be connected to another network via a bridge or router. Consider this scenario, which adds another LAN to the previously discussed example:

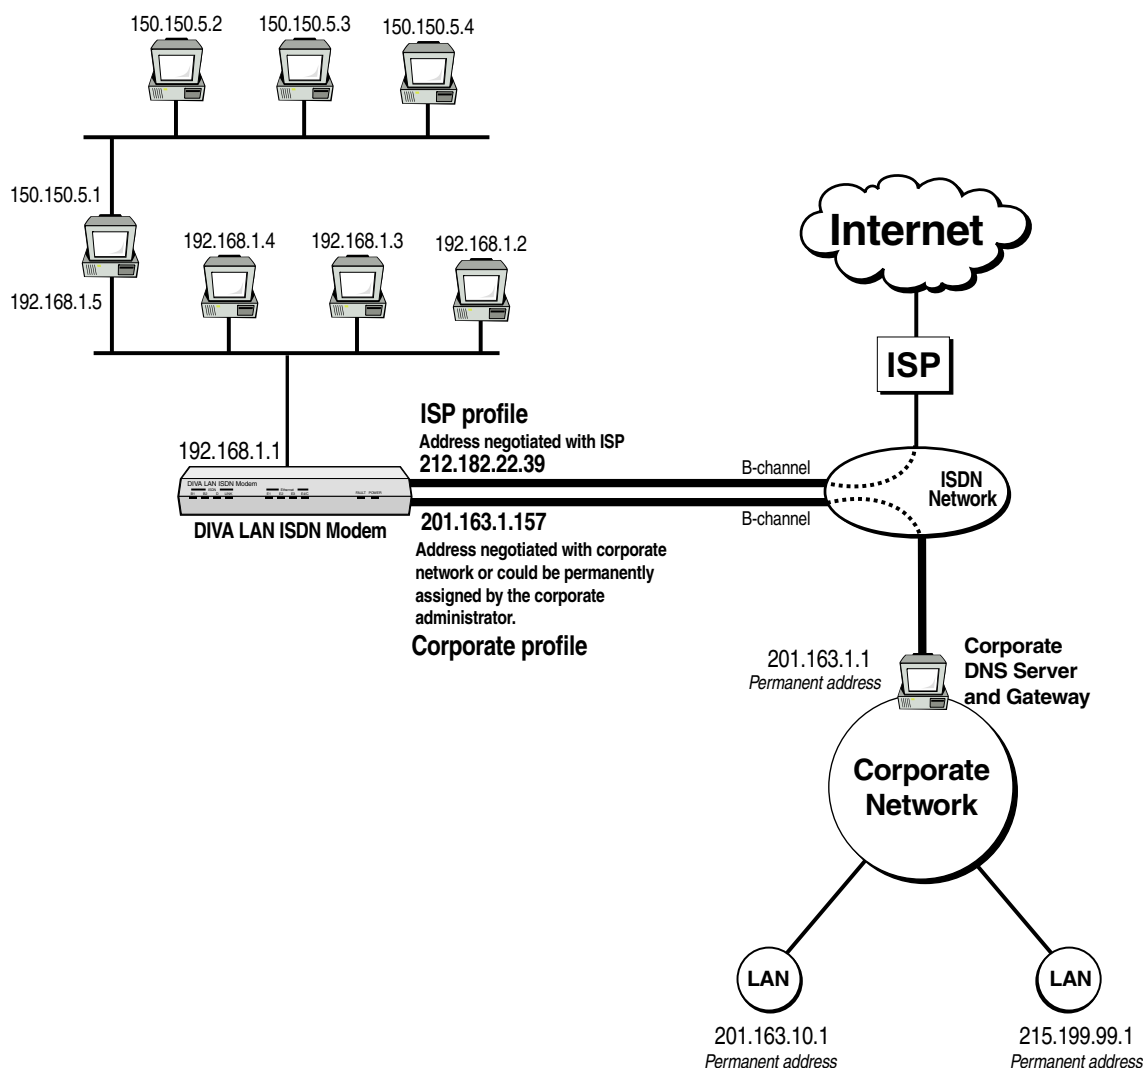

Routes

Route 1 = 0.0.0.0 with a mask of 0. Assigned to Internet connection.

Route 2 = 215.199.99.0 with a mask of 24. Assigned to Corporate connection.

Route 3 = 201.163.0.0 with a mask of 16. Assigned to Corporate connection.

Route 4 = 150.150.0.0 with a mask of 16. Assigned to the LAN interface. Gateway address is 192.168.1.5

Assuming that RIP (discussed in the next section), is not being used on the LAN, this scenario requires an additional route.

Route 4 is used to route traffic to the new LAN connected to the computer with address 192.168.1.5. This route is assigned to the LAN interface, which means that instead of traffic being sent onto the ISDN link, it is forwarded onto the LAN. The LAN address of the destination is required, because unlike the ISDN link, where only one device exists at the other end of the connection, more than one device is connected to the LAN. So, the gateway address for this route is 192.168.1.5, which is the computer that provides access to the destination LAN. Of course, this computer must be properly configured to forward the datagrams it receives onto the other LAN.

The Routing Information Protocol (RIP)

RIP permits the DIVA LAN ISDN Modem to automatically discover routes for itself, by listening to routing broadcasts from other networks. If your corporate LAN broadcasts RIP updates, the DIVA LAN ISDN Modem will be able to discover routes to all subnets connected to it. For example, if a subnet does not have the same network address as your corporate network (as above), you need to create a specific route to support it. However, since RIP is enabled by default, all you need to do is specify a single route to the corporate network. The DIVA LAN ISDN Modem will listen for RIP broadcasts and define the needed routes.

RIP also works on the local LAN created by the DIVA LAN ISDN Modem. If this LAN is connected to other LANs, RIP will discover the routes to these LANs (if they are configured to broadcast RIP routing information).

Defining routes for the DIVA LAN ISDN Modem

You always need to have at least one route. When you use the Internet wizard, the default route (0.0.0.0) is automatically created for you.

In some cases, it may be necessary to manually add a route, even though RIP is enabled. To edit the routing table, do the following:

1. Start the Web configuration interface and log in.
2. Click *Manual Configuration*.
3. Click *IP*.
4. Click *Routes* to display the following page. If you previously ran the Internet wizard, the routing table should have at least one entry in it, the default route 0.0.0.0.

Note Only one default route can be defined for the DIVA LAN ISDN Modem, and its network address is always 0.0.0.0. Since the Internet wizard automatically creates a default route for the ISP profile, you must delete this route if you want to use a default route with the Corporate profile.

Use the explanations below to guide you in defining more routes.

IP parameters : Routes

Edit IP routing parameters

Rte	Network address	Mask length	Gateway address	Interface	Metric
1	0.0.0.0	0 bits	0.0.0.0	ISP	1
2		bits		None	
3		bits		None	
4		bits		None	
5		bits		None	
6		bits		None	
7		bits		None	
8		bits		None	
9		bits		None	
10		bits		None	

You may enter a maximum of 50 routes.
If all the above entries are full, click Save and more entries will appear.

Cancel ResetForm Back Next Save

- **Network address:** Specifies the IP address of datagrams that should be routed. The address you set here is compared against the destination address in all datagrams that pass through the DIVA LAN ISDN Modem. If a match is found, the datagram is routed to the profile specified under Interface.
- **Mask:** Lets you specify the number of bits that are checked when the DIVA LAN ISDN Modem compares the address of a datagram to that specified by the Network Address parameter. See "About IP addresses" on page 111 for more information.
- **Gateway address:** Only used if the Interface is set to LAN. This is the address of the device you want to send the routed traffic to. This will usually be the address of a bridge or router.


- **Interface:** Choose the name of the profile you want to send the routed data to. The profile you choose should establish a connection to the proper destination so that routing is successful. If you select LAN, data is routed onto the local Ethernet LAN created by the DIVA LAN ISDN Modem.
- **Metric:** Metric determines the weight of a route. If two identical routes exist, then the DIVA LAN ISDN Modem uses the route with the lower metric.

IP filters

IP filtering provides you with the means to implement customized security, usage, and cost control measures.

How filtering works

Filters are defined in a stack. Up to 8 filters can be combined together to obtain sophisticated results. Data cascades through the filter stack as follows:

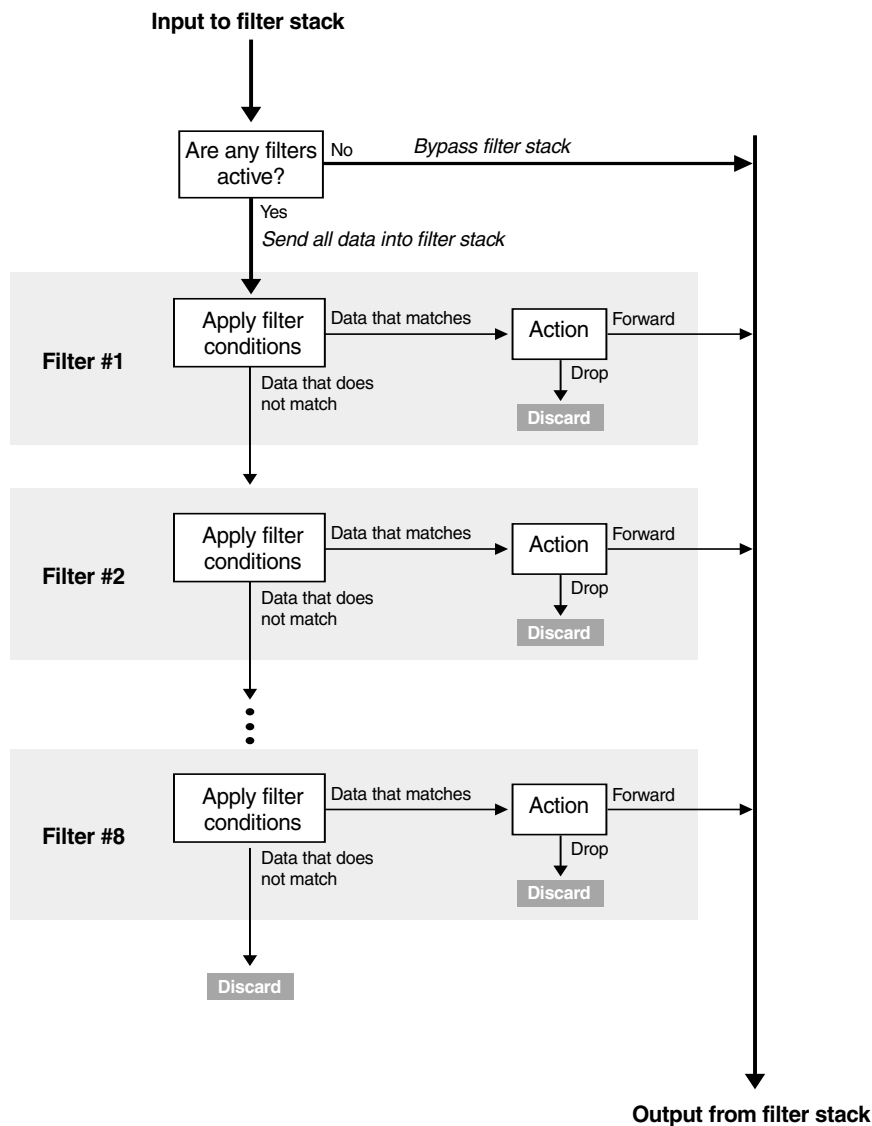


Each profile has its own filter stack. **However, note that once any filter is activated, all incoming and outgoing data passes through the filter stack.** By default, the DIVA LAN ISDN Modem defines three filters. This means, unless you turn these filters off, all incoming and outgoing data passes through the filter stack.

Note More sophisticated filters can be defined using the command line interface. See Chapter Ten for more information.

Default filters

By default, the DIVA LAN ISDN Modem defines the following three filters for the ISP profile:

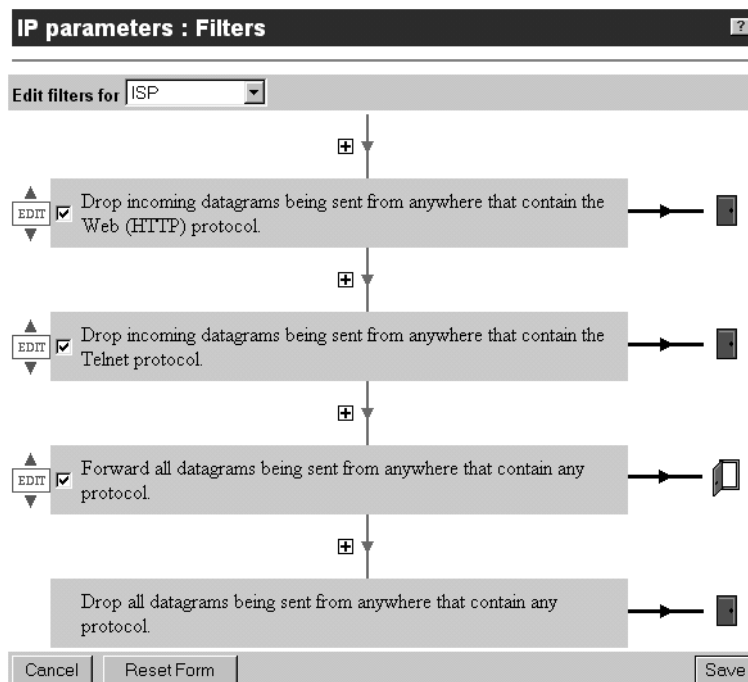

The first two filters prevent outside access to the web-based configuration interface and the CLI by discarding incoming HTTP and Telnet traffic. When you enable remote management, these filters are deleted.

The last filter is required because, by default, any traffic that is not forwarded is discarded when it reaches the bottom of the stack. This filter must be set to operate on all traffic (incoming and outgoing) because, once a filter is activated, all traffic passes through the filter stack.

What is a datagram?

Data on an IP network is carried in small packages called datagrams. Along with the data it is carrying, each datagram contains the IP address of its source and destination.

To define a filter

Filters become active immediately after they are defined. You do not have to reset the DIVA LAN ISDN Modem to activate them. If you are defining a filter that affects your connection to the DIVA LAN ISDN Modem, you will lose contact immediately after saving.

1. Start the web configuration interface and log in.
2. Click *Manual Configuration*.
3. Click *IP*.

- Click **Filters** to display the following page. (If you enabled remote management you will not see the first two filters.)

IP parameters : Filters

Edit filters for **ISP**

- ☒ Drop incoming datagrams being sent from anywhere that contain the Web (HTTP) protocol.
- ☒ Drop incoming datagrams being sent from anywhere that contain the Telnet protocol.
- ☒ Forward all datagrams being sent from anywhere that contain any protocol.
- ☐ Drop all datagrams being sent from anywhere that contain any protocol.

Buttons: Cancel, Reset Form, Save

- Select the profile you want to define filters for.
- Click a “+” symbol to insert a new filter. The DIVA LAN ISDN Modem displays the Edit Filters page.

IP parameters : Edit Filters

Edit IP filters for profile **ISP**

Drop ☐ all ☐ datagrams being sent from ☐ anywhere ☐
 that contain ☐ any ☐ protocol.

Buttons: Reset Form, Done

Operation on this filter

Select the operation to perform on this filter and click Do it!

No operation ☐

Do it!

- Define the settings for the filter and click **Done**. The following descriptions explain the options that are available.

Edit IP filters for profile ISP

Annotations:

- Action:** Drop
- Direction:** incoming
- Source / Destination:** datagrams being sent
- Location:** from the network:
- Address:** 192.168.1.0
- Protocol:** any


Buttons: Reset Form, Done

Action

- **Drop:** Discard data that matches the filter definition.
- **Forward:** Send data that matches the filter definition to the filter output.

Direction

- **incoming:** Data being received by the DIVA LAN ISDN Modem on the ISDN link.
- **outgoing:** Data being sent by the DIVA LAN ISDN Modem on the ISDN link.
- **all:** Both incoming and outgoing.

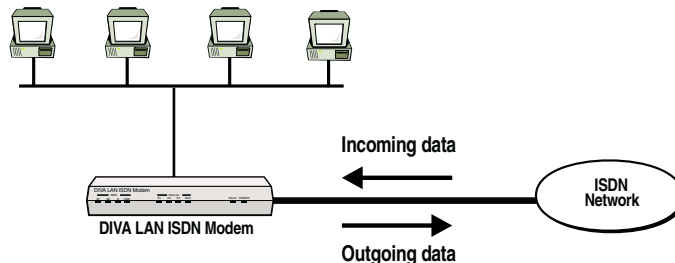**Source/Destination**

- **from:** Examine the source IP address of the datagram.
- **to:** Examine the destination IP address of the datagram.

Location

- **the Ethernet LAN:** Sets the filter to match datagrams with network addresses that are the same as that of the DIVA LAN ISDN Modem. By default, this is 192.168.1.0. A mask of 255.255.255.0 is used to extract the network address.
- **the network:** Sets the filter to match datagrams with network addresses that are the same as that the one you specify. Choosing this option requires that you supply the IP address of a class C network in the next box. The filter uses a mask of 255.255.255.0 to extract the network address (class C network mask).
- **host:** Sets the filter to match datagrams with IP addresses that are the same as the one you specify. Choosing this option requires that you supply the IP address of the host computer in the next box. The filter uses a mask of 255.255.255.255.
- **anywhere:** Sets the filter to ignore the source and destination address in the datagram.

Address

Only applies if you select *the network* or *the host* for location.

Protocol

IP datagrams can carry a wide variety of protocol traffic. The DIVA LAN ISDN Modem lets you filter the many of the most popular protocols. The following descriptions explain some of the options that are available.

- **any:** Applies the filter to any datagram.
- **any well known:** Applies the filter to any protocol using TCP or UDP ports in the range 0 to 1023. See RFC 1700 for the complete list of protocols.
- **UNIX:** Applies the filter to any protocol using TCP or UDP ports in the range 512 to 1023. See RFC 1700 for the complete list of protocols.
- **TCP:** Many protocols (such as HTTP, FTP, Telnet, News) make use of TCP. If you filter all TCP traffic you will prevent the use of these protocols. Note that access to the web configuration interface occurs via HTTP and access to the command line interface (CLI) occurs via Telnet.
- **UDP:** Many protocols (such as SNMP, Time, TFTP, BOOTP) make use of UDP. If you filter all UDP traffic, you will prevent the use of these protocols.
- **FTP:** Applies the filter to all datagrams containing the file transfer protocol.
- **Web (HTTP):** If you filter all HTTP traffic, you may not be able to reach the web configuration interface. Filtering outgoing HTTP traffic can be used to prevent users from browsing on the Internet.
- **Mail (SMTP):** Applies the filter to all datagrams containing the mail (SMTP) protocol.
- **Mail (POP3):** Applies the filter to all datagrams containing the mail (POP3) protocol.
- **Telnet:** If you filter all Telnet traffic, you will not be able to reach the command line interface (CLI).
- **TFTP:** The DIVA LAN ISDN Modem can function as a TFTP server to support uploading and downloading of configuration files. If you filter TFTP traffic, you will not be able to use this feature.

- **DNS:** Domain name system. Filtering DNS datagrams can cause disruptions in the ability to access remote sites.

The following options are also available: NFS/RPC, News, Time (NTP), BOOTP, SNMP, ICMP, Ping (ICMP), Ping Reply, ICMP Redir. For a description of these protocols, consult the appropriate RFC at the site www.faqs.org.

8. Activate the filter by clicking the box that appears to the right of the EDIT button.
9. Click *Save*. This makes the filter operational.

Note *Unlike other configurations settings, you do not have to reset the DIVA LAN ISDN Modem to make filters operational.*

IP filtering examples

The examples in this section illustrate how to use filters to:

- Dropping incoming traffic from a specific network
- Allowing incoming traffic only from a specific network
- Blocking web surfing

Note *These examples assume that you have not enabled remote management. If enabled, the default filter stack you see will only contain the single filter: "Forward all datagrams being sent from anywhere that contain any protocol." If no filters are present, the only visible filter will be "Drop All". The "Forward all" filter is active but invisible.*

Dropping incoming traffic from a specific network

This example defines a filter to make sure that no traffic is accepted from a specific network. Assume the network has the IP address 213.112.12.0.

Since the filter is applied against data from the Internet, it is defined for the ISP profile. Place this filter in the third position in the stack.

The screenshot shows a window titled "Edit IP filters for profile ISP". Inside, there is a filter rule configuration. The first row contains a dropdown menu set to "Drop", followed by a dropdown menu set to "incoming", then the text "datagrams being sent", a dropdown menu set to "from", and another dropdown menu set to "the network:". The second row contains a text box with the IP address "213.112.12.0", followed by the text "that contain", a dropdown menu set to "any", and the text "protocol."

When done, the filter stack should look like this:

IP parameters : Filters

Edit filters for ISP

+

☒ Drop incoming datagrams being sent from anywhere that contain the Web (HTTP) protocol.

+

☒ Drop incoming datagrams being sent from anywhere that contain the Telnet protocol.

+

☒ Drop incoming datagrams being sent from the network 213.112.12.0 that contain any protocol.

+

☒ Forward all datagrams being sent from anywhere that contain any protocol.

+

Drop all datagrams being sent from anywhere that contain any protocol.

Allowing incoming traffic only from a specific network

This example shows how to allow the DIVA LAN ISDN Modem to only receive incoming data from a specific network (112.111.212.0) on the Internet. Data from all other networks is dropped. However, outgoing traffic is not affected.

This requires defining two filters. Since these filters are applied against data from the Internet, they are defined for the ISP profile.

1st filter

Define the 1st filter to forward only incoming traffic from 112.111.212.0. Place this filter in the third position in the stack.

Edit IP filters for profile ISP

Forward incoming datagrams being sent from the network: 112.111.212.0 that contain any protocol.


2nd filter

Define the 2nd filter to forward all outgoing traffic. The easiest way to do this is to edit the existing filter that is set to “Forward all datagrams being sent from anywhere that contain any protocol.” Change it to “Forward *outgoing* datagrams being sent from anywhere that contain any protocol.”

Edit IP filters for profile ISP

Forward outgoing datagrams being sent from anywhere that contain any protocol.

When done, the filter stack should look like this:

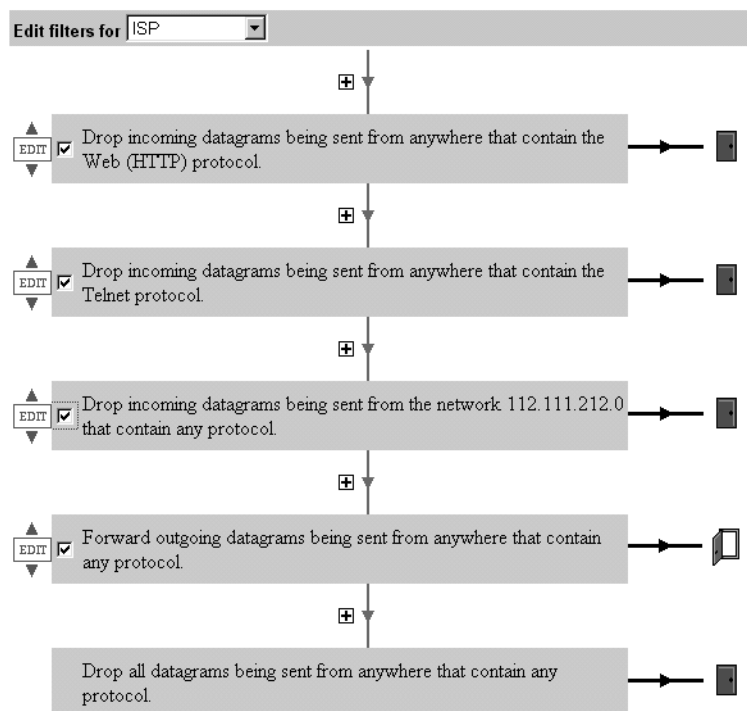

Blocking web surfing

This example shows how to block computers on the local LAN created by the DIVA LAN ISDN Modem from surfing the web.

Web traffic is carried by the HTTP protocol. Therefore, to stop web access, this protocol needs to be dropped for all outgoing traffic.


A single filter needs to be defined. Place this filter in the third position in the stack.

Edit IP filters for profile **ISP**

Drop datagrams being sent from

that contain protocol.

When done, the filter stack should look like this:

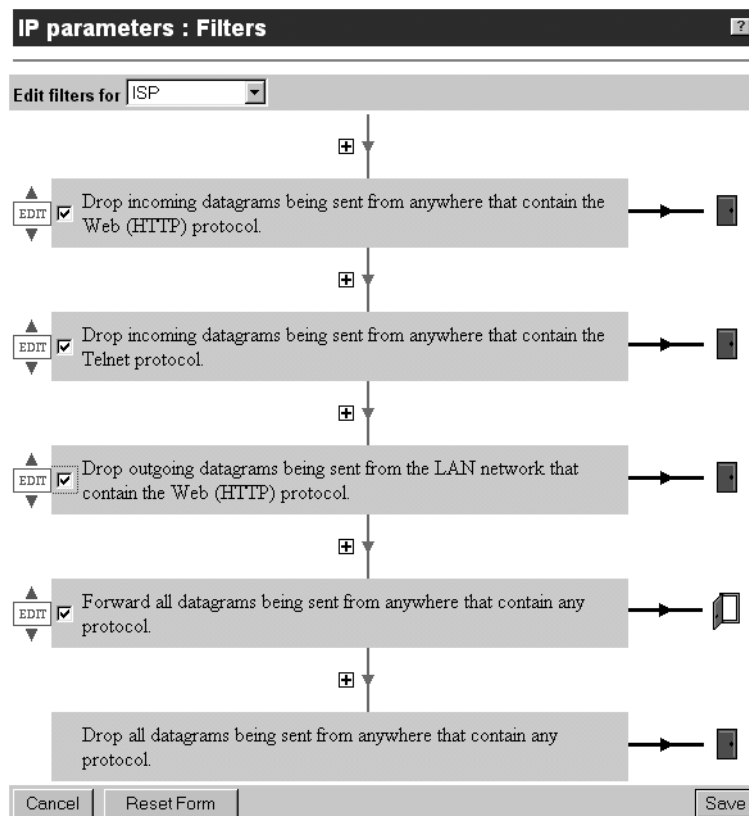

Making a V.120 connection

V.120 was designed to allow non-ISDN devices to communicate with the ISDN network. The DIVA LAN ISDN Modem provides support for V.120, so you can connect with such legacy systems. For example, in many countries around the world, Compuserve offers access to their network over ISDN, using the V.120 protocol.

In general, you should use V.120 only when the site you are connecting to requires it. Once the V.120 connection is active, the DIVA LAN ISDN Modem automatically establishes a PPP connection on top of it. This is why you will see this option listed as *PPP over V.120* on the configuration screens.

To make a V.120 connection you must do two things:

- Configure the V.120 protocol for the profile that will make the connection.
- Define a V.120 script to automatically log on to your ISP. The DIVA LAN ISDN Modem contains a pre-defined script that should work in the majority of cases. However, you may need to modify this script for your installation.

To configure the V.120 protocol

1. On the Configuration main menu, click *V.120*. You will see the following page:

V.120 parameters
Edit V.120 parameters

Mode:

Maximum transmit frame size:

Maximum receive frame size:

Window size (K):

Maximum Retry count:

Retransmission timer (T200):

Link Integrity timer (T203):

Idle timer:

2. Define the V.120 parameters to match the settings of the remote site you are going to connect to. For information on each parameter consult the online help by clicking the parameter name.
3. Click *Save*.
4. On the Configuration main menu, click *Connection Profiles*.
5. Click *Edit* for the profile that will make the V.120 connection.
6. Click *Connection* on the menu bar.
7. Select *PPP over V.120* as the *Protocol*.

Connection profiles ?

Profile

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

Profile name:

Enable profile? ☒

Protocol:

Backup profile:

Profile restore delay: seconds

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

8. Click *More*. You will see the V.120 Dialing Script page:

Connection profiles: V.120 Dialing Script

Editing

Command	Value
Select a command	

Add/Replace Insert

Resulting Script

Delay 3
Send "^M"
Wait for "Login:\&Host Name:"
Case 2
Goto sendhost
Send "cis"
Send "^M"
Wait for "Password:"

Delete Selected
Move Up
Move Down


Cancel Save

9. This page contains a pre-defined script that you can modify for your installation. When the V.120 connection is established, this script is automatically run to complete the log in process. Consult your ISP to determine the sequence of events that occur during the log in process. Then modify this script accordingly. The following commands are available:
- **Send:** Sends the specified text to the remote. Enter up to 33 alphanumeric characters.
 - **Send username:** Sends the Local username (set on the Authentication page) to the remote.
 - **Send password:** Sends the Local password (set on the Authentication page) to the remote.
 - **Wait for:** Pause script execution until the specified text is sent by the remote system. Enter up to 33 alphanumeric characters.
 - **Delay:** Pauses script execution for the specified number of seconds. Range: 1 to 255 seconds.
 - **Timeout:** If the next script event does not complete within the time specified, the script is aborted. Range: 1 to 255 seconds.
 - **Abort:** End the script.
10. Click *Save*.
11. Click *Finish*.
12. Click *Reset*.

SecurID support

When establishing a connection to a SecurID server, a special username and password must be supplied to log on. The server will request this information during authentication. In order to reply to the request, the DIVA LAN ISDN Modem must obtain the log on information from the user that initiated the connection. To support the dynamic collection of username and password, the Eicon SecurID Client application must be installed on the user's computer.

For example:

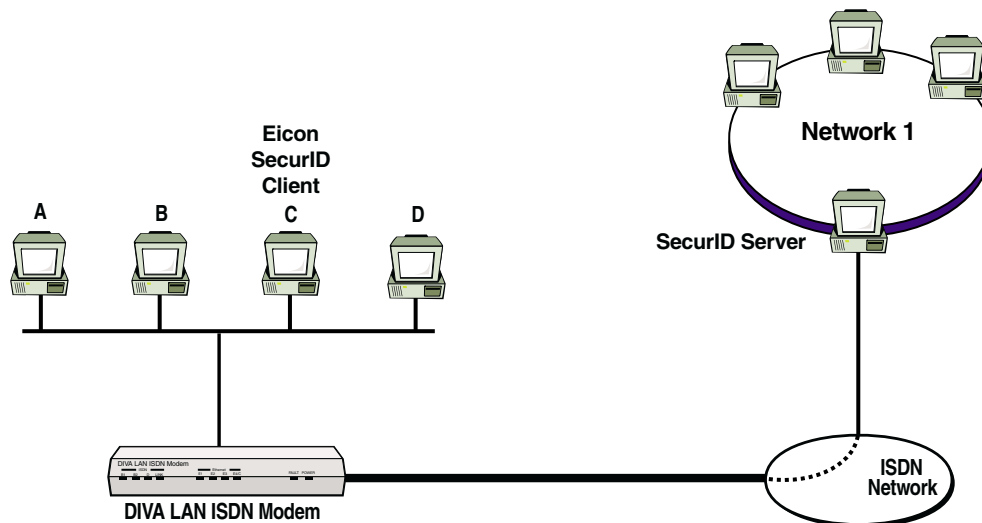

The user on computer C attempts to access a resource on Network 1. Before the DIVA LAN ISDN Modem places the call, it requests a SecurID username and password from the Eicon SecurID Client on computer C, which causes the Eicon SecurID Client to display a dialog box to the user. The user fills in the appropriate information and clicks OK. The Eicon SecurID Client forwards the information to the DIVA LAN ISDN Modem, which then places the call. When the SecurID server asks for authentication, the DIVA LAN ISDN Modem sends the SecurID username and password. If correct, the connection is established.

Note Once the connection to the SecurID protected server is established, all users on the internal LAN have access to the server. In the example above, once C logs in, computers A, B, and D also gain access to the server.

To install the Eicon SecurID Client software

1. Open the folder \SecurID on the DIVA LAN ISDN Modem CD ROM.
2. Copy all the files in this folder to a new folder on your computer.
3. Go to the MS DOS prompt.
4. Change directories to the new folder.
5. Execute the command: `secid.exe -i`
This installs the Eicon SecurID client and start it. Each time you restart Windows, the Eicon SecurID client will automatically load.

To uninstall the Eicon SecurID Client software

1. Go to the MS DOS prompt.
2. Change directories to the folder where you copied the SecurID files.
3. Execute the command: `secid.exe -u`
This uninstalls the Eicon SecurID client.
4. Delete the folder.

To enable SecurID support

1. On the Configuration main menu, click *Connection Profiles*.
2. Click *Edit* for the profile you want to enable SecurID support for.
3. Click *Authentication* on the menu bar. You will see the following page.

Connection profiles ?

Authentication parameters

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

Local username:

Local password:

Always use encrypted password? ☐

Always authenticate remote? ☐

Remote username:

Remote password:

Use SecurID? ☐

[Profile](#) | [Connection](#) | [IP](#) | [RIP](#) | [Authentication](#) | [Callback](#) | [FINISH](#)

4. Check the *Use SecurID* box.
5. Click *Finish*.
6. Click *Save*.
7. Click *Reset*.


Other Configuration Tools

The DIVA LAN ISDN Modem has four configuration interfaces: Web, CLI, DTMF, and TFTP. For most configuration tasks you should use the Web interface, since it is the easiest and fastest way to change configuration settings. However, in some cases, you may want to take advantage of the other tools described in this chapter.

Configuration options


Local configuration

The following diagram illustrates the configuration interfaces that are accessible locally.

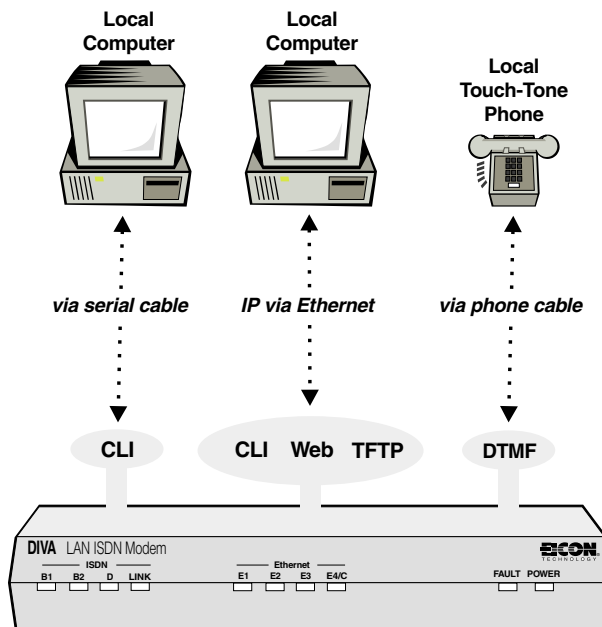

Remote configuration

The following diagram illustrates the configuration interfaces that are accessible remotely, using the ISDN line to call in.

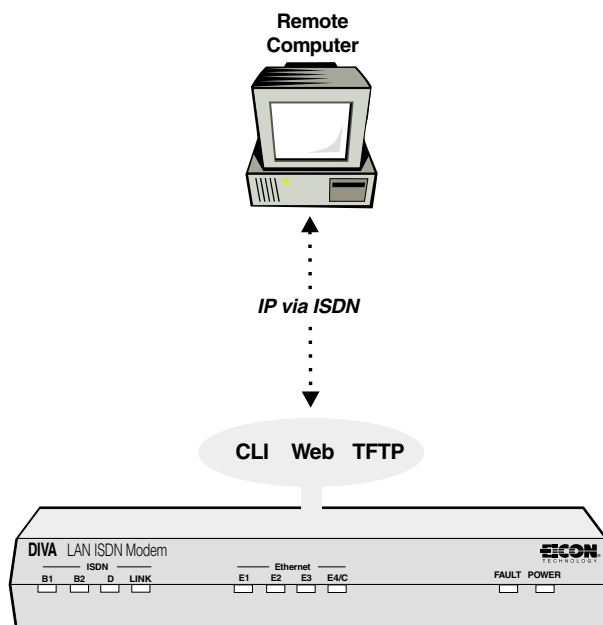

Note *Telnet software is required to access the CLI interface.*

Web interface

An easy to use interface that provides access to configuration wizards, advanced configuration parameters, and status information. The web interface is discussed in detail in Chapter Four.

Prerequisites

- Requires Web browser software.
 - Netscape 3.01 or later
 - Internet Explorer 4 or later

Internet Explorer 4 is included on the DIVA LAN ISDN Modem CD for computers running Windows 95, Windows 98, or NT 4.0 or later. NT 4.0 requires SP3 or SP4 available on the DIVA LAN ISDN Modem CD.

Local access

- IP connection via an Ethernet port.
- User must supply system password to log on (page 67).

Remote access

- IP connection via ISDN.
- Remote management must be enabled (page 70).
- Support for incoming data calls must be enabled (page 72).
- User must supply system password to log on (page 67).

TFTP interface

The TFTP interface lets you upload and download configuration files and firmware.

Prerequisites

- Requires TFTP client software. A shareware client is included on the DIVA LAN ISDN Modem CD.

Local access

- IP connection via an Ethernet port.
- Support for TFTP server must be enabled.

Remote access

- IP connection via ISDN.
- Remote management must be enabled (page 70).
- Support for incoming data calls must be enabled (page 72).
- Support for TFTP server must be enabled.

Enabling TFTP server support

Using Web interface

1. Click *IP* on the Manual Configuration menu.
2. Click *General*.

3. Check the *TFTP server* check box.

4. Click *Save*.

5. Click *Reset*.

Using the command line interface (CLI)

For instructions on using the CLI see page 136. Once you have logged into the CLI, enter the following commands to enable TFTP server support:

```
enable tftp server
save
```

Uploading/downloading configuration files

All configuration settings on the DIVA LAN ISDN Modem are stored in configuration files. Using TFTP, you can access these files to retrieve and set configuration values.

File Name	Access	Description
config.bat	Write-only	A file containing CLI commands. The commands in this file are automatically executed after being uploaded with TFTP. Trace commands are not supported by this file. Use trace.bat instead.
trace.bat	Write-only	Same as config.bat except that it supports trace commands.
results.txt	Read-only	Contains the results of the last .bat file that was executed.
config.all	Read-only	Contains the list of commands that define the current active configuration. Retrieve this file to view the entire configuration of the DIVA LAN ISDN Modem.
config.bin	Read/write	Contains a binary image of the current active configuration. You can download this file to backup the current configuration. (Download as a binary file.)
image.elm	Read/write	Contains the DIVA LAN ISDN Modem firmware. Write to this file to update the firmware. After writing is complete, a reset is automatically performed. Download this file to back up the firmware. (Download as a binary file.)
system.log	Read-only	The system log contains a record of a variety of events (trace data, connected/disconnected messages, security-related messages, warning and errors messages) that have occurred on the DIVA LAN ISDN Modem. The log can contain over 15000 entries before it wraps around.

Loading new firmware via TFTP

To upload new firmware to the DIVA LAN ISDN Modem, use your TFTP client software to transfer the firmware file. For example, under NT, you would issue the following command:

```
tftp -i 192.168.1.1 put NewImageFile image.elm
```

Where:

- 192.168.1.1 is the IP address of the DIVA LAN ISDN Modem.
- NewImageFile is the name of the most recent DIVA LAN ISDN Modem image file.
- image.elm is the target file name on the DIVA LAN ISDN Modem.

DTMF interface

The DIVA LAN ISDN Modem enables you to set certain parameters using a standard touch-tone telephone.

Prerequisites

- touch-tone analog phone

Local access

- Phone must be plugged into PHONE port 2.
- ISDN line must not be connected.

Remote access

- Not available.

How it works

Plug an analog phone into PHONE port 2.

- Each command starts and ends with a #.
- A short beep indicates that the command you entered was accepted.
- Continuous beeping indicates that the command you entered was rejected. Enter # to start a new command and end the beeping.

Commands

The following commands are available.

Set primary ISDN telephone number

#TN1 *ISDN number* # (#861*ISDN number* #)

Example: #8614078#

Set second ISDN telephone number

#TN2 *ISDN number* # (#862 *ISDN number* #)

Example: #8624079#

Set ISDN switch type

- #STA# (#782#) Australia
- #STJ# (#785#) Japan
- #STE# (#783#) Euro-ISDN

Save configuration and reset

#SA# (#72#)

Reset to factory defaults

#RF# (#73#)

Set LAN IP address

#IPxxx*xxx*xxx*xxx# (#47xxx*xxx*xxx*xxx#)

Example: #47192*168*4*1#.

Set LAN IP subnet mask

#SMxxx*xxx*xxx*xxx# (#76xxx*xxx*xxx*xxx#)

Example: #76255*255*255*0#.

Command line interface (CLI)

The command line interface provides you with access to all DIVA LAN ISDN Modem parameters. Some advanced parameters are only accessible via this interface.

Prerequisites

- Requires Telnet software for an IP connection.
- Requires terminal emulation software for a direct serial connection.
- Requires special serial cable (included) for a direct serial connection.

Local access**Telnet**

- IP connection via an Ethernet port.
- User must supply system password to log on (page 67).

Direct serial

- Direct connection between PC's serial port and serial port on the DIVA LAN ISDN Modem using the included beige serial cable.
- User must supply system password to log on (page 67).

Remote access

- IP connection via ISDN.
- Remote management must be enabled (page 70).
- Support for incoming data calls must be enabled (page 72).
- User must supply system password to log on (page 67).

Establishing a Telnet connection via IP

To establish a Telnet connection you require the following:

- an Ethernet card installed in your computer
- TCP/IP installed and configured on your computer
- Telnet software (provided with Windows 95/98/NT)

To establish a Telnet connection

1. Start your Telnet software. If you are running Window 95/98/NT, select the Run command on the Start menu, type TELNET, and press enter.
2. Connect to the address 192.168.1.1. This is the default address assigned to the DIVA LAN ISDN Modem. If it has been changed, use the new address. If you are connecting remotely, via ISDN, use the "external" IP address assigned to the DIVA LAN ISDN Modem.
3. A welcome message appears on your screen. It will include a request to enter a password.
4. Type the appropriate password and press enter. The DIVA LAN ISDN Modem displays the command line prompt '>'. See "Using the command line interface" on page 137 for more information.

Establishing a serial connection

To establish a serial connection you require the following:

- a free serial port on your computer
- Asynchronous communications software (use HyperTerminal provided with Windows 95/98/NT)
- your computer must be connected to the DIVA LAN ISDN Modem via the supplied serial cable (beige).

To establish a serial connection

Establish a serial connection as follows:

1. Connect the DB9 connector on the beige serial cable to the serial port on your computer, and plug the RJ45 connector into the CONSOLE port on the back of the DIVA LAN ISDN Modem.
2. Start your communications software. (If you are running Windows 95/98/NT, use HyperTerminal which is available in the Accessories folder.)
3. Set your software to match the following configuration:

Parameter	Setting
Terminal emulation type	VT100 or VT102
Bits per second (bps)	115200 (recommended), 57600, 19200, 9600
Local echo	off
CR translation	CR
LF after CR	off
Data bits	8
Stop bits	1
Parity	none
Flow control	hardware

4. Initiate the connection with your software.
5. Press the Enter key on your keyboard several times until a welcome message appears on your screen. It will include a request to enter a password.
6. Type the appropriate password (if any) and press enter. The DIVA LAN ISDN Modem displays the command line prompt '>'. See "Using the command line interface" on page 137 for more information.

Using the command line interface

The command line interface provides direct access to almost all of the DIVA LAN ISDN Modem's configuration parameters.

When you connect to the DIVA LAN ISDN Modem via a serial connection or Telnet connection, you are greeted with the command line interface welcome message and a request for a password. Once you enter the correct password, you will see the command line prompt '>'.

Make sure that you are using VT100 terminal emulation, otherwise the command line interface may not display properly on your screen and certain keys will not function correctly.

The DIVA LAN ISDN Modem is now ready to accept your commands. The following keys are available for use:

- up/down arrows: Moves back and forth through previously issued commands.
- F1: Provides help tailored to the current command you are entering. For example, if you are part way through typing a command, it will show you the valid syntax to complete it.
- Tab: To speed up entry of commands, you need only enter enough of the command so that the CLI can uniquely recognize it, or press TAB and the CLI will automatically complete the current keyword for you. For example: The PROFILE command can be shortened to PROF. Pressing TAB expands it to PROFILE.

When a command calls for a string of alphanumeric characters, you can use "" to enter an empty string.

About configuration context

The command line interface identifies the configuration context you are in by changing the prompt. When you first activate the CLI interface you are in the General configuration context, which is identified by a plain prompt (>). All other contexts are identified by a label added to the prompt.

About profiles

To make the configuration of the DIVA LAN ISDN Modem easier, the parameters that control its operation have been combined into groups according to function. These groups are called profiles. When you want to customize the operation of the DIVA LAN ISDN Modem, you use a CLI command to change the setting of a parameter in one of its profiles. To do this, you must set the focus (also called the configuration context) of the command line interface to be on the profile.

Connection profiles

Certain profiles define the characteristics of a connection, instead of just operational settings for the DIVA LAN ISDN Modem. For example, the ISP profile defines a connection that enables the DIVA LAN ISDN Modem to connect to an Internet service provider. When the profile is active, the features and functions defined by the profile are active. In the case of the ISP profile, it means the DIVA LAN ISDN Modem will dial and connect to the ISP whenever a computer attempts to browse the Internet.

Default profiles

The DIVA LAN ISDN Modem has following default profiles:

- **ISP:** This profile is created by the Internet Wizard. It defines the settings for a connection to the Internet.
- **Corporate:** This profile can be used to define the settings for the connection to a remote corporate site.
- **LAN:** This is an internal profile that is part of the default configuration of the DIVA LAN ISDN Modem. It defines the settings for the LAN created by the Ethernet hub built into the DIVA LAN ISDN Modem. You can change the settings of this profile, but you cannot deactivate it.
- **Incoming:** This is an internal profile that is part of the default configuration of the DIVA LAN ISDN Modem. It defines how the DIVA LAN ISDN Modem handles incoming data calls. You can change the settings of this profile. By default, support for incoming calls is disabled.

Command line reference

See Appendix C for a complete list of all CLI commands and their descriptions.

Loading firmware with the CLI

The DIVA LAN ISDN Modem firmware is the program that resides on the modem and controls all its functions. Periodically, Eicon Technology may make new versions of the firmware available that improve the performance of the modem or add additional features. To take advantage of these updates you must retrieve the appropriate firmware module and load it on the DIVA LAN ISDN Modem.

Note *This section describes how to update the firmware using the CLI interface. The firmware can also be easily upgraded using the web-based configuration interface and your web browser. See “Upgrading the DIVA LAN ISDN Modem firmware” on page 48 for complete instructions.*

Retrieving new firmware

Retrieve the new firmware from www.eicon.com/divalan/downld.htm.

To load the new firmware

1. Log in to the CLI.
2. Type the following command and press Enter.

```
> monitor
```
3. Type the following command and press Enter.

```
> at@load
```

4. The DIVA LAN ISDN Modem warns you that your firmware is about to be erased. Note that all configuration settings are retained, including passwords. Type 'Y'.

This will erase your FLASH memory, do you wish to proceed (y/n)? y

5. When you see the following message, the DIVA LAN ISDN Modem is ready to receive the firmware update.

Please start XMODEM transmission of file to be loaded

6. Start your file transfer using 1K XMODEM (or XMODEM). The terminal program displays a dialog box showing the progress of the transfer.
7. When the transfer is done, the DIVA LAN ISDN Modem automatically resets itself to invoke the new software.

Appendix A

TCP/IP Configuration


This appendix provides instructions on how to install and configure TCP/IP for use with the DIVA LAN ISDN Modem.

Installing and configuring TCP/IP for Windows 95 / 98


Installing TCP/IP

If TCP/IP is not installed on your computer, install it as follows:

1. On the Start menu, choose *Settings*, then choose *Control Panel*.
2. Double-click the *Network* icon. The Network dialog box appears.
3. Click *Add*. The Select Network Component Type dialog box appears.

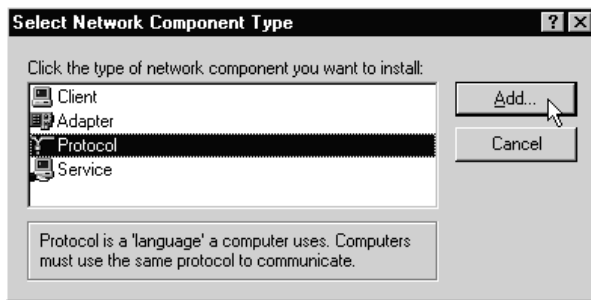

4. Select *Protocol* and click *Add*. The Select Network Protocol dialog box appears.

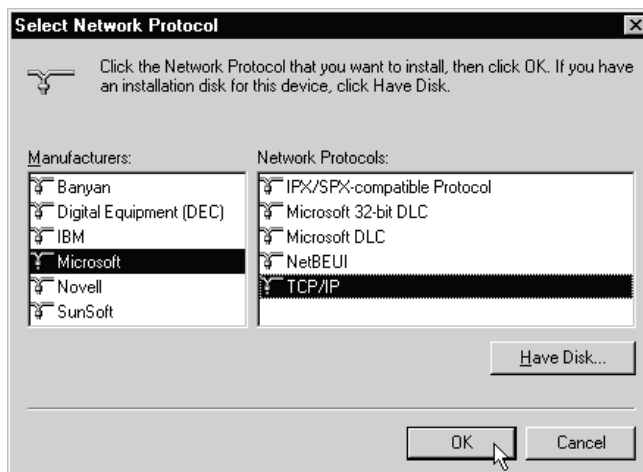


5. In the Manufacturer box, choose *Microsoft*.
6. In the Network Protocols box, choose *TCP/IP*.
7. Click *OK*.
8. Go to the next section to configure TCP/IP.

Configuring TCP/IP


If TCP/IP is installed on your computer, do the following to configure it for use with the DIVA LAN ISDN Modem.

1. On the Start menu, choose *Settings*, then choose *Control Panel*.
2. Double-click the *Network* icon. The Network dialog box appears.
3. On the Configuration tab, select *TCP/IP* for the network card that is installed in your system.
4. Click *Properties*. The TCP/IP Properties dialog box appears.

5. Click the *IP Address* tab.

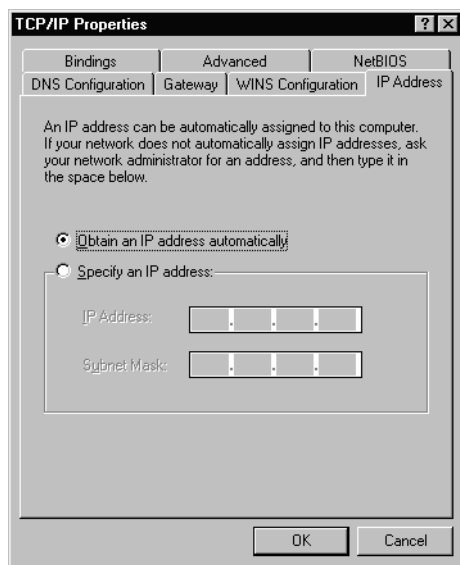


6. Select *Obtain an IP address automatically*. This defines your machine as a DHCP client.
7. Click the *WINS Configuration* tab.

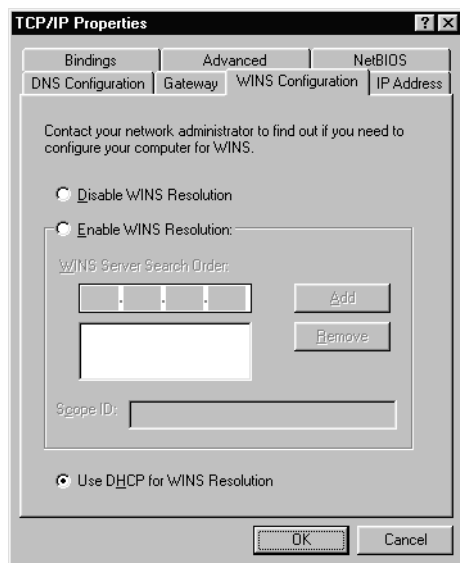


8. Select *Use DHCP for WINS Resolution*.

9. Click the Gateway tab.

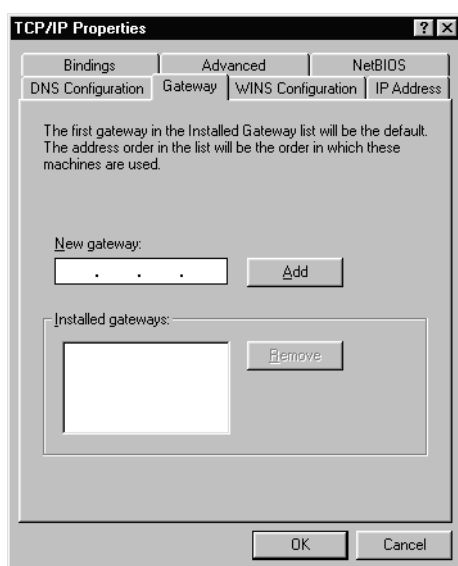

10. Make sure no gateways are defined.
11. Click the DNS Configuration tab.

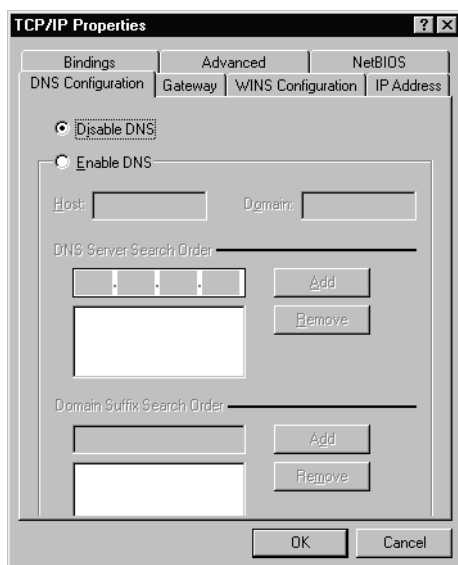

12. Select *Disable DNS*. This sets your computer to use the DIVA LAN ISDN Modem as its DNS server.
13. Click *OK*.
14. Click *OK*.
15. When prompted, insert the original Windows 95/98 installation CD and enter the drive letter of your CD drive (or use the Browse button to locate your CD drive), then click *OK*.
16. Click *Yes* when prompted to restart your system.

Installing TCP/IP for Windows NT

Installing TCP/IP

1. On the Start menu, choose *Settings*, then choose *Control Panel*.
2. Double-click the *Network* icon. The Network dialog box appears.
3. Click the *Protocols* tab.
4. Click *Add*.
5. Select *TCP/IP protocol* as your network protocol.
6. Click *OK*.
7. Click *Yes* to use DHCP.
8. When prompted, insert the original Windows NT installation CD and enter d:\i386 (where d: is the drive letter of your CD drive), and click *Continue*.
9. Click *Close*.
10. Click *Yes* when prompted to restart your system.

Configuring TCP/IP

1. On the Start menu, choose *Settings*, then choose *Control Panel*.
2. Double-click the *Network* icon. The Network dialog box appears.
3. Click the *Protocols* tab.
4. Select *TCP/IP protocol*.
5. Click *Properties*.
6. Select *Obtain an IP address from a DHCP server*.
7. Click the *DNS* tab.
8. Check if any DNS addresses are configured. If so, delete them.
9. Click *OK*.

Configuring TCP/IP on an iMac

Set up TCP/IP on an iMac as follows:

1. On the Apple menu, select *Control Panels*.
2. Select *TCP/IP*.
3. Set *Connect via* to *Ethernet*.
4. Set *Configure* to *Using DHCP Server*.


Appendix B

Technical Information

This appendix provides detailed technical information on the DIVA LAN ISDN Modem.

DIVA LAN ISDN Modem indicator lights

The front panel lights show you the status of the DIVA LAN ISDN Modem.

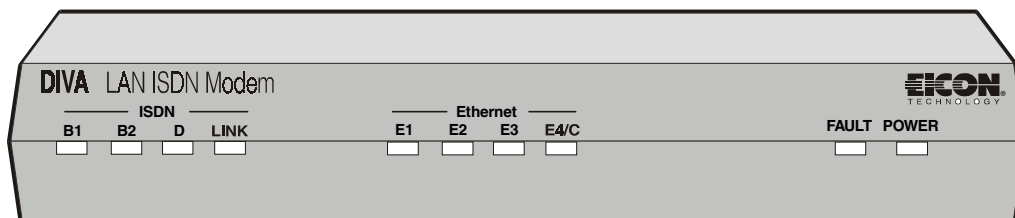

B1, B2

Indicates the status of the B-channels.

State	Description
Green	Indicates a data call.
Orange	Indicates a voice call.
Off	No call activity on the specified B-channel.
Flashing	An incoming or outgoing call is being established on the B-channel.
Steady	A call is connected and the channel is in use.

D

Indicates the status of the ISDN D-channel.

State	Description
Off	D turns on at the same time as LINK to indicate a properly configured line. However, when the line is idle, many networks automatically disconnect the D-channel (turning off both D and LINK) to conserve power.
Flashing	Indicates that AO/DI is enabled, but that the DIVA LAN ISDN Modem cannot establish the X.25 data link layer on the D-channel.
Steady	D will turn on just before B1 and/or B2 light up when the DIVA LAN ISDN Modem makes or receives a call.

LINK

Indicates the status of the ISDN physical interface.

State	Description
Off	LINK turns on at the same time as D to indicate a properly configured line. However, when the line is idle, many networks automatically disconnect the D-channel (turning off both D and LINK) to conserve power.
Flashing	LINK will flash for a few seconds and then go off when the ISDN line is not plugged in or if the wrong interface is being used (S/T or U).
Steady	The ISDN physical interface is active. Lights D, B1, and B2 may provide additional status information.

E1, E2, E3, E4

Indicates the status of the four ETHERNET ports.

State	Description
Off	There is no device connected to the specified ETHERNET port, or the connected device is not powered on.
Flashing	Data is being received on the specified ETHERNET port.
Steady	There is a device connected to the specified ETHERNET port and the link is up.

/C

Indicates the status of Ethernet collisions in red.

State	Description
Off	No collisions
Flashing	Indicates that an Ethernet collision has occurred because two Ethernet devices connected to the DIVA LAN ISDN Modem are trying to transmit at the same time. This is a normal occurrence and will automatically resolve itself.
Steady	Indicates that one of the Ethernet ports has encountered too many physical layer errors to continue normal operation. The device connected to this port will not be able to send or receive data. Reset the port by temporarily unplugging the cable connected to it.

FAULT


State	Description
Off	The DIVA LAN ISDN Modem is operating normally.
Flashing	A hardware fault has occurred. Contact your Eicon Technology representative.
Steady	A software fault has occurred. Contact your Eicon Technology representative.

POWER

State	Description
Off	The unit is off.
Steady	The unit is on.

DIVA LAN ISDN Modem connectors


The back panel is where you connect your equipment to the DIVA LAN ISDN Modem.

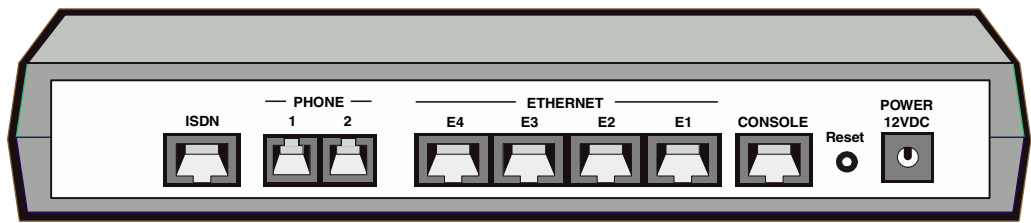

Port	Description
ISDN	Use this RJ-45 port to connect the DIVA LAN ISDN Modem to the ISDN line jack. An RJ-45 to RJ-11 cable is included for this purpose.
Phone 1, 2	Use these RJ-11 ports to connect analog devices such as telephones or fax machines.
Ethernet E1, E2, E3, E4	Use these RJ-45 ports to connect the Ethernet cables for up to four computers. An RJ-45 to RJ-45 cable is supplied so you can connect one computer to configure the DIVA LAN ISDN Modem.
CONSOLE	If you do not have an Ethernet card, you can use this port to configure the DIVA LAN ISDN Modem. A special cable is included that lets you connect this RJ-45 port to a DB-9 serial port on a computer.
RESET	Press this button to re-initialize the DIVA LAN ISDN Modem.
POWER 12VDC	Use this jack to connect the supplied AC adapter.

Resetting the DIVA LAN ISDN Modem

The Reset button is located on the back of the DIVA LAN ISDN Modem.

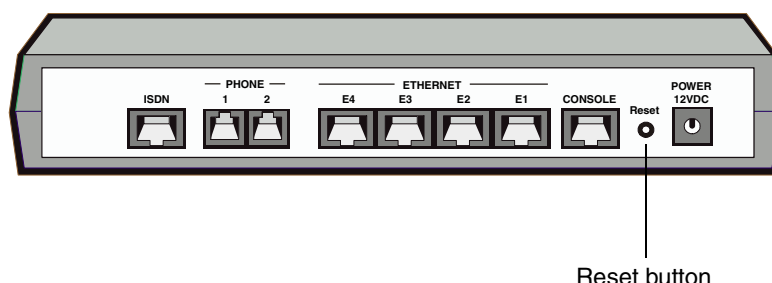

Two reset options are available:

Resetting operational settings

Use this to activate configuration settings you have made.

To reset

- Press and release the Reset button quickly. All the ISDN lights and the Fault light will flash, followed by all the ETHERNET lights. The lights then return to normal operation.

Using this option is equivalent to clicking the Reset button on the Configuration main menu in the Web-based configuration interface (page 43).

Resetting to factory defaults

Use this option to reset the DIVA LAN ISDN Modem to its factory default settings. Resetting to factory defaults erases the system password and returns all parameter setting to their defaults. You can use the web-based configuration interface to back up your configuration settings before you reset.

To reset

- Press and hold the reset button for 15 seconds.
- All lights (except POWER) will go out.
- After five seconds, the B1 and B2 indicator lights will turn red.
- Continue to hold the reset button until these lights go off. If you let go before the lights go off, you may not completely reset the DIVA LAN ISDN Modem and you may not be able to communicate with it.

You can also reset to factory defaults using:

- the Web-based configuration interface (page 49)
- the command line interface (page 136)
- a touch tone phone (page 135)

Termination

If you are in North America or Australia and you are installing a DIVA LAN ISDN Modem with an S/T interface, you must connect the terminating resistor to ensure the proper operation of your equipment.

Determining termination requirements

Termination requirements vary depending on the number of devices connected to an external NT1 and the distance between these devices and the NT1.

Single ISDN device

If the DIVA LAN ISDN Modem is the only device connected to the external NT1, then determine the length of the cable linking the two devices.

If the cable is longer than 75 meters (250 feet):

- Connect the included terminating resistor.
- Set the NT1 to provide 100 ohms of resistance. Consult the manual provided with the NT1 for more detailed instructions.

Note *Some NT1s do not support connections over 75 meters (250 feet). Check your user documentation to determine the distance supported.*

If the cable is shorter than 75 meters (250 feet):

- Do not connect the included terminating resistor.
- Set the NT1 to provide 50 ohms of resistance. Consult the manual provided with the NT1 for more detailed instructions.

Multiple ISDN devices

If the NT1 is connected to more than one ISDN device, determine the length of cable connecting the DIVA LAN ISDN Modem to the NT1.

If the cable is longer than 75 meters (250 feet):

- Connect the included terminating resistor.
- Set the other ISDN devices to 100 ohms of resistance. Consult the manuals provided with these devices for more detailed instructions.
- Set the NT1 to no termination. Consult the manual provided with the NT1 for more detailed instructions.

Note *Some NT1s do not support connections over 75 meters (250 feet). Check your user documentation to determine the distance supported.*


If the cable is shorter than 75 meters (250 feet):

- Do not connect the included terminating resistor.
- Set the other ISDN devices to no termination. Consult the manuals provided with these devices for more detailed instructions.
- Set the NT1 to provide 50 ohms of resistance. Consult the manual provided with the NT1 for more detailed instructions.

Installing the resistor

If termination is required, install the 100 ohm terminating resistor that is included in your package as follows:

1. Insert the RJ-45 end of the ISDN cable into the resistor

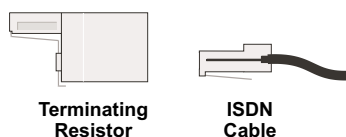

2. Insert the resistor into the ISDN wall outlet.

Command Line Reference

This appendix provides a description for each CLI command. The commands are grouped according to functionality.

Notational Conventions

The section uses the following conventions:

Syntax Example	Description
Cancel	Boldface type indicates the name of an item (a parameter name, command button, menu option, etc.) you need to select or perform an action on.
RESET	UPPERCASE TYPE indicates keywords. The actual words can be entered in either uppercase or lowercase.
[/C n]	Items enclosed in square brackets are optional. You can either include them or not. Do not enter the brackets. If the items are separated by vertical bars, you must choose one of the items. Enter only one item. Do not enter the vertical bar.
<i>numHops</i>	Items in lowercase italic type are user-supplied input. Replace these items with values appropriate to your system.
{ THIS THAT }	Two or more items enclosed in braces and separated by a vertical bars means you must choose one item. Enter only one item. Do not enter the vertical bar.

For example, if a command is presented as:

SET DHCP LEASEDURATION *duration* { MINS | HOURS | DAYS }
the following can be concluded:

SET DHCP LEASEDURATION	Enter as shown.
<i>duration</i>	Replace <i>duration</i> with a value you supply.
{ MINS HOURS DAYS }	Use one of these three choices.

For example: SET DHCP LEASEDURATION 10 HOURS

Commands

For information on:	See page:
AO/DI	155
Callback	155
Call screening	156
Call thresholds	157
DHCP	157
DNS	160
Ethernet	160
General	161
IP filters	163
IP NAT	166
IP routing	167
IP various	167
ISDN	169
ISDN Access Time	172
LAPD	173
Logging and Mail Trace	173
MLPPP	175
Phone	176
PPP	178
Profiles	181
Q.931	182
RIP	182
SNMP	183
TCP	184
TFTP	184
Time Protocol	185
UDP	185
V.120	185
V.120 Scripting	187
X.25	188

AO/DI

ENABLE AODI AREACODE

Valid context: *Profile/PPP*

Enables or disables use of the area code when making an AO/DI call. When enabled, the DIVA LAN ISDN Modem uses the area code when dialing a remote site. When disabled, it does not.

DISABLE AODI AREACODE

Valid context: *Profile/PPP*

SET AODI DIALPREFIX dialstr

Valid context: *Profile/PPP*

Specifies the prefix to dial when making an AO/DI call. For example, 1 to call long distance, or 9 to obtain an external line.

SET AODI TXBUFFER bytes

Valid context: *Profile/PPP*

Specifies the transmit queue threshold for X.25 on the D-channel when using AO/DI.

When queued data exceeds this limit, for the period of time specified with `\\"SET MLPPP LINKUP delay\\",` the 1st B-channel is added to the AO/DI connection. Range = 100 to 10000

Callback

SET CALLBACK MODE type option [number1 number2]

Valid context: *Profile/PPP*

Several callback modes are available. Each provides different features. For callback to work, both client and server must use the same mode. The DIVA LAN ISDN Modem can only function as a callback client.

type: NONE, NCP, ISDN

NONE: No callback.

NCP: Supports both the USERSPEC and ADMIN SPEC options. This is a Microsoft-developed solution. It is used by NT4, and devices from Cisco, Ascend, and other vendors. NCP enables you to specify a time delay before the server calls back.

ISDN: The server does not answer the initial call from the DIVA LAN ISDN Modem (thus there is no charge for the call). The remote uses caller ID information to return the call. Only works with Cisco IOS.

option: USERSPEC, ADMIN SPEC

USERSPEC: (user specified) The DIVA LAN ISDN Modem must supply the server with the callback number to use. The number must include the appropriate dialing prefixes.

ADMIN SPEC: (administer specified) The DIVA LAN ISDN Modem does not supply the server with a number to dial, instead the server maintains its own table of numbers. The server identifies the DIVA LAN ISDN Modem by its caller ID or user ID (supplied during call authentication). The server then uses this information to determine which number to dial for callback.

number1: USERSPEC only. This is the first number that the server dials when calling back. It should be the first ISDN number assigned to the DIVA LAN ISDN Modem, and include all required dialing pre-fixes.

number2: USERSPEC only. This is the second number that the server dials when calling back. For example, if you have two ISDN numbers, and you want to establish an MLPPP connection, the server must call in twice, once to establish each channel.

SET CALLBACK TIMEOUT seconds

Valid context: *Profile/PPP*

Sets the amount of time the DIVA LAN ISDN Modem waits for the server to call back. During this time, the DIVA LAN ISDN Modem will refuse incoming calls that are not from the callback server on the phone number that was configured for callback.

seconds: Length of delay in seconds. Range: 20 to 240. Default: 30.

SET CALLBACK DELAY seconds

Valid context: *Profile/PPP*

Callback control protocol only. Sets the amount of time the server waits before calling back. The DIVA LAN ISDN Modem proposes the delay during callback negotiation. The server can either accept or reject it.

seconds: Length of delay in seconds. Range: 1 to 30. Default: 5.

SHOW CALLBACK CONFIGURATION

Valid context: *Profile/PPP*

Displays the current setting of all callback parameters for the current profile.

Call screening

ADD ISDN SCREENING channel number

Valid context: *General*

Adds a number to the call screening table. When call screening is enabled, an incoming data call is only accepted if its number appears in the call screening table.

Use this command to add a number to the call screening table.

channel: ISDN number to screen calls on. Range 1 to 2.

number: ISDN telephone number to screen for. Enter up to 20 digits. Call screening does not support subaddresses.

DELETE ISDN SCREENING channel index

Valid context: *General*

Removes an ISDN number from the call screening table.

channel: ISDN channel to screen the number on. Range 1 to 2.

index: Index number of the table entry to delete. Range: 1 to 10.

ENABLE ISDN SCREENING

Valid context: *General*

Enables or disables ISDN call screening. When enabled, an incoming data call is only accepted if its number appears in the call screening table.

DISABLE ISDN SCREENING

Valid context: *General*

SHOW ISDN SCREENING

Valid context: *General*

Displays the ISDN call screening table. When call screening is enabled, an incoming data call is only accepted if its number appears in the call screening table.

Call thresholds

SET ISDN THRESHOLD intervalDays maxHours maxCalls

Valid context: *General*

Limits usage of the ISDN line based on number of calls or time connected during a specified interval.

intervalDays: Number of days in the interval. Range: 1 to 31 days.

maxHours: Maximum number of hours a profile can be connected during the interval. Range: 0 (disabled), 1 hour to (24 * intervalDays) hours.

maxCalls: Maximum number of calls a profile can make during the interval. Range: 0 (disabled), 1 to 1000.

ENABLE ISDN THRESHOLD DISABLE ISDN THRESHOLD

Valid context: *General*

Enables or disables ISDN threshold monitoring. When enabled, the DIVA LAN ISDN Modem limits usage of the ISDN line for each profile during the specified threshold monitoring interval. This lets you limit your ISDN usage charges.

When a profile exceeds a threshold limit, all profiles are disabled. You must reset the DIVA LAN ISDN Modem to re-activate the profiles. This also resets the threshold interval.

DHCP

SET DHCP TYPE {SERVER | NONE}

Valid context: *General*

Sets the type of DHCP services the DIVA LAN ISDN Modem will supply. DHCP server is active by default.

SERVER: As a DHCP server, the DIVA LAN ISDN Modem is responsible for assigning IP addresses when it receives a DHCP request from a network device.

NONE: No DHCP services are supplied.

SHOW DHCP STATUS

Valid context: *General*

Displays DHCP status and the list of IP addresses that are currently defined.

SET DHCP IPRANGE startIpaddress range

Valid context: *General*

Defines the pool of addresses the DIVA LAN ISDN Modem uses to assign dynamic addresses from when it is operating as a DHCP server.

startIpaddress: Starting address for the pool. This address must be on the same network as the LAN IP address. Default: 192.168.1.2. range: Number of addresses in the pool. Range: 1 to 50. Default: 50.

Defines the maximum number of addresses in the dynamic DHCP address pool. Range: 1 to 50. Default: 50.

SET DHCP LEASEDURATION duration MINS | HOURS | DAYS

Valid context: *General*

Defines the length of time a client address assigned by the DIVA LAN ISDN Modem is valid. Range: 30 minutes to 30 days.

SET DHCP DNS {PRIMARY | SECONDARY} DNSAddr

Valid context: *General*

Defines the IP address of the primary and secondary DNS servers that DIVA LAN ISDN Modem returns to DHCP clients when it is acting as a DHCP server. This is the server the clients will use as their DNS server. By default, the Primary DNS is set to 192.168.1.1, which is the address of the DIVA LAN ISDN Modem.

PRIMARY: Primary DNS server.

SECONDARY: Secondary DNS server.

DNSAddr: IP address of the DNS server. Default: 192.168.1.1 (the DIVA LAN ISDN Modem)

SET DHCP WINS {PRIMARY | SECONDARY} WINAddr

Valid context: *General*

Defines the IP address of the primary and secondary WINS servers that the DIVA LAN ISDN Modem returns to DHCP clients when it is acting as a DHCP server. This is the server the clients will use as their WINS server.

PRIMARY: Primary WINS server.

SECONDARY: Secondary WINS server.

WINSAddr: IP address of the WINS server.

SET DHCP DOMAIN domain

Valid context: *General*

Specifies the domain name returned by the DIVA LAN ISDN Modem when acting as a DHCP server in response to a DHCP request.

domain: Domain name as a string of up to 31 characters.

SHOW DHCP CONFIGURATION

Valid context: *General*

Displays the setting of all DHCP related parameters.

SET DHCP SERVERADDR {PRIMARY | SECONDARY} DHCPAddr

Valid context: *General*

Defines the address of the DHCP servers the DIVA LAN ISDN Modem forwards DHCP requests to when acting as a DHCP relay agent.

Primary: Primary DHCP server.

Secondary: Secondary DHCP server.

DHCPAddr: IP address of the DHCP server.

SHOW DHCP TRACE [memsize [framesize]]

Valid context: *General*

Starts or displays an already started DHCP trace for an ISDN channel.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN

Modem. Range: 1 to 63 KB . Default: 16 KB

framesize: The number of characters to display in each frame.

STOP DHCP TRACE

Valid context: *General*

Stops an active DHCP trace.

ADD DHCP STATICMAP ipAddress MACaddr

Valid context: *General*

Adds a new entry to the STATICMAP table. This table contains the list of static IP address assignments used by the DIVA LAN ISDN Modem when it is acting as a DHCP server. Each entry defines an IP address and IP mask for a specific MAC address.

ipAddress: IP address in dotted-decimal notation.

MACaddr: MAC (Ethernet) address of the target device. This address must be 12 hexadecimal digits separated by colons, commas, or hyphens. For example: 11:22:33:44:55:66

SET DHCP STATICMAP ip macaddr

Valid context: *General*

Modifies the definition of an existing entry in the STATICMAP table. See ADD DHCP STATICMAP for complete details.

ipAddress: IP address of the entry to modify.

MACaddr: New value for the Mac (Ethernet) address of the target device. MAC address must be 12 hexadecimal digits separated by colons as follows:

11:22:33:44:55:66

DELETE DHCP STATICMAP ip

Valid context: *General*

Deletes an entry from the STATICMAP table. See ADD DHCP STATICMAP for complete details.

ipAddress: IP address of the entry to delete.

SHOW DHCP STATICMAP

Valid context: *General*

Displays the list of defined static DHCP addresses. See ADD DHCP STATICMAP for complete details.

ENABLE DHCP STATICMAP ip DISABLE DHCP STATICMAP ip

Valid context: *General*

Enables or disables support for static address assignment when the DIVA LAN ISDN Modem is acting as a DHCP server. See ADD DHCP STATICMAP for complete details.

DNS

SET DNS DOMAIN domain

Valid context: *Profile*

When DNS relay is enabled, the DIVA LAN ISDN Modem checks each DNS request to see if it matches this name. If so, the DIVA LAN ISDN Modem establishes the connection defined by this profile, and forwards the request.

domain: Domain name or * to match any name.

Range: Up to 32 characters.

SET DNS ADDRESS {PRIMARY | SECONDARY} dnsaddr

Valid context: *Profile*

Specifies the address of the DNS server the DIVA LAN ISDN Modem routes DNS requests to when DNS Relay is enabled.

PRIMARY: First DNS server to route requests to.

SECONDARY: Second DNS server. Only used when the PRIMARY does not reply.

dnsIpaddr: IP address of the server.

ENABLE DNS RELAY DISABLE DNS RELAY

Valid context: *General*

When enabled, the DIVA LAN ISDN Modem forwards all DNS requests to a remote DNS server. It does this by matching the requested domain against the domain name assigned to each profile. If a match is found, the profile is connected and the DNS request is forwarded. DNS relay is enabled by default.

SHOW DNS CONFIGURATION

Valid context: *General*

Displays all DNS configuration settings.

Ethernet

SHOW ETHERNET STATISTICS

Valid context: *General*

Displays Ethernet statistics.

SHOW ETHERNET ADDRESS

Valid context: *Profile*

Displays the Ethernet address of the DIVA LAN ISDN Modem. You must be in the LAN profile to issue this command.

SHOW ETHERNET TRACE [memsize [framesize]]

Valid context: *General*

Starts or displays an Ethernet trace.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN

Modem. Range: 1 to 63 KB . Default: 16 KB

framesize: Number of characters to show for each frame.

STOP ETHERNET TRACE

Valid context: *General*

Stops an active Ethernet trace.

General

MONITOR

Valid context: *General*

Invokes monitor mode. Use monitor mode to upload new firmware or to dump system memory for debugging purposes. You can set the DIVA LAN ISDN Modem to automatically invoke monitor mode when a fatal error occurs by issuing the SET ONERROR command.

NEXT

Valid context: *Filter*

Makes the next IP filter the current context so you can edit it.

PREVIOUS

Valid context: *Filter*

Makes the previous IP filter the current context so you can edit it.

PING Ipaddr [number] [size]

Valid context: *General*

Lets you determine if an IP address is reachable.

Ipaddr: IP address of device to PING.

number: Number of messages to send. Range: 1 to no limit. Default: 4

size: size of the message in bytes. Range: 1 to 1472. Default: 64

RESET [FACTORY | HUB]

Valid context: *General*

Resets the DIVA LAN ISDN Modem.

FACTORY: Resets the DIVA LAN ISDN Modem and returns all parameters to their factory default settings. Deletes all user-defined profiles and the password.

HUB: Resets only the Ethernet ports.

LOGOUT

Valid context: *General*

Closes the current configuration session.

SET ONERROR {HALT | RESET}

Valid context: *General*

Defines how the DIVA LAN ISDN Modem reacts when it encounters a fatal error and cannot continue to operate normally.

HALT: Activate monitor mode when a fatal error is encountered. The fault LED will be lit.

RESET: Reset the system when fatal error is encountered.

SAVE [profileName]

Valid context: *General*

Saves the current configuration settings to non-volatile memory on the DIVA LAN ISDN Modem. If you do not save your changes, they will be lost when you power-off or reset the DIVA LAN ISDN Modem.

VALIDATE

Valid context: *General*

Validates the current configuration by running a series of tests. Validate helps you determine if the DIVA LAN ISDN Modem is properly configured.

SET TIME hh:mm[:ss]

Valid context: *General*

Sets the internal system clock.

hh: Hours. Range: 0 to 24.

mm: Minutes. Range 00 to 59.

ss: Seconds. Range 00 to 59.

SET DATE yy[yy]-mm-dd

Valid context: *General*

Sets the internal system date. For example: yyyy-mm-dd

mm: Month. Range: 1 to 12.

dd: Day. Range: 1 to 31.

yy[yy]: Year can be entered as either two or four digits. A two-digit year less than 80 is assumed to be after the year 2000.

SHOW DATE

Valid context: *General*

Displays the current system date and time.

**ENABLE DISPLAY
DISABLE DISPLAY**

Valid context: *General*

Enables or disables display of the status bar. The status bar is only available if your terminal supports VT100 emulation. By default, it is disabled.

Valid context: *General*

SET PASSWORD password

Valid context: *General*

Sets the password that users need to specify when logging on to a DIVALAN ISDN Modem configuration interface. Specify up to 11 alphanumeric characters. Spaces are not allowed. The password is case-sensitive, which means \"PASS\" and \"pass\" are not the same.

SHOW TIME

Valid context: *General*

Displays the system date and time.

SHOW STATUS

Valid context: *General*

Displays general information about the DIVA LAN ISDN Modem.

SHOW LED STATUS

Valid context: *General*

Displays the current status of the DIVA LAN ISDN Modem LEDs. For example:

LED Status

B1	B2	D	LINK	E1	E2	E3	E4/C	FAULT	POWER
On	Off	On	On	Flash	Flash	Off	*Flash	Off	On

A * next to an On indicates that the LED color is NOT green. It could be orange or red.

SET SYSTEM NAME name

Valid context: *General*

Defines the SNMP name of the DIVA LAN ISDN Modem. Enter up to 29 alphanumeric characters.

SHOW SYSTEM STATUS

Valid context: *General*

Displays system information: memory, firmware version, etc.

SHOW VERSION

Valid context: *General*

Displays system information: memory, firmware version, etc.

SET HOSTNAME name

Sets the domain name of the DIVA LAN ISDN Modem. This is also the address of the home page of the Web-based configuration interface. The text ".lanmodem\" is appended to whatever name you enter. Default: diva (i.e., diva.lanmodem). Range: Up to 32 characters.

SHOW CALLS STATUS [ACTIVE | LAST]

Valid context: *General*

Shows status information for an ISDN call.

ACTIVE: The active call.

LAST: The last call.

SHOW CALLS STATISTICS

Valid context: *Profile/PPP*

Show statistics information for the active call or the last call.

IP filters

ADD IP FILTER filterNum

Valid context: *Profile*

Adds a new IP filter to the list at the specified position. This enables you to insert a filter at any point in the list.

filternum: Position to add the new filter.

DELETE IP FILTER filterNum

Valid context: *Profile*

Delete an IP filter.

filterNum: Number of the IP filter to delete.

ENABLE FILTER DISABLE FILTER

Valid context: *Filter/Profile*

Enables or disables IP filters. In Profile context, this applies to all filters defined for the profile. In Filter context, this applies only to filters defined for the current filter.

COPY FILTER filterNumber

Valid context: *Filter/Profile*

Copies an existing filter to the current filter. Only available in the filter context.

filterNumber: Number of the IP filter to copy.

SET ACTION {DROP | FORWARD}

Valid context: *Filter*

Sets the action this filter takes when it encounters data that matches the filter setting.

DROP: Discard the data.

FORWARD: Forward the data to the next filter.

SET DIRECTION {IN | OUT | ANY}

Valid context: *Filter*

Sets whether the filter applies to incoming or outgoing data.

IN: Filter applies to incoming data only.

OUT: Filter applies to outgoing data only.

ANY: Filter applies to all data. Default setting.

SET IP SOURCE Ipaddr netMask

Valid context: *Filter/Profile*

Sets the source address and network mask for the filter. Only data which originates from the specified address and network is processed by this filter.

Ipaddr: Source IP address of data to filter.

netMask: Source network mask of data to filter.

SET IP DESTINATION Ipaddr netMask

Valid context: *Filter/Profile*

Sets the destination address and network mask for the filter. Only data which is destined for the specified address and network is processed by this filter.

Ipaddr: Destination IP address of data to filter.

netMask: Destination network mask for data to filter.

SET UDP SOURCE lowPort highPort

Valid context: *Filter*

Sets the minimum and maximum source UDP ports for which this filter will process data.

lowPort: Minimum UDP port number of data to filter. Range: 0 to highPort. Default 0.

highPort: Maximum UDP port number of data to filter. Range lowPort to 65535. Default 65535.

SET UDP DESTINATION lowPort highPort

Valid context: *Filter*

Sets the minimum and maximum destination UDP ports for which this filter will process data.

lowPort: Minimum UDP port number of data to filter. Range: 0 to highPort. Default 0.

highPort: Maximum UDP port number of data to filter. Range lowPort to 65535. Default 65535.

SET TCP SOURCE lowPort highPort

Valid context: *Filter*

Sets the minimum and maximum source TCP ports for which this filter will process data.

lowPort: Minimum TCP port number of data to filter. Range: 0 to highPort. Default 0.

highPort: Maximum TCP port number of data to filter. Range lowPort to 65535. Default 65535.

SET TCP DESTINATION lowPort highPort

Valid context: *Filter*

Sets the minimum and maximum destination TCP ports for which this filter will process data.

lowPort: Minimum TCP port number of data to filter. Range: 0 to highPort. Default 0.

highPort: Maximum TCP port number of data to filter. Range lowPort to 65535. Default 65535.

SET IP FILTER filterNum

Valid context: *Profile*

Makes the specified filter the active context so you can edit it.

filterNum: Number of the IP filter to edit.

SHOW IP FILTER

Valid context: *Filter/Profile*

Display all IP filters for the current profile. Or if in a Filter, only those filters that are defined for the current filter.

SET TYPE {ALL | UDP | TCP | SYN | ANYICMP}

Valid context: *Filter*

Sets the type of data this filter applies to.

ALL: This filter applies to all data.

UDP: This filter applies to UDP data.

TCP: This filter applies to TCP data. Default setting.

SYN: This filter applies to TCP connection (SYN) data.

ANYICMP: This filter applies to all ICMP data.

ICMP: This filter applies to specific ICMP data only (as set by type)

type: ICMP type to filter.

IP NAT

ENABLE IP NAT **DISABLE IP NAT**

Valid context: *Profile*

Enables or disables NAT (network address translation) for this profile. NAT allows the DIVA LAN ISDN Modem to use only one IP address when communicating with remote sites via the ISDN port. NAT is enabled by default.

SHOW IP NAT

Valid context: *General*

Displays the IP NAT table, which contains the settings for all computers on the internal LAN that are visible to the external network.

ADD IP NAT {UDP | TCP} port ipaddress

Valid context: *General*

Allows a computer on the internal LAN to be visible to the external network

for a particular protocol. For example, if you want an internal computer to function as a SMTP (E-mail) server, set TCP to port 25 and enter the IP address of the computer.

UDP: Use the UDP protocol.

TCP: Use the TCP protocol.

port: Port to use.

ipaddress: IP address of the computer on the internal LAN.

DELETE IP NAT {UDP | TCP} port

Valid context: *General*

Deletes the specified entry in the IP NAT table.

UDP: UDP protocol.

TCP: TCP protocol.

port: Port being used.

DEFAULT: The IP address that the DIVA LAN ISDN Modem forwards unresolved incoming datagrams to.

ipaddress: IP address of the computer on the internal LAN.

SET IP NAT {UDP | TCP | DEFAULT} port address

Valid context: *General*

Allows a computer on the internal LAN to be visible to the external network

for a particular protocol. For example, if you want an internal computer to function as a SMTP server set TCP to port 25 and enter the IP address of the computer.

UDP: Use the UDP protocol.

TCP: Use the TCP protocol.

DEFAULT: The IP address that the DIVA LAN ISDN Modem forwards unresolved incoming datagrams to.

port: Port to use.

address: IP address of the computer on the internal LAN.

IP routing

ADD IP ROUTE Ipaddr maskLen[:metric] [gwAddr]

Valid context: *Profile*

Adds a static IP route.

Ipaddr: Specifies the IP address of datagrams that should be routed.

maskLen: Lets you specify the number of bits that are checked when comparing the address of a datagram to that specified by the Ipaddr parameter. Range: 0 to 32.

metric: Metric determines the weight of a route. If two identical routes exist, then the DIVA LAN ISDN Modem uses the route with the lower metric. Default value: 1 Range: 1 - 15, 16 (never use this route).

gwAddr: Specifies the IP address of the device to forward datagrams to if a match is found.

DELETE IP ROUTE Ipaddr

Valid context: *General*

Deletes an IP route.

Ipaddr: Address of the IP route to delete.

SET IP ROUTE Ipaddr maskLen [gwAddr]

Valid context: *General*

Modifies the mask and gateway address for an existing IP route. See ADD IP ROUTE for more information.

Ipaddr: The IP address of the existing route to change.

maskLen: New setting for mask length. Range: 0 to 32

gwAddr: New setting for gateway address.

SHOW IP ROUTE

Valid context: *General*

Displays all defined static and dynamic IP routes.

IP various

SHOW ICMP STATISTICS

Valid context: *General*

Displays ICMP statistics.

SET IP REMOTE Ipaddr

Valid context: *Profile*

Sets the IP address of the remote device this profile connects to. Use this only in cases when a static IP address is assigned to the remote site. In most cases, specify 0.0.0.0 to allow dynamic negotiation of the address when the connection is established.

Dynamic negotiation is not supported by the LAN profile.

SET IP ADDRESS *Ipaddr*

Valid context: *Profile*

Sets the IP address this profile should use in cases when a static address is assigned to the DIVA LAN ISDN Modem by your ISP or network administrator. In most cases, specify 0.0.0.0 to allow dynamic negotiation when the connection is established.

Dynamic negotiation is not supported by the LAN profile.

SHOW IP ADDRESS

Valid context: *General*

Displays the current IP addresses for the DIVA LAN ISDN Modem. The addresses

you see might not be those that are defined, but rather those as negotiated by IP. For example, if an IP address is set to 0, it is negotiated to a new value when the device connects. This command only displays the addresses that apply to the current profile, or all addresses if executed from the general context.

SET IP BACKUP *profilename*

Valid context: *Profile*

Specifies the backup profile to use when this profile cannot connect. The backup profile is invoked when the maximum number of connection retries has been exceeded.

SET IP DESCRIPTION *description*

Valid context: *Profile*

Sets the description for this IP interface.

description: 39 alphanumeric characters.

SET IP MASK *Ipaddr*

Valid context: *Profile*

Sets the subnet mask for this profile.

SHOW IP STATISTICS

Valid context: *General*

Displays statistics for the IP protocol.

SHOW IP STATUS

Valid context: *General*

Displays IP status information and all configured IP addresses.

SHOW IP CONFIGURATION

Valid context: *General*

Displays IP configuration settings.

SET IP SERVICES {ALL | INTELLIGENT | MINIMAL | NONE}

Valid context: *General*

Defines the level of support the DIVA LAN ISDN Modem provides for Microsoft NetBIOS services (which are integrated into Microsoft TCP/IP). NetBIOS is required to support Microsoft Windows Network Neighborhood, the MAP NETWORK option in Windows Explorer, and various DOS-based networking commands (such as net use, net view, and net login).

ALL: The DIVA LAN ISDN Modem forwards all NetBIOS traffic to the remote site. May result in substantial ISDN charges unless you have a flat rate connection.

INTELLIGENT: Provides full support for all Network Neighborhood functions, but spoofs unnecessary traffic to reduce usage of the ISDN line.

MINIMAL: Reduces NetBIOS traffic to a minimum. Does not support Network Neighborhood functions. However, does support the MAP NETWORK option in Windows Explorer and DOS-based networking commands such as net use, net view, and net logon. Most economical solution.

NONE: The DIVA LAN ISDN Modem discards all NetBIOS traffic. NetBIOS services are not supported across the ISDN link.

ENABLE IP SPOOFING DISABLE IP SPOOFING

Valid context: *General*

Enables or disables spoofing. When enabled, the DIVA LAN ISDN Modem does the following:

- spoofs all TCP keep alive datagrams
- spoofs all Microsoft Server Message Block datagrams
- drops all NetBIOS over IP name service traffic

ENABLE IP MULTICAST DISABLE IP MULTICAST

Valid context: *Profile*

Enables or disables support for IP multicasting. When disabled (default settings), the DIVA LAN ISDN Modem does not forward IP multicast datagrams from the WAN onto the LAN. To allow computers on the Ethernet LAN to subscribe to services that use IP multicasting as a delivery mechanism, you must enable this option.

ENABLE IP MANUALDIAL DISABLE IP MANUALDIAL

Valid context: *Profile*

Enables or disables manual dialing of this profile. When enabled, the DIVA LAN ISDN Modem will not automatically connect the profile when data needs to be sent. Instead, you must manually connect the profile.

Use the Dial command to do this.

ENABLE IP UNNUMBERED DISABLE IP UNNUMBERED

Valid context: *Profile*

Enables or disables IP unnumbered mode for this profile. Permits you to save an IP address by using the same IP address for the DIVA LAN ISDN Modem on both the Internet and internal LAN. Only valid if NAT is not enabled.

ISDN

ENABLE ISDN TEISHARING DISABLE ISDN TEISHARING

Valid context: *General*

Enables or disables the sharing of TEI assignments. Some switches only make two TEIs available for an ISDN line. Therefore, if you are using AO/DI, enable this option. This shares the TEI between channels B1 and D.

TEISHARING is disabled by default and is only available if TEI assignment is dynamic (SET ISDN TEI DYNAMIC).

ENABLE ISDN ANSWER DISABLE ISDN ANSWER

Valid context: *General*

Specifies if the DIVA LAN ISDN Modem will answer incoming ISDN data calls. If disabled, incoming data calls are ignored. This parameter is disabled by default.

SET ISDN BILLINTERVAL initialTime recurringTime

Valid context: *General*

Allows you to minimize your ISDN charges by controlling the frequency with which the DIVA LAN ISDN Modem will enable and disable an ISDN channel.

initialTime: The minimum amount of time that an ISDN channel will be enabled for. Range: 0 to 1800 seconds. Default: 60 seconds.

recurringTime: The minimum amount of time that an ISDN channel remains enabled after initialTime is surpassed. Range: 10 to 1800 seconds. Default: 60 seconds.

SET ISDN DN channel isdnNumber [DATA]

Valid context: *General*

Sets your ISDN telephone number. ISDN telephone numbers are defined by your ISDN provider to identify your ISDN equipment. Enter 20 digits followed by a dot followed by a 20 digit subaddress (optional). Note that the following three characters will be removed after the number is entered: hyphen, space, parenthesis.

channel: First or second ISDN number. Range: 1 to 2.

isdnNumber: ISDN phone number.

DATA: International version only. Enables enhanced support for data traffic on the selected port. Throughput is increased, but supplementary calling services are not supported.

SET ISDN TELEPHONE channel isdnNumber

Valid context: *General*

This command is an alias for SET ISDN DN.

SET ISDN TELEPHONE channel isdnNumber [DATA]

Valid context: *General*

This command is an alias for SET ISDN DN.

SET ISDN REMOTE channel isdnNumber

Valid context: *Profile/PPP*

Sets the remote ISDN numbers the DIVA LAN ISDN Modem should dial when making calls for this profile.

channel: ISDN channel. Range: 1 to 2.

isdnNumber: ISDN number.

SET ISDN BACKUP channel isdnNumber

Valid context: *Profile/PPP*

Sets the remote backup ISDN numbers the DIVA LAN ISDN Modem should dial when the remote numbers failed to connect.

channel: ISDN channel. Range: 1 to 2.

isdnNumber: ISDN number.

DETECT ISDN SPID

Valid context: *General*

Before you use this command you must define the telephone number for each ISDN channel. The DIVA LAN ISDN Modem uses these telephone numbers to determine the SPID assigned to each channel.

SET ISDN SPID channel spid

Valid context: *General*

Service Profile Identifiers are defined by your ISDN provider to identify your ISDN equipment to the ISDN switch. If your line supports AutoSPID, the DIVA LAN ISDN Modem automatically detects your SPIDs.

channel: First or second SPID. Range: 1 to 2.

spid: SPID number to assign. Range: 1 to 32 digits.

SET ISDN SWITCH {NI1 | 5ESS | AUTO | 5ESSPP}

Valid context: *General*

Specifies the type of ISDN switch used by your ISDN service provider.

NI1: National ISDN-1 switch.

5ESS: AT&T 5ESS switch.

5ESSPP: AT&T 5ESS switch/Point to Point. This setting does not require SPIDs.

AUTO: The DIVA LAN ISDN Modem automatically detects the switch type in use.

SET ISDN SWITCH {JATE | EURO | BT | TPH | CHINA | SINGAPORE}

Valid context: *General*

Specifies the type of ISDN switch used by your ISDN service provider.

EURO: Euro-ISDN

TPH: Microlink (TPH1962/TS013)

JATE: INS-Net64 (Japan)

BT: British Telecom

SET ISDN TEI {isdnTEI | DYNAMIC}

Valid context: *General*

Defines the TEI used by ISDN to support X.25 communications over the D-channel. This setting takes precedence over TEI sharing (dynamic allocation).

isdnTEI: TEI number to assign to the D-channel for X.25. Your service provider will provide this value. Range: 1 to 127.

DYNAMIC: TEI number is negotiated with the ISDN switch and also allows TEIs to be shared (ENABLE ISDN TEISHARING).

SET ISDN CALLTYPE {AUTO | 56K | DOV}

Valid context: *Profile/PPP*

Defines the ISDN call type for this profile.

56K: Transmit and receive at 56 kbps.

DOV: Establish all data calls as voice calls. Useful in areas where voice calls cost less than data calls. Throughput is not affected.

AUTO: Transmit and receive at 64 kbps or 56 kbps.

ENABLE ISDN DELAY56K {DEFAULT | VALUE delay}

Valid context: *General*

An attempt is made to automatically re-establish a data call at 56 kbps if a data call attempt failed at 64 kbps due to network congestion, or if a service or option was not available or not configured.

DEFAULT: Immediately try to connect at 56 kbps if a call fails at 64 kbps. In Australia and Japan, do not retry.

VALUE delay: Specifies how long to wait before retrying. Range 0 to 10 seconds., 254 (use pre-configured values depending on region), 255 (no retry).

DISABLE ISDN DELAY56K

Valid context: *General*

SHOW ISDN STATISTICS

Valid context: *General*

Displays statistics for the two ISDN channels.

SHOW ISDN STATUS

Valid context: *General*

Displays ISDN status information.

SHOW ISDN CONFIGURATION

Valid context: *General*

Displays ISDN configuration information.

ISDN Access Time

ADD ISDN ACCESTIME days time {IN | OUT | ANY| BLOCKED}

Valid context: *General*

Defines the times during which ISDN data calls can be made or received.

For example, the command `"add isdn accesstime mon-fri 9:00-17:00 IN"` enables incoming calls Monday to Friday, from 9AM to 5PM.

days: Starting and ending days, separated by a hyphen. Range: mon, tues, wed, thur, fri, sat, sun. Range must be within the same week (sun-sat). You can specify only one day as well.

time: Starting and ending time in hours and minutes, separated by a hyphen.

Time must be within the same day (0:00 - 24:00).

IN: Allow incoming calls only.

OUT: Allow outgoing calls only.

ANY: Allow both incoming and outgoing calls.

BLOCKED: Prohibits both incoming and outgoing calls.

SET ISDN ACCESTIME index {DAYS | TIME | DIRECTION} item

Valid context: *General*

Changes the settings for an entry in the ISDN ACCESTIME table. These entries define the times during which ISDN calls can be made or received.

index: Entry number in the table.

DAYS: Change the setting for starting and ending days. Separate days by a hyphen. Range: mon, tues, wed, thur, fri, sat, sun. Range must be within the same week (sun-sat). You can specify only one day as well.

TIME: Change the setting for starting and ending time. Specify time in hours and minutes, separated by a hyphen. Time must be within the same day 0:00 - 24:00.

DIRECTION: Change the setting for direction: Specify IN, OUT, ANY or BLOCK.

DELETE ISDN ACESSTIME index

Valid context: *General*

Deletes the settings for an entry in the ISDN ACESSTIME table. These entries define the times during which ISDN data calls can be made or received.

index: Entry number in the table.

SHOW ISDN ACESSTIME

Valid context: *General*

Displays the ISDN ACESSTIME table. These entries define the times during which ISDN data calls can be made or received.

ENABLE ISDN ACESSTIME DISABLE ISDN ACESSTIME

Valid context: *General*

Enable or disable support for ISDN access time. When enabled, the DIVA LAN ISDN Modem restricts incoming and outgoing data calls based on the settings in the ISDN ACESSTIME table.

LAPD

SHOW LAPD TRACE [memsize [framesize]]

Valid context: *General*

This command will start a LAPD trace or display information for a LAPD trace that is already active.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN Modem. Range: 1 to 63 KB. Default: 16 KB

framesize: The number of characters to display in each frame.

STOP LAPD TRACE

Valid context: *General*

Stops and resets a LAPD trace.

Logging and Mail Trace

SET LOG FILTER {TRACE | DEBUG | INFO | SECURITY | WARNING}

Valid context: *General*

Specifies the type of information that will be written to the DIVA LAN ISDN Modem event log. See SHOW LOG for a description of the information written to the log by each setting.

ENABLE LOG MODULE taskName | ALL
DISABLE LOG MODULE taskName | ALL

Valid context: *General*

Enables or disables the inclusion of firmware module messages in the log file. Each firmware module issues status messages during the course of its operations. Use this command to set which messages are displayed from the log when you issue the SHOW LOG command.

taskName: Use module names as shown in SHOW LOG. For example: DHCP, DNS, PPP, IP, IPPP.

ALL: Affects all module messages.

ENABLE LOG OUTPUT SCREEN | REMOTE hostAddr
DISABLE LOG OUTPUT SCREEN | REMOTE

Valid context: *General*

Sends event log information to the specified device.

SCREEN: Every time an event is added to the log it is also displayed on the local screen.

REMOTE: Every time an event occurs, a message is sent to the remote device.

hostAddr: IP address of the remote device.

SHOW MAIL TRACE [control]

Valid context: *General*

Displays a mail trace.

control: [buf_size[,entry_size[,filter]]] -p -s -r

buf_size: Size of trace buffer in bytes. (hexadecimal)

entry_size: Maximum size of each element to include.

filter: Type of filter.

- p: Stop/pause trace.

- s: Restart trace from paused state.

- r: Reset (clear) trace buffer.

nothing: auto-pause the mail trace and read current contents

STOP MAIL TRACE

Valid context: *General*

Stops an active mail trace.

SHOW LOG [STATUS]

Valid context: *General*

Displays the event log. If STATUS is specified, this command only displays status information.

MLPPP

SET MLPPP LINKUP threshold delay [channel]

Valid context: *Profile/PPP*

Sets the conditions that define when the DIVA LAN ISDN Modem brings up an ISDN B-channel.

threshold: Percent usage of the current channel. Range: 50 to 100%. Default: 70%.

delay: How long usage must stay at threshold before the B-channel is brought up. Range: 1 to 120 sec. Default: 5 sec.

channel: ISDN B-channel to bring up. Range: 1 to 2. Default: assign to both B-channels.

SET MLPPP LINKDOWN threshold delay [channel]

Valid context: *Profile/PPP*

Sets the conditions that define when the DIVA LAN ISDN Modem brings down an ISDN B-channel. This can never result in the termination of a connection. If only one channel is in use, no action is taken.

threshold: Percent usage of the previous last channel. Range: 0 to 50%. Default: 40%.

delay: How long usage must stay at threshold before channel is brought down. Range: 1 to 120 sec. Default: 5 sec.

channel: ISDN channel to bring down. Range: 1 to 2. Default: assign to both channels.

SET MLPPP POLICY {AUTO | DONLY}

Valid context: *Profile/PPP*

Determines ISDN line usage when AO/DI is enabled.

AUTO: Data is transferred on the D-channel, plus both B-channels if required.

DONLY: Data is only transferred on the D-channel.

SET MLPPP MODE {DISABLE | NORMAL | BACP | AODI}

Valid context: *Profile/PPP*

The DIVA LAN ISDN Modem uses multilink PPP to combine both ISDN B-channels into a single 128 kbps communications link.

DISABLE: Disable MLPPP support.

NORMAL: Enable MLPPP support.

BACP: The DIVA LAN ISDN Modem uses BACP to monitor incoming and outgoing traffic, and to open or close your second ISDN channel as the traffic volume warrants. This reduces your communications charges by ensuring that two ISDN channels are never active when one is sufficient.

AODI: Always On/Dynamic ISDN lets you maintain a permanent D-channel connection for low-bandwidth applications. AODI incorporates BACP, ensuring that ISDN channels are automatically activated/deactivated in response to data traffic.

SHOW MLPPP CONFIGURATION

Valid context: *Profile/PPP*

Displays MLPPP configuration settings, including BACP and AO/DI.

Phone

ENABLE PHONE ALTRING channel **DISABLE PHONE ALTRING channel**

Valid context: *General*

If you have two phone numbers assigned to phone port, the DIVA LAN ISDN Modem assigns a distinctive ring to each number.

If you ENABLE PHONE ALTRING for a port, the assigned rings are swapped.

channel: PHONE port number. Range: 1 to 2.

ENABLE PHONE CALLBUMPING **DISABLE PHONE CALLBUMPING**

Valid context: *General*

Enables or disables call bumping. Call bumping is only effective if you are using MLPPP, MLPPP+BACP, or MLPPP+AO/DI. When enabled, an incoming or outgoing voice call will temporarily disconnect one channel of an active data call. If PPP is in use on both B-channels, then call bumping does not work (incoming and outgoing calls will receive a busy signal).

ENABLE PHONE CALLWAITING [port] **DISABLE PHONE CALLWAITING [port]**

Valid context: *General*

Enables or disables call waiting for analog phones (POTS).

port: Phone port number. Range: 1 to 2. Default: applies to both ports.

ENABLE PHONE CALLS channel [IN | OUT] **DISABLE PHONE CALLS channel [IN | OUT]**

Valid context: *General*

Enables or disables incoming and/or outgoing POTS phone calls on a specific ISDN channel.

channel: ISDN channel. Range: 1 to 2.

IN: Enable/Disable incoming calls.

OUT: Enable/Disable outgoing calls.

SET PHONE RING FREQUENCY {0 | 20 | 25 | 40 | 50}

Valid context: *General*

Specifies the ringer frequency for phones connected to the PHONE ports.

0: The ring frequency is determined by the country setting (SET PHONE COUNTRY).

20, 25, 40, 50: Ringer frequency in hertz.

ENABLE PHONE CALLERID **DISABLE PHONE CALLERID**

Valid context: *General*

Enables or disables caller ID for connected phones (POTS). When enabled, telephones with Call Display will display incoming call information.

SET PHONE FEATUREKEY {CONFERENCE | TRANSFER | DROP | MSGINDICATOR} value

Valid context: *General*

Specifies the feature key for analog device calling features.

CONFERENCE: Conference call.

TRANSFER: Call transfer.

DROP: Call drop.

MSGINDICATOR: Message waiting indicator.

value: 1 to 16383. Defaults are: Conference Call = 60, Call Transfer = 61, Call Drop = 62, Message Waiting Indicator = 63.

SET PHONE MSGINDICATOR refresh

Valid context: *General*

Specifies how frequently the DIVA LAN ISDN Modem should refresh the Visual Message Indicator.

refresh: Refresh time in minutes. Range: 0 (disabled), 1 to 60. Default: 30. It is recommended that refresh not be set to below 30 minutes.

SET PHONE CAPABILITY channel {SPEECH | DATA}

Valid context: *General*

Specifies the type of traffic a PHONE is optimized to support.

channel: Phone port. Range: 1 to 2.

SPEECH: Port can carry voice and data traffic.

DATA: Sets the bearer capability of the port to 3.1 KHz audio, which provides better throughput when using faxes and modems. Support for supplementary services (Call Waiting, etc.) is disabled.

SET PHONE ENCODINGLAW {AUTO | ULAW | ALAW}

Valid context: *General*

Specifies the type of encoding law for ISDN voice calls.

AUTO: Automatically detect the correct encoding to use.

ULAW: Use when connected to an INS-Net64, NI-1 or AT&T 5ESS switch.

ALAW: Use when connected to a EuroISDN or TPH switch.

ENABLE PHONE VOICEMAIL channel [SILENT]

Valid context: *General*

Enables voice mail support.

channel: PHONE port number. Range: 1 to 2.

SILENT: Mutes periodic ring warning you of waiting messages.

DISABLE PHONE VOICEMAIL channel

Valid context: *General*

Disables voice mail support.

channel: PHONE port number. Range: 1 to 2.

ENABLE PHONE SERVICES channel
DISABLE PHONE SERVICES channel

Valid context: *General*

Enables or disables support for all supplementary phone services.

channel: Channel number. Range: 1 to 2.

SET PHONE COUNTRY country

Valid context: *General*

Specifies the country in which this phone is being used. Sets the phone to behave as expected in the selected country.

country: Code identifying the country in which the phone is being used. Use the command SHOW PHONE COUNTRY to see the list of supported countries and their codes.

SET PHONE MSN channel phone

Valid context: *General*

If your ISDN line supports multiple subscriber numbering, you can assign an additional phone number to each PHONE port.

channel: Phone port number. Range: 1 to 2.

Phone: ISDN phone number to assign to the port.

SHOW PHONE COUNTRY

Valid context: *General*

Displays a list of countries and their associated codes.

SHOW PHONE CONFIGURATION

Valid context: *General*

Displays the current settings of all phone parameters.

PPP

SET PPP AUTHENT {ENCRYPTED | ANY}

Valid context: *Profile/PPP*

Specifies how authentication is handled for a call. If the remote is not using the same type of password (encrypted/unencrypted), then the call is rejected.

ENCRYPTED: Accepts only calls using encrypted passwords for authentication.

ANY: Accepts calls using either encrypted or unencrypted passwords. Default setting.

ENABLE PPP AUTHENT
DISABLE PPP AUTHENT

Valid context: *Profile/PPP*

Enables or disables authentication when dialing out. If enabled, the DIVA LAN ISDN Modem attempts to authenticate the remote with whatever authentication method is defined. This option is disabled by default.

SET PPP LPASSWORD localPassword

Valid context: *Profile/PPP*

Sets the password that the DIVA LAN ISDN Modem will use when replying to valid authentication requests. For example, when connecting to your ISP, this is the password that is used to log on. Specify 0 to 31 alphanumeric characters (no spaces).

SET PPP LNAME localName

Valid context: *Profile/PPP*

Sets the name that the DIVA LAN ISDN Modem will use when replying to valid authentication requests. For example, when connecting to your ISP, this is the name that is used to log on. Specify 0 to 31 alphanumeric characters (no spaces).

SET PPP RNAME remoteName

Valid context: *Profile/PPP*

Sets the name the remote user or device must supply when authentication is requested by the DIVA LAN ISDN Modem. Specify 1 to 31 alphanumeric characters (no spaces).

SET PPP RPASSWORD remotePassword

Valid context: *Profile/PPP*

Sets the password the remote device must supply when authentication is requested by the DIVA LAN ISDN Modem. Specify 1 to 31 alphanumeric characters (no spaces).

**ENABLE PPP COMPRESSION
DISABLE PPP COMPRESSION**

Valid context: *Profile/PPP*

Enables or disables PPP compression. When enabled, the DIVA LAN ISDN Modem automatically negotiates one of the following standards: Ascend, MPPC, MS-STAC, STAC 1, and STAC 3. Compression is disabled by default.

**ENABLE PPP SECUREID
DISABLE PPP SECUREID**

Valid context: *Profile/PPP*

Enables or disables support for SecureID client applications.

When enabled, the DIVA LAN ISDN Modem uses the SecureID name and password instead of the username (SET PPP LNAME) and password (SET PPP LPASSWORD) configured on the DIVA LAN ISDN Modem for the active profile. The DIVA LAN ISDN Modem dynamically obtains the SecureID name and password from the SecureID client application as required.

SET PPP BACKUP profilename

Valid context: *Profile/PPP*

Specifies the alternate profile to use when a connection attempt with this profile fails.

profilename: Name of the alternate profile.

**ENABLE PPP ECHOREQUEST
DISABLE PPP ECHOREQUEST**

Valid context: *Profile/PPP*

Enables or disables the use of PPP echo requests. Some systems do not properly respond to PPP echo requests. To connect to these systems you will have to disable the sending of PPP echo requests.

SET PPP IDLETIME interval

Valid context: *Profile/PPP*

Each profile has its own idle timer. The idle timer controls how long a data call stays connected when no traffic is being sent or received. When the idle timer expires, the DIVA LAN ISDN Modem disconnects the call at the end of the next billing interval. Range 0 (never disconnect), 15 to 900 seconds. Default: 120 seconds.

SET PPP MAXRETRY number [2ndchannel]

Valid context: *Profile/PPP*

Sets the maximum number of attempts this profile makes to establish a connection with this profile. When this limit is reached, the DIVA LAN ISDN Modem places the profile in the "failed" state and a backup profile, if defined, is dialed.

To automatically reset the profile, use the command SET PPP RESTOREDELAY. To reset the profile manually, dial it or reset the DIVA LAN ISDN Modem.

number: Number of times the DIVA LAN ISDN Modem will attempt to activate the ISDN link. Range: 0 to 250. Default: 25.

2ndchannel: If this profile supports, BACP, this parameter sets the number of times BACP will attempt to activate the second B-channel.

SET PPP RESTOREDELAY interval

Valid context: *Profile/PPP*

Automatically restores a profile from "failed" state to "ready" state after the specified number of seconds.

interval: Time to wait before restoring the profile to ready state. Range: 0 (do not restore), 300 - 65535 seconds.

SET PPP RETRYDELAY interval

Valid context: *Profile/PPP*

Sets the amount of time the DIVA LAN ISDN Modem waits after a failed connection attempt, before retrying.

SHOW PPP CONFIGURATION

Valid context: *Profile/PPP*

Displays the current PPP configuration settings.

SHOW PPP STATISTICS

Valid context: *General*

Displays PPP statistics.

SHOW PPP STATUS

Valid context: *Profile/PPP*

Displays PPP status.

SHOW PPP TRACE [port[mask] [memsize [framesize]]]

Valid context: *Profile/PPP*

Starts or displays an already started PPP trace for an ISDN channel.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN Modem. Range: 1 to 63 KB . Default: 16 KB

framesize: The number of characters to display in each frame.

STOP PPP TRACE [port]

Valid context: *Profile/PPP*

Stops a PPP trace for an ISDN channel.

Profiles

SET PROFILE NAME *name*

Valid context: *Profile*

Changes the name of the current profile.

name: New name for the profile. The name must not contain spaces.

ENABLE PROFILE DISABLE PROFILE

Valid context: *Profile*

Enables or disables the current profile.

SHOW PROFILE [*profileName*]

Valid context: *General*

Displays the configuration settings for all profiles.

TEST PROFILE

Valid context: *Profile/PPP*

Tests the profile. Each step in the test is displayed on the screen with its results.

PROFILE [*profileName*]

Valid context: *General*

Changes the active context to the specified profile. If no name is specified, you are placed in the General context. The exception to this is if you are in the Filter context, then you are returned to the profile you came from.

profileName: Name of an existing profile.

LAN

Valid context: *General*

Changes the current context to the predefined LAN profile.

INCOMING

Valid context: *General*

Changes the current context to the Incoming context. Use the Incoming context to define how the DIVA LAN ISDN Modem handles incoming data calls.

DIAL

Valid context: *Profile/PPP*

Dials out using the phone numbers in the current profile.

HANGUP

Valid context: *Profile/PPP*

Hangs up the connection established by the current profile.

Q.931

SHOW Q931 TRACE [memsize [framesize]]

Valid context: *General*

Start a Q931 trace, or display one that is already running.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN

Modem. Range: 1 to 63 KB . Default: 4 KB

framesize: The number of characters to display in each frame.

STOP Q931 TRACE

Valid context: *General*

Stops a running Q931 trace.

RIP

ENABLE RIP [V1 | V2 | V2COMPATIBLE | MERGE]

Valid context: *Profile*

Enables or disables support for RIP (routing information protocol). When enabled, the DIVA LAN ISDN Modem will exchange routing information with other devices.

V1: Supports RIP version 1.

V2: Supports RIP version 2.

V2COMPATIBLE: Supports RIP version 2 that is version 1 compatible (implies broadcasting RIP-2).

MERGE: Merge equivalent routes.

DISABLE RIP [MERGE]

Valid context: *Profile*

Disables all RIP services.

MERGE: RIP will not merge similar routes.

SHOW RIP CONFIGURATION

Valid context: *Profile*

Display RIP configuration settings.

SHOW RIP STATISTICS

Valid context: *General*

Displays RIP statistics.

SET RIP UPDATE period

Valid context: *General*

Specifies the amount of time RIP waits between sending updates to its peers.

period: Time in seconds between updates. Default 30 sec.

SET RIP POLICY {SILENT | PERIODIC}

Valid context: *Profile*

Specifies how RIP manages route updates, requests, and responses.

SILENT: RIP accepts updates from other systems, but will not respond to requests or send updates.

PERIODIC: RIP operates normally: A complete update is sent to all neighbors and all incoming requests are responded to. (LAN only)

ADD RIP REJECT ipaddr

Valid context: *General*

Adds or deletes an IP address. RIP ignores all routing information received from peers with IP address that appears in the RIP Reject table.

ipaddr: IP address of peer to ignore.

DELETE RIP REJECT ipaddr

Valid context: *General*

SHOW RIP REJECT

Valid context: *General*

Displays the RIP reject table. RIP ignores all routing information received from peers with IP address that appears in this table.

SNMP

SET SNMP NAME name

Valid context: *General*

Lets you assign a name to the DIVA LAN ISDN Modem. This information can be retrieved by SNMP agents. Range: 1 to 39 alphanumeric characters.

SET SNMP DESCRIPTION name

Valid context: *General*

Lets you associate a description with the DIVA LAN ISDN Modem. This information can be retrieved by SNMP agents.

SET SNMP CONTACT name

Valid context: *General*

Lets you store the email address of the person responsible for the DIVA LAN ISDN Modem. This information can be retrieved by SNMP agents. Range: 1 to 29 alphanumeric characters.

SET SNMP LOCATION name

Valid context: *General*

Lets you store a description describing the physical location of the DIVA LAN ISDN Modem. This information can be retrieved by SNMP agents. Range: 1 to 29 alphanumeric characters.

SET SNMP COMMUNITY name

Valid context: *General*

Sets the SNMP community name for the DIVA LAN ISDN Modem. The community name acts as a password controlling SNMP read and write access to all DIVA LAN ISDN Modem configuration settings. Range: 1 to 29 alphanumeric characters.

SET SNMP TRAPADDR ipaddr

Valid context: *General*

Sets the IP address of the remote station where LAN Manager will send SNMP traps. The DIVA LAN ISDN Modem supports all standard MIB II traps.

trapaddr: IP address of remote station in dotted-decimal format.

TCP

SHOW TCP STATISTICS

Valid context: *General*

Displays TCP statistics.

SHOW TCP TRACE [memsize [framesize]]

Valid context: *General*

Starts or displays a TCP trace.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN Modem. Range: 1 to 63 KB . Default: 16 KB

framesize: Number of characters to show for each frame.

STOP TCP TRACE

Valid context: *General*

Stops an active TCP trace.

TFTP

**ENABLE TFTP SERVER
DISABLE TFTP SERVER**

Valid context: *General*

Enables or disables the TFTP (Trivial File Transfer Protocol). When enabled the DIVA LAN ISDN Modem acts as a TFTP server, and can respond to upload or download requests from TFTP clients. TFTP server is disabled by default.

**GET TFTP FILE ipaddress localfn remotefn
PUT TFTP FILE ipaddress localfn remotefn**

Valid context: *General*

Download or upload a file using TFTP (trivial file transfer program).

ipaddress: IP address of the remote system.

localfn: Name of the file on the local system.

remotefn: Name of the file on the remote system.

Time Protocol

SET TIMEPROTOCOL SERVER timeServer

Valid context: *General*

Use this command to automatically update the DIVA LAN ISDN Modem internal clock using a time server.

timeServer: IP address of the time server.

SET TIMEPROTOCOL ZONE timeZoneDiff

Valid context: *General*

Specifies the difference between your time zone and Greenwich mean time (GMT) in hours. Range: -12 to 12.

ENABLE TIMEPROTOCOL DISABLE TIMEPROTOCOL

Valid context: *General*

Enables or disables the use of the time protocol. When enabled, the DIVA LAN ISDN Modem will periodically contact a time server to retrieve the correct time and set its internal clock to match.

SHOW TIMEPROTOCOL CONFIGURATION

Valid context: *General*

Display time protocol settings.

UDP

SHOW UDP STATISTICS

Valid context: *General*

Displays UDP statistics.

SHOW UDP TRACE [memsize [framesize]]

Valid context: *General*

Starts or displays an UDP trace.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN Modem. Range: 1 to 63 KB
. Default: 16 KB

framesize: Number of characters to show for each frame.

STOP UDP TRACE

Valid context: *General*

Stops an active UDP trace.

V.120

ENABLE V120 DISABLE V120

Valid context: *Profile/PPP*

Enables or disables the V.120 protocol for the current profile.

SET V120 MODE {MULTIFRAME | UNACKNOWLEDGED}

Valid context: *General*

V.120 was designed to allow non-ISDN devices to communicate with the ISDN network. The DIVA LAN ISDN Modem provides support for V.120, so you can connect with such legacy systems. For example, in many countries around the world, Compuserve offers access to their network over ISDN, using the V.120 protocol.

SET V120 MAXFRAMESIZE MaxFrameSizeTx MaxFrameSizeRx

Valid context: *General*

Defines the maximum size of a V.120 information field that the DIVA LAN ISDN will transmit or receive. Range: 16 to 260 bytes. Default: 260.

Note: If a larger frame needs to be transmitted, the DIVA LAN ISDN segments it into V.120 fragments and expects the remote device to perform re-assembly.

SET V120 WINDOWSIZE Number

Valid context: *General*

Applies to Multiframe mode only. Defines the maximum number of sequential data frames that can be outstanding (not acknowledged) at any given time. Range is 1 to 127. Default: 7

SET V120 MAXRETRY Count

Valid context: *General*

Applies to Multiframe mode only. Defines the maximum number of retransmissions of an unacknowledged frame. A frame is considered to be unacknowledged if the remote site does not send an acknowledgement before the retransmission timer (T200) expires. When the maximum number of retransmissions has been attempted, a recovery process is started which may cause the connection to be terminated.

Count: Number of retransmissions. Range 1 to 10. Default: 3.

SET V120 T200 RetransmissionDelay

Valid context: *General*

Applies to Multiframe mode only. Defines the maximum time a frame can be outstanding without an acknowledgement from the remote. When this timer expires, the frame is considered to be lost

and retransmission is attempted. Range 1 to 255 in tenths of a second. Default: 15 (1.5 seconds).

The value specified for this timer must be less than the value specified for the Link Integrity Timer (T203). Otherwise, default values are used for both.

SET V120 T203 LinkIntegrityDelay

Valid context: *General*

Applies to Multiframe mode only. Defines the maximum time the connection can remain idle without data or control frames being exchanged. This enables you to verify that the remote device is still online and operational, so you do not maintain the link for no reason. When this timer expires, a recovery process is started which may cause the connection to be terminated. Range: 1 to 255 seconds. Default: 30.

The value specified for this timer must be less than the value specified for the Idle Timer. Otherwise, default values are used for both.

SET V120 IDLETIME IdleDelay

Valid context: *General*

Defines the maximum amount of time the line can remain idle without the exchange of data, before the DIVA LAN ISDN Modem disconnects the link. This enables you to reduce your communications charges by dropping the link when no data is being transferred. Range: 0 (never disconnect, 1 to 10000 minutes. Default: 1440 minutes (24 hours).

SHOW V120 CONFIGURATION

Valid context: *General*

Displays V.120 configuration settings for the current profile.

SHOW V120 TRACE [memsize [framesize]]

Valid context: *Profile/PPP*

Starts or displays an V120 trace.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN Modem. Range: 1 to 63 KB
. Default: 16 KB

framesize: Number of characters to show for each frame.

STOP V120 TRACE

Valid context: *Profile/PPP*

Stops an active V120 trace.

V.120 Scripting

ADD SCRIPT LINE index command [argument]

Valid context: *Profile/PPP*

Adds a line to the V.120 script for the current profile. The script is executed when the DIVA LAN ISDN Modem establishes a V.120 connection.

"command" are:

ABORT: End the script.

SEND text: Send the specified text to the remote. Enter up to 33 alphanumeric characters.

WAITFOR text: Pause script execution until the specified text is sent by the remote system. Enter up to 33 alphanumeric characters.

DELAY num: Pauses script execution for the specified number of seconds. Range: 1 to 255 seconds.

TIMEOUT num: If the next script event does not complete within the time specified, the script is aborted. Range: 1 to 255 seconds.

USERNAME: Sends the username configured with SET PPP LNAME to the remote.

PASSWORD: Sends the password configured with SET PPP LPASSWORD to the remote.

DELETE SCRIPT LINE index

Valid context: *Profile/PPP*

Deletes a line from the script for the current profile.

index: Number of the line to delete. Range: 1 to 17.

SHOW SCRIPT [index]

Valid context: *Profile/PPP*

Displays any defined script lines for the current profile.

X.25

SET X25 ADDRESS localX25addr

Valid context: *Profile*

Sets the X.25 DTE address assigned to the DIVA LAN ISDN Modem. Specify up to 15 digits.

localX25addr: DTE address of the device.

SET X25 CUD callUserData

Valid context: *Profile*

Specifies the call user data the device will include when establishing an X.25 call.

callUserData: Call user data as hexadecimal digits separated by commas, colons, or hyphens. Maximum length is 16 bytes. For example: 42,07,07

SET X25 FACILITIES hexstring

Valid context: *Profile*

Sets the X.25 facilities used to establish an X.25 call with this profile.

hexstring: Encode facilities as a hexadecimal string of characters separated by commas, colons, or hyphens. Maximum length is 14 bytes. For example: 42,07,07

SET X25 LCN lcnNumber

Valid context:

Sets the lowest X.25 logical channel number (LCN) available.

LCNnumber: Logical channel number.

SET X25 MAXIDLETIME seconds

Valid context: *Profile*

Sets the maximum amount of time an X.25 connection can be idle before the DIVA LAN ISDN Modem drops the connection.

maxIdleTime: Maximum time a connection can be idle. Range: 0 (never disconnect), 1 to 600 seconds. Default: 20 seconds.

SET X25 MINCONTIME seconds

Valid context: *Profile*

Sets the minimum amount of time an X.25 connection must stay connected.

minConnectionTime: Minimum time an X.25 connection must stay connected. Range: 0 to 1800 seconds. Default: 30 seconds.

SET X25 NUMSVC svc

Valid context: *General*

Sets the number of X.25 SVCs (switched virtual circuits) supported for X.25 communications over the D-channel.

SET X25 PACKETSIZE default maximum

Valid context: *General*

Sets the default and maximum X.25 packet sizes supported for X.25 communications over the D-channel.

default: Default packet size. Range: 64 to 1024 bytes. Default: 128 bytes.

maximum: Maximum packet size. Range: Default packet size - 1024 bytes.

Default: 256 bytes.

SET X25 REMOTE x25addr

Valid context: *Profile*

Only required if this profile uses AO/DI. Specifies the remote X.25 address the DIVA LAN ISDN Modem calls to establish a connection on the D-channel. Enter up to 15 digits for the address.

SET X25 VERSION {1984 | 1988}

Valid context: *General*

Sets the version of the X.25 protocol to use.

1984: ITU recommendation 1984.

1988: ITU recommendation 1988.

SET X25 WINDOWSIZE default maximum

Valid context: *General*

Sets the default and maximum X.25 window sizes supported for X.25 communications over the D-channel.

default: Default window size. Range: 1 to 7. Default: 2.

maximum: Maximum window size. Range: Default window size - 7. Default: 7.

SHOW X25 STATUS

Valid context: *Profile*

Display X.25 status.

SHOW X25 TRACE [memsize [framesize]]

Valid context: *Profile*

Starts or displays an X.25 trace.

memsize: The amount of RAM reserved to store the trace on the DIVA LAN ISDN Modem.

Range: 1 to 63 KB . Default: 16 KB

framesize: Number of characters to show for each frame.

STOP X25 TRACE

Valid context: *Profile*

Stops an active X.25 trace.

SHOW X25 CONFIGURATION

Valid context: *Profile*

Display X.25 configuration settings.

Regulatory Information

This appendix provides regulatory information.

This equipment displays the CE 168 **X** mark to show that it has been tested and found to be in full compliance with the requirements of the Terminal Equipment, EMC and Low Voltage Directives (91/263/EEC, 89/336/EEC and 72/23/EEC, as amended by Directive 93/68/EEC).

The CE 168 **X** mark signifies that this product is approved for connection to ISDN within the EU and EEA.

Safety Status: TNV-1

No voltages within this equipment exceed SELV voltages. The ISDN port has TNV-1 Safety Status and all other interconnection points and ports are SELV.

This equipment draws power from an external power supply which has been separately approved. It does not draw power from the ISDN network.

Power Consumption

Check that power supply will not be overloaded. Maximum power consumption of the unit is stated on. The user must ensure that the total power drawn by the host computer, the DIVA LAN ISDN Modem, and any other peripherals, does not exceed the capability of the host power supply unit.